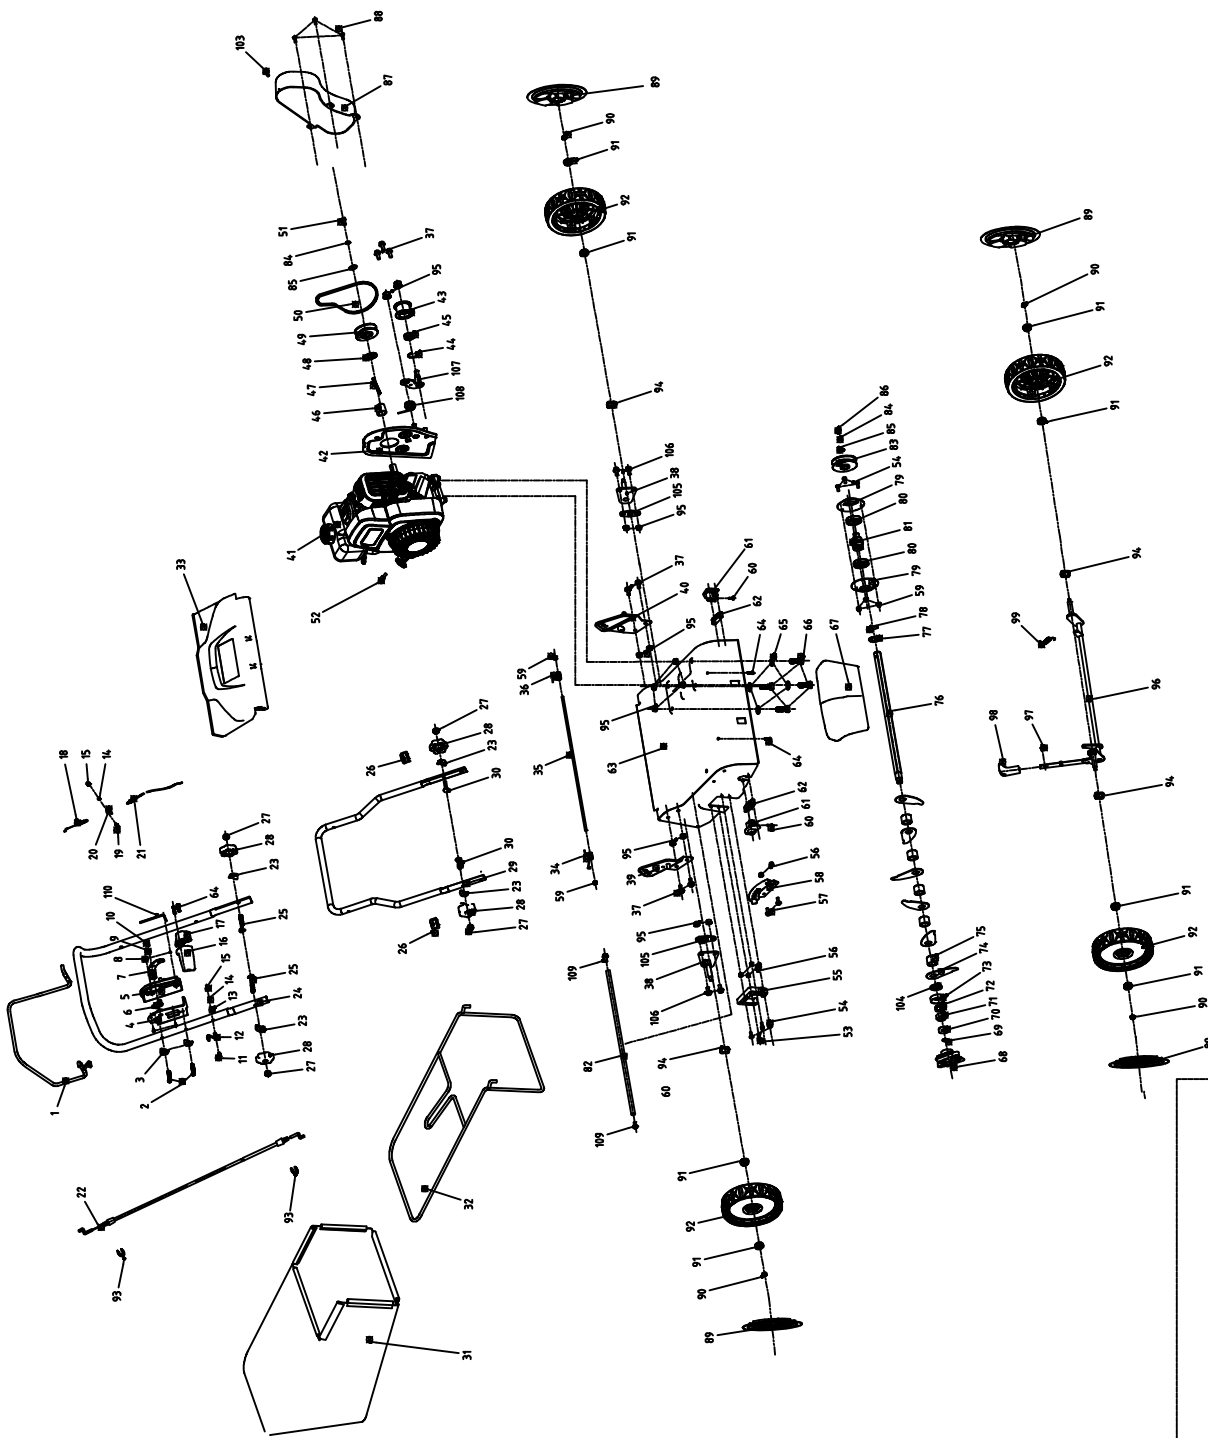


REF.MILLASUR	DESCRIPTION	PART NUMBER
ES240T-01	DRIVE CONTROL	(2-10)
ES240T-02	RIGHT HANDLEBAR HITCH	16
ES240T-03	LEFT HANDLEBAR HITCH	17
ES240T-04	RETAINING CABLE	18
ES240T-05	CABLE RETAINING PIN	19
ES240T-06	SWITCH RETAINING PLATE	20
ES240T-07	BREAK CABLE	21
ES240T-08	BLADES DRIVE CABLE	22
ES240T-09	UPPER HANDLEBAR TIGHTENING LEVER	(23-25-27-28)
ES240T-10	LOWER HANDLEBAR TIGHTENING LEVER	(23-27-28-30)
ES240T-11	COLLECTION BAG	31
ES240T-12	COLLECTION FRAME	32
ES240T-13	COLLECTION COVER	33
ES240T-14	RIGHT SPRING PICKUP COVER	34
ES240T-15	PICKUP COVER SHAFT	35
ES240T-16	LEFT SPRING PICKUP COVER	36
ES240T-17	REAR AXLE	38
ES240T-18	RIGHT HANDLEBAR SUPPORT	39
ES240T-19	LEFT HANDLEBAR SUPPORT	40
ES240T-20	TENSIONER FIXING PLATE	42
ES240T-21	TENSIONER PULLEY	43
ES240T-22	BEARING 6900-2Z TENSIONER PULLEY	45
ES240T-23	CRANKSHAFT KEY 4.77X4.77X24MM	47
ES240T-24	MOTOR OUTPUT PULLEY	49
ES240T-25	BELT V13-620	50
ES240T-26	CRANKSHAFT SCREW 5/16	51
ES240T-27	BLADE SHAFT SUPPORT	55
ES240T-28	HEIGHT ADJUSTMENT	58
ES240T-29	FRONT AXLE SEAT	61
ES240T-30	FRONT AXLE SEAT HITCH	62
ES240T-31	CHASSIS	63
ES240T-32	COVER	67
ES240T-33	COMPLETE BLADE AXIS	(68-83)
ES240T-34	WHEEL AXLE ASSEMBLY	81
ES240T-35	STRAP COVER	87
ES240T-36	STRAP COVER TIGHTENING KNOB	88
ES240T-37	WHEEL CAPS	89
ES240T-38	WHEEL BEARING	91
ES240T-39	FULL WHEEL	92
ES240T-40	WHEEL SUPPORT WASHER	94
ES240T-41	FRONT WHEELS AXLE	96
ES240T-42	AXLE LEVER HEIGHTS	98
ES240T-43	FRONT AXLE SPRING	99
ES240T-44	AERATOR SHAFT COVER	100
ES240T-45	AERATOR CLAW	101
ES240T-46	AERATOR SHAFT BASE	102
ES240T-47	BLADE SUPPORT	104
ES240T-48	REAR AXLE SUPPORT PLATE	105
ES240T-49	TENSIONER PULLEY SHAF	107
ES240T-50	BELT TENSIONER AXLE SPRING	108
ES240T-51	COMPLETE AERATOR SHAFT	(68-102)
ES240T-MOTOR	ENGINE LC1P65F 166CC	41