
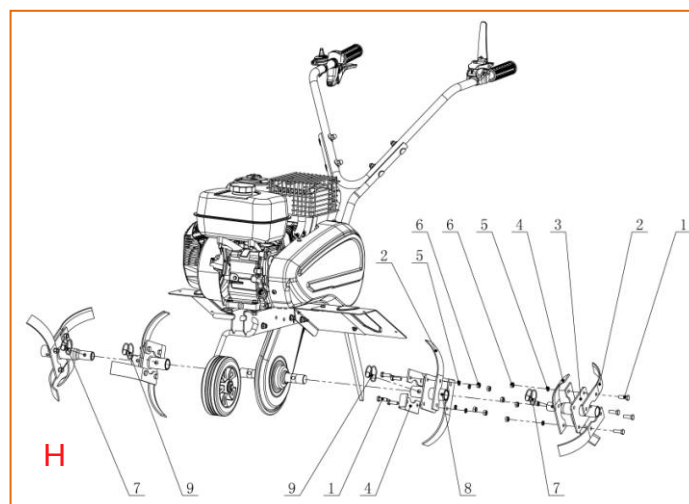
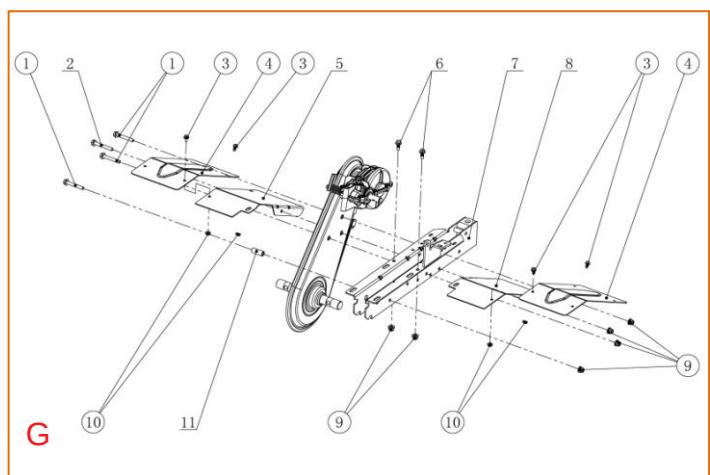
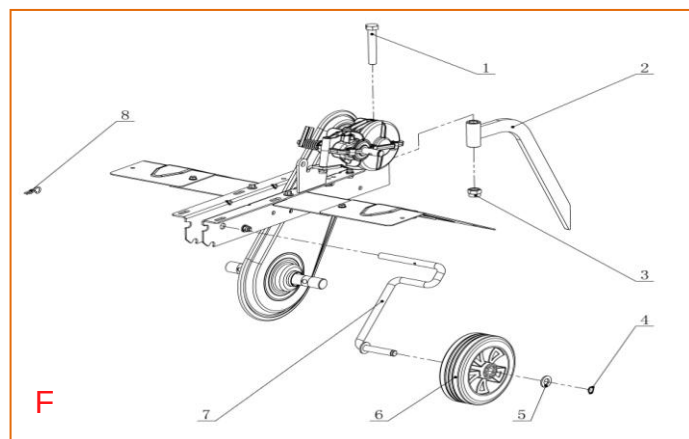
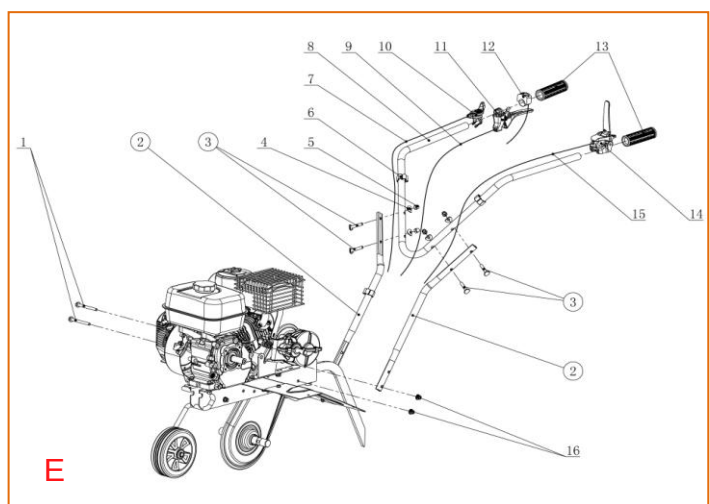
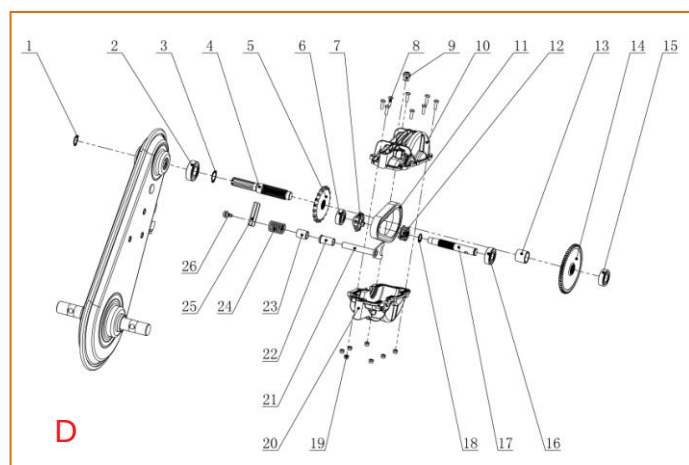
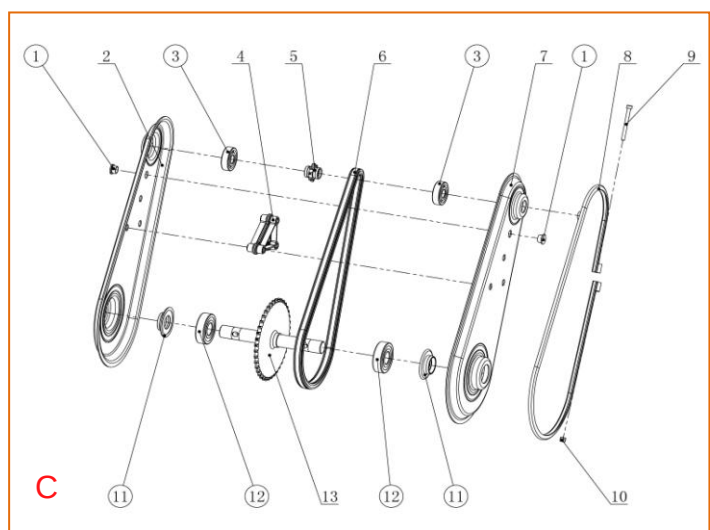
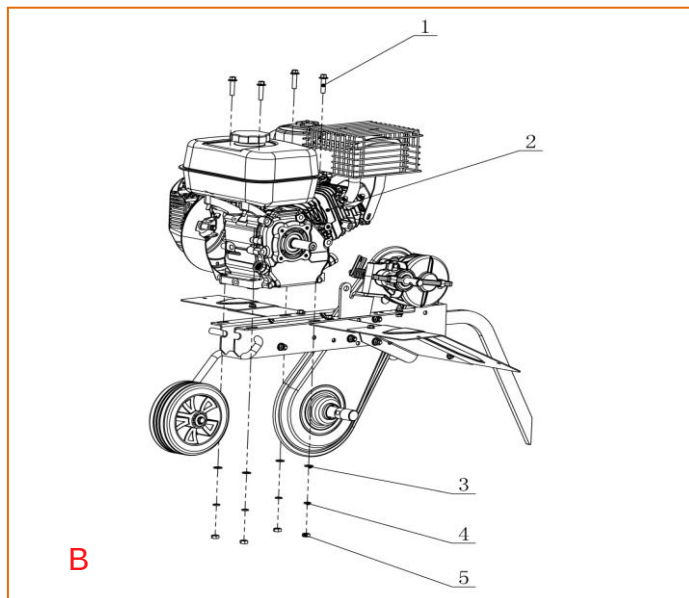


MC200

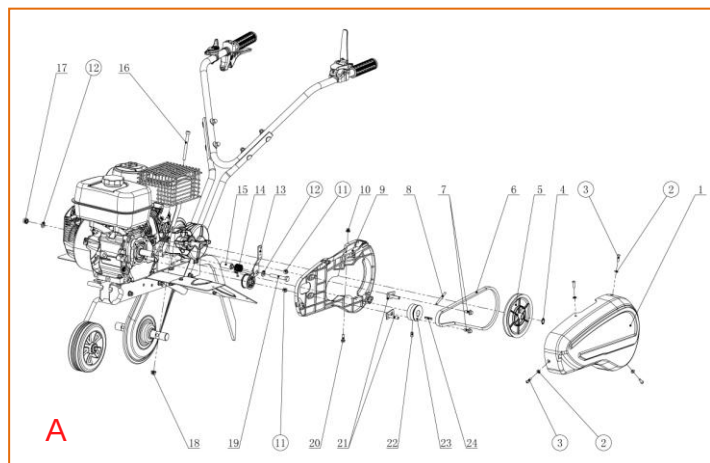

REF.MILLASUR	DESCRIPTION	PART NUMBER
MC200-01	ENGINE OUTPUT PULLEY DIAM. 20mm with key	A-23
MC200-02	OUTER BLADE SHAFT	H-3
MC200-03	FULL GEARBOX	C-COMplete
MC200-04	FULL REVERSE GEARBOX	D- (2-26)COMPLETE
MC200-05	GEARBOX OIL COVER	C-1
MC200-06	RIGHT GEARBOX COVER	C-2
MC200-07	CHAIN GUIDE GEARBOX	C-4
MC200-08	GEARBOX INPUT PINION	C-5
MC200-09	GEARBOX CHAIN	C-6
MC200-10	LEFT COVER GEARBOX	C-7
MC200-11	CLOSING COVER GEARBOX	C-8
MC200-12	GEARBOX OUTPUT SHAFT SEAL	C-11
MC200-13	GEARBOX OUTPUT PINION SHAFT	C-13
MC200-14	INVERTER BOX INPUT SHAFT	D-4
MC200-15	INVERTER BOX INPUT SHAFT PINION	D-5
MC200-16	SMALL PINION GEARBOX	D-7
MC200-17	OIL CAP INVERTER BOX	D-9
MC200-18	INVERTER BOX TOP COVER	D-10
MC200-19	REVERSING CHAIN BOX	D-11
MC200-20	SELECTOR SKID INVERTER BOX	D-12
MC200-21	SPACER BUSHING INVERTER BOX 20,2X25X21,9	D-13
MC200-22	BIG PINION GEARBOX	D-14
MC200-23	REVERSING GEARBOX MAIN SHAFT	D-17
MC200-24	INVERTER BOX BOTTOM COVER	D-20
MC200-25	SELECTOR SHAFT INVERTER BOX	D-21
MC200-26	SELECTOR SHAFT BUSHING INVERTER BOX	D-22
MC200-27	SELECTOR SHAFT SPACER BUSHING SELECTOR BOX	D-23
MC200-28	SELECTOR SHAFT BOX	D-24
MC200-29	CONNECTOR CABLE AXIS SELECTOR SHAFT BOX	D-25
MC200-30	OUTER MUDGUARD COVER MILLING CUTTER	G-4
MC200-31	RIGHT INNER MUDGUARD COVER	G-5
MC200-32	LEFT INNER MUDGUARD COVER	G-8
MC200-33	SUPPORT SHAFT SCREW M14x90	F-1
MC200-34	SUPPORT AXIS	F-2
MC200-35	SUPPORT AXIS NUT	F-3
MC200-36	SUPPORT WHEEL	F-6
MC200-37	SUPPORT WHEEL AXIS	F-7
MC200-38	HANDLEBAR SCREW	E-3
MC200-39	WHASER HANDLEBAR SCREW	E-4
MC200-40	HANDLEBAR SCREW NUT	E-5
MC200-41	THROTTLE CABLE	E-7
MC200-42	INVERTER CABLE	E-9
MC200-43	THROTTLE CONTROL	E-10
MC200-44	REVERSE GEAR LEVER	E-11
MC200-45	CLUTCH CABLE	E-15
MC200-46	BELT COVER	A-1
MC200-47	LARGE BELT PULLEY	A-5
MC200-48	BELT 13X895LW	A-6
MC200-49	LARGE PULLEY PIN 6X60	A-8
MC200-50	INNER BELT COVER	A-9
MC200-51	BELT TENSIONNER WITH PULLEY	A-13
MC200-52	SPRING BELT TENSIONNER	A-14
MC200-53	BELT GUIDE	A-21
MC200-55	ENGINE OUTPUT PULLEY KEY 5X5X30	A-24
MC200-56	RIGHT BLADE	H-2
MC200-57	LEFT BLADE	H-4
MC200-58	INNER BLADE SHAFT	H-8
MC200-59	BLADE SHAFT PIER	H-9
MC200-60	FULL BLADE SET (2 SHAFTS + 16 BLADES)	H-(1-9)COMPLETE