



PN2500X爆炸图 (PN2500新款)

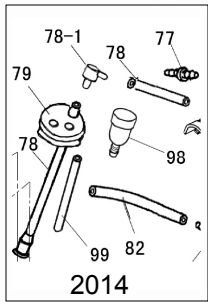

2014

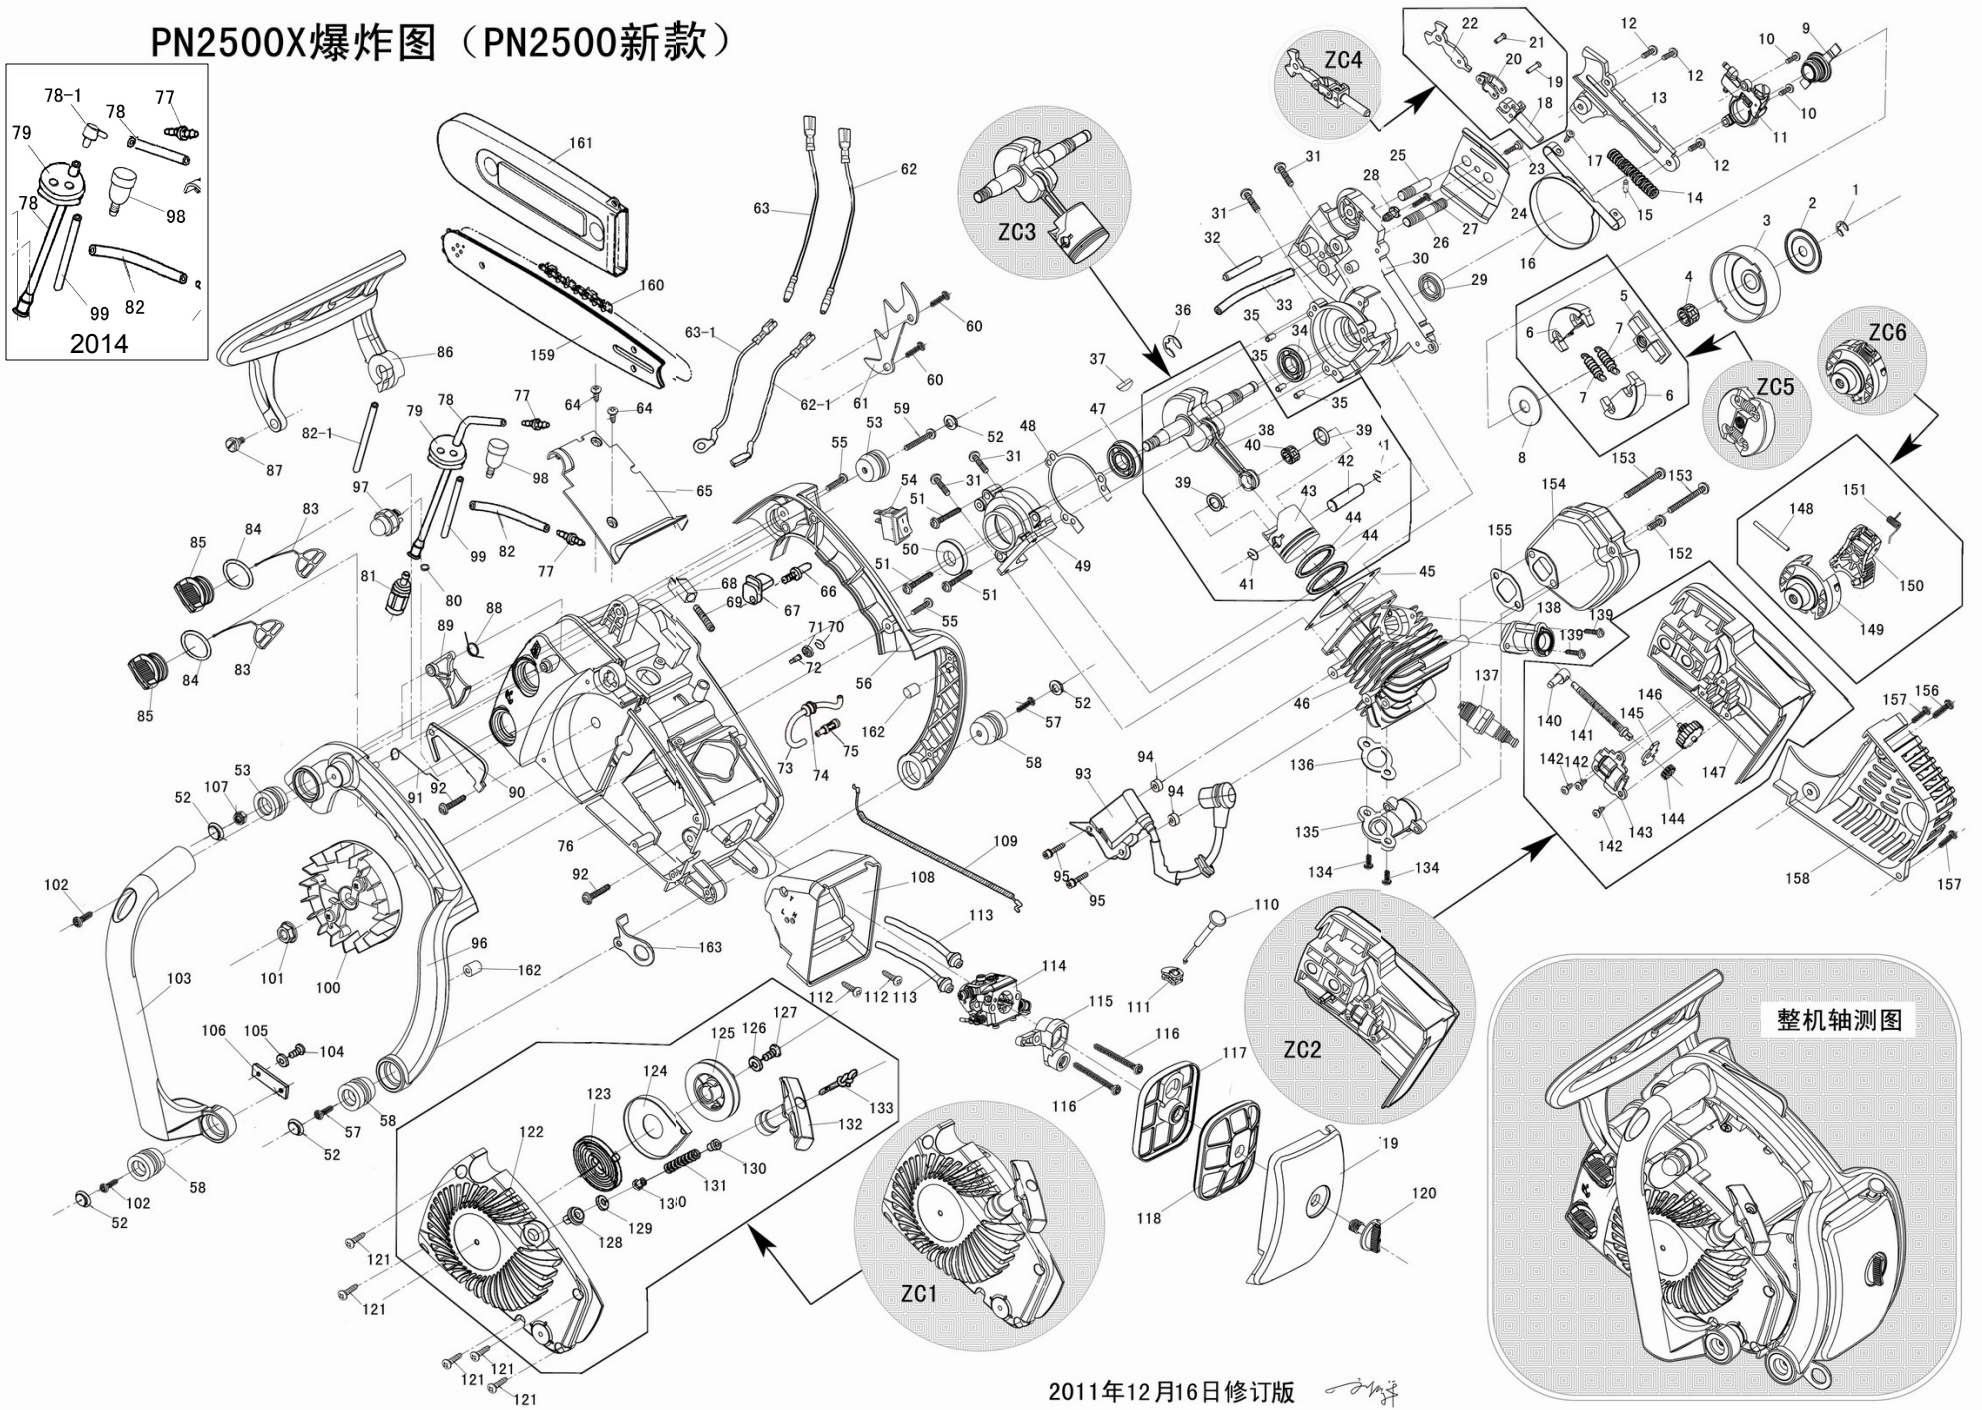

PN2500X SPARE PARTS LIST

N°	REFERENCE	DESCRIPTION	QTY/PC
1	GNNP2500X-1	ring $\Phi 6$	1
2	GNNP2500X-2	washer-clutch plate	1
3	GNNP2500X-3	clutch plate	1
4	GNNP2500X-4	bearing needle-clutch	1
5	GNNP2500X-5	clutch retainer	1
6	GNNP2500X-6	clutch support	2
7	GNNP2500X-7	clutch spring	2
8	GNNP2500X-8	washer-clutch	1
9	GNNP2500X-9	gear warm	1
10	GNNP2500X-10	screwM4X12	2
11	GNNP2500X-11	oil pump assy	1
12	GNNP2500X-12	screwM4X12	3
13	GNNP2500X-13	coverplate-brake spring	1
14	GNNP2500X-14	brake spring	1
15	GNNP2500X-15	pin $\Phi 3 \times 8$	1
16	GNNP2500X-16	brake belt	1
17	GNNP2500X-17	screwST3.5X8	1
18	GNNP2500X-18	host lever-brake	1
19	GNNP2500X-19	long connect screw $\Phi 2.5 \times 15$	1
20	GNNP2500X-20	lever connect	1
21	GNNP2500X-21	short connect screw $\Phi 2.5 \times 10$	1
22	GNNP2500X-22	vice lever-brake	1
23	GNNP2500X-23	screwST4.2X14	1
24	GNNP2500X-24	cover plate	1
25	GNNP2500X-25	screw	1
26	GNNP2500X-26	STUD screw	1
27	GNNP2500X-27	screw ST4.8X13	1
28	GNNP2500X-28	oil mouth	1
29	GNNP2500X-29	small oil seal	1
30	GNNP2500X-30	right crank case	1
31	GNNP2500X-31	screw-cylinder	4
32	GNNP2500X-32	pin	1
33	GNNP2500X-33	oil outlet pipe	1
34	GNNP2500X-34	bearing	1
35	GNNP2500X-35	pin	3
36	GNNP2500X-36	ring $\Phi 9$	1
37	GNNP2500X-37	key-flywheel	1
38	GNNP2500X-38	crank shaft assy	1
39	GNNP2500X-39	washer	2
40	GNNP2500X-40	bearing-needle	1
41	GNNP2500X-41	snap	2
42	GNNP2500X-42	pin-piston	1
43	GNNP2500X-43	piston assy	1
44	GNNP2500X-44	ring-piston	2
45	GNNP2500X-45	gasket-cylinder	1
46	GNNP2500X-46	cylinder	1
47	GNNP2500X-47	bearing	1

N°	REFERENCE	DESCRIPTION	QTY/PC
48	GNNP2500X-48	gasket-crankcase	1
49	GNNP2500X-49	left crankcase	1
50	GNNP2500X-50	left oil seal	1
51	GNNP2500X-51	screwM5X23	3
52	GNNP2500X-52	dustproof lid	5
53	GNNP2500X-53	front bumper-rubber	2
54	GNNP2500X-54	switch stop	1
55	GNNP2500X-55	screwST4.2X16	2
56	GNNP2500X-56	right handle	1
57	GNNP2500X-57	screwST4.8X16	2
58	GNNP2500X-58	pumper-rubber	3
59	GNNP2500X-59	screwM5X23	1
60	GNNP2500X-60	screwST4.8X13	2
61	GNNP2500X-61	spike board	1
62	GNNP2500X-62	stop wire1	1
62-1	GNNP2500X-62-1	stop wire2	1
63	GNNP2500X-63	earth wire1	1
63-1	GNNP2500X-63-1	earth wire2	1
64	GNNP2500X-64	screwST4.2X8	2
65	GNNP2500X-65	upcover board	1
66	GNNP2500X-66	screw	1
67	GNNP2500X-67	lump	1
68	GNNP2500X-68	spring seat	1
69	GNNP2500X-69	spring-brake	1
70	GNNP2500X-70	snap	2
71	GNNP2500X-71	sponge	2
72	GNNP2500X-72	breathing mouth	2
73	GNNP2500X-73	inlet pipe	1
74	GNNP2500X-74	seat-fuel pipe	1
75	GNNP2500X-75	oil filter assy	1
76	GNNP2500X-76	seat	1
77	GNNP2500X-77	joint-pipe	2
78	GNNP2500X-78	fuel tube	1
78-1	GNNP2500X-78-1	valve	1
79	GNNP2500X-79	seat-fuel pipe	1
80	GNNP2500X-80	snap-fuel pipe	1
81	GNNP2500X-81	oil filter	1
82	GNNP2500X-82	ouitlet pipe1	1
82-1	GNNP2500X-82-1	outlet pipe2	1
83	GNNP2500X-83	holding board	2
84	GNNP2500X-84	ring-oil cap	2
85	GNNP2500X-85	fuel cap	2
86	GNNP2500X-86	front baffle	1
87	GNNP2500X-87	screw	1
88	GNNP2500X-88	spring-trigger	1
89	GNNP2500X-89	trigger	1
90	GNNP2500X-90	trigger lever	1
91	GNNP2500X-91	spring-triger lever	1
92	GNNP2500X-92	screw	2

N°	REFERENCE	DESCRIPTION	QTY/PC
93	GNNP2500X-93	ignition assy	1
94	GNNP2500X-94	lump-ignition	2
95	GNNP2500X-95	screw	2
96	GNNP2500X-96	left handle	1
97	GNNP2500X-97	oil bubble	1
98	GNNP2500X-98	balancer	1
99	GNNP2500X-99	balance tube	1
100	GNNP2500X-100	flywheeel assy	1
101	GNNP2500X-101	screw	1
102	GNNP2500X-102	screw	2
103	GNNP2500X-103	handle	
104	GNNP2500X-104	screw	1
105	GNNP2500X-105	washer	1
106	GNNP2500X-106	connection	1
107	GNNP2500X-107	screwM5	1
108	GNNP2500X-108	seat-carburater	1
109	GNNP2500X-109	accelerator wire	1
110	GNNP2500X-110	chock knob	1
111	GNNP2500X-111	seat-chock knob	1
112	GNNP2500X-112	screwST4.2X13	2
113	GNNP2500X-113	oil pipe-carburater	2
114	GNNP2500X-114	carburaer assy国产	1
115	GNNP2500X-115	intake pipe	1
116	GNNP2500X-116	screwM5X45	2
117	GNNP2500X-117	support-air filter	1
118	GNNP2500X-118	net-air filter	1
119	GNNP2500X-119	cover-air filter	1
120	GNNP2500X-120	lock-air filter	1
121	GNNP2500X-121	screwST4.2X16	5
122	GNNP2500X-122	cover-starter	1
123	GNNP2500X-123	spring-starter	1
124	GNNP2500X-124	cover-spring	1
125	GNNP2500X-125	pully starter	1
126	GNNP2500X-126	washer-pully starterΦ5X16	1
127	GNNP2500X-127	screwST4.8X13	1
128	GNNP2500X-128	jacket-rop	1
129	GNNP2500X-129	washer-handle	1
130	GNNP2500X-130	ring-handle	2
131	GNNP2500X-131	spring	1
132	GNNP2500X-132	handle	1
133	GNNP2500X-133	ropeΦ2.9X850	1
134	GNNP2500X-134	screw	2
135	GNNP2500X-135	vent-pipe	1
136	GNNP2500X-136	gasket-vent pipe	1
137	GNNP2500X-137	spark plug	1
138	GNNP2500X-138	intake pipe	1
139	GNNP2500X-139	screwM4X14	2
140	GNNP2500X-140	pin	1

N°	REFERENCE	DESCRIPTION	QTY/PC
141	GNNP2500X-141	axle	1
142	GNNP2500X-142	screwST3.5X8	3
143	GNNP2500X-143	cover board-gearcase	1
144	GNNP2500X-144	screw chain adjusting	1
145	GNNP2500X-145	support	1
146	GNNP2500X-146	sprocket-chain adjusting	1
147	GNNP2500X-147	right side cover	1
148	GNNP2500X-148	pinΦ3X35	1
149	GNNP2500X-149	screw	1
150	GNNP2500X-150	simi-circle lock	1
151	GNNP2500X-151	spring	1
152	GNNP2500X-152	short screwM5X10	1
153	GNNP2500X-153	long screwM5X40	2
154	GNNP2500X-154	muffler assy	1
155	GNNP2500X-155	gasket-muffler	1
156	GNNP2500X-156	thick screwST4.8X16	1
157	GNNP2500X-157	thin screwST4.2X16	2
158	GNNP2500X-158	cover-muffler	1
159		bar国产	1
160		chain assy奥力根	1
161		cover-bar	1
162	GNNP2500X-162	side bumper-rubber	2
163	GNNP2500X-163	pothook	1
ZC1	GNNP2500X-ZC1	starter assy	1
ZC2	GNNP2500X-ZC2	brake assy	1
ZC3	GNNP2500X-ZC3	crankcase and piston assy	1
ZC4	GNNP2500X-ZC4	lever assy-brake	1
ZC5	GNNP2500X-ZC5	clutch assy	1
ZC6		round lock assy	1