

Ersatzteilliste Spare Part List

Holzspalter HS8T Log Splitter HS8T

N°	Nummer / Number	Beschreibung	Description	Type	Qty
1	223.983.101.001	Basis-Rahmen	Main Body Column		1
2	223.983.101.002	Hex Schraube	Hex Bolt	M8x25	4
3	223.983.101.003	Sicherungsplatte	Lock Plate		4
4	223.983.101.004	Sicherheitsmutter	Anti-loose Nut	M8	16
5	223.983.101.005	Scheibe	Pad	8	17
6	223.983.101.006	Ölauslaufventil	Release Oil Assy		1
7	223.983.101.007	Steuerventil	Valve Assy		1
8	223.983.101.008	Tisch	Working Table Assy		1
9	223.983.101.009	Rechter Handschutz	Right Baffle Assy		1
10	223.983.101.010	Rechter Holzhalter	Right Plywood		1
11	223.983.101.011	Schraube	Square Neck Bolt	M8x16	4
12	223.983.101.012	Griff	Handle Baffle		1
13	223.983.101.013	Schraube	Hex Head Bolt	M8x45	6
14	223.983.101.014	Ring	Cover Ring		2
15	223.983.101.015	Schraube	Cross Head Bolt	M6x14	4
16	223.983.101.016	Griffhülse	Handle Operation Cover		2
17	223.983.101.017	Schraube	Cross Head Bolt	M5x20	2
18	223.983.101.018	Sicherheitsmutter	Anti-loose Nut	M5	2
19	223.983.101.019	Führungsplatte	Side Protect Plate		4
20	223.983.101.020	Spaltmast	Wedge Pipe Assy		1
21	223.983.101.021	Führungsplatte 1	Bearing Plate 1		1
22	223.983.101.022	Führungsplatte 2	Bearing Plate 2		1
23	223.983.101.023	Führungsplatte 3	Bearing Plate 3		1
24	223.983.101.024	Hex Schraube	Hex Inner Bolt	M6x12	6
25	223.983.101.025	Feder	Spring		6
26	223.983.101.026	Scheibe	Pad	6	6
27	223.983.101.027	Deckel	Wedge Bolt Hole Cover		1
28	223.983.101.028	Einstellrad	Knob	M8	2
29	223.983.101.029	Deckel	Cover		1
30	223.983.101.030	Stange	Limitation Staff		1
31	223.983.101.031	Hubbegrenzer	Fleetness Limitation		1
32	223.983.101.032	Hex Schraube	Inner Hex Bolt	M10x110	2
33	223.983.101.033	Gegenmutter	Anti Nut	M10	2
34	223.983.101.034	Einstellschraube	Adjustment Nut		1
35	223.983.101.035	Mutter	Thin Nut		1
36	223.983.101.036	Bedienhebel	Operation Lever		1
37	223.983.101.037	Begrenzer	Block Limitation		2
38	223.983.101.038	Hex Schraube	Inner Hex Bolt	M8x20	4

Ersatzteilliste Spare Part List

Holzspalter HS8T Log Splitter HS8T

N°	Nummer / Number	Beschreibung	Description	Type	Qty
39	223.983.101.039	Linker Handschutz	Left Baffle Assy		1
40	223.983.101.040	Linker Griff	Left Operation Baffle		1
41	223.983.101.041	Linker Holzhalter	Left Plywood		1
42	223.983.101.042	Hex Schraube	hex Bolt	M8x70	2
43	223.983.101.043	Plastikschutz	Small Plastic Cover		2
44	223.983.101.044	Schraube	Bolt	M20x65	1
45	223.983.101.045	Gegenmutter	Anti Nut	M20	1
46	223.983.102.046	Zylinder	Piston Rod Assy		1
47	223.983.101.047	Befestigungsplatte	Switch Fix Plate		1
48	223.983.101.048	Plastikschutz	Plastic Coincidence Lug		2
49	223.983.101.049	Hex Mutter	Cross Head Bolt	M5x20	2
50	223.983.101.050	Hex Schraube	Hex Nut	M5	2
51	223.983.101.051	Gummipuffer	Differential Rubber Assy		1
52	223.983.101.052	Gummihülse	Working Rubber Assy		1
53	223.983.102.053	Platte	Plug		1
54	223.983.101.054	Schraube	Cross Bolt		4
55	223.983.101.055	Hex Mutter	Hex Nut	M4	4
56	223.983.101.056	Verbindungsrohr	Connection Pipe		1
57	223.983.102.057	Motor	Motor Assy		1
58	223.983.102.058	Ölpumpe	Gear Pump Assy		1
59	223.983.101.059	Gehäuse links	Left Upper Cover		1
60	223.983.101.060	Gehäuse rechts	Right Upper Cover		1
61	223.983.101.061	Gehäuse	Cover		1
62	223.983.101.062	Messstab	Dipstick		1
63	223.983.101.063	Ring	O-Ring Airtight Right 14x2,65		1
64	223.983.101.064	Platte	Mucus Upperplater		1
65	223.983.101.065	Hex Schraube	Inner Hex Bolt	M5x10	4
66	223.983.101.066	Stange	Vitta Assy		1
67	223.983.101.067	Schraubverschluss	Airtight Plug		1
68	223.983.101.068	Sieb	Sieve Net		1
69	223.983.101.069	Stange	Straight Assy		1
70	223.983.101.070	Halterplatte	Valve Fix Plate		1
71	223.983.101.071	Schraube	Cross Bolt	M8x12	2
72	223.983.101.072	Achse	Wheel Axle		1
73	223.983.101.073	Rad	Wheel		2
74	223.983.101.074	Pin	Pin		2
75	223.983.101.075	Dorn	Mandril		1
76	223.983.101.076	Ring	Ring		1

Ersatzteilliste Spare Part List

Holzspalter HS8T Log Splitter HS8T

