


REPAIR PARTS

GRASS CATCHER - - MODEL NUMBER CE42A

18

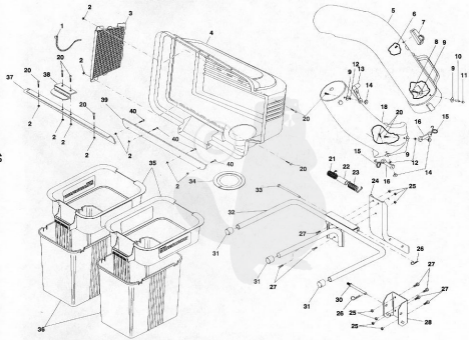

REPAIR PARTS

GRASS CATCHER- - MODEL NUMBER CE42A

KEY NO.	PART NO.	DESCRIPTION
1	7192J	Tie, Cable
2	69180	Locknut #10-24
3	127533	Screen, Cover
4	126816	Cover
5	126840	Chute, Upper
6	18021008	Screw, Special #10-14 x 1/2
7	130933	Full Bagger Indicator
8	87175	Screw, #10-24 x 1-1/8
9	19061216	Washer 3/16 x 3/4 x 16 Ga.
10	7206J	Spacer, Split
11	60867	Nut, Acorn #10-24
12	10071000	Washer, lock
13	109808X	Latch, Chute
14	2029J	Nut, Weld
15	130760	Latch, Hook
16	130759	Rubber, Latch
18	131271	Chute, Lower
20	71161010	Screw #10-24 x 5/8
21	132796	Spring, Cover L.H. (black)

KEY NO.	PART NO.	DESCRIPTION
22	133235	Spacer, Cover
23	132983	Spring, Cover R.H. (gray)
24	126813X	Post, Support
25	63124	Locknut 5/16 x 18
26	4939M	Spring, Retainer
27	74760512	Bolt, Hex 5/16-18 x 3/4
28	130889	Bracket, Mounting
30	131137	Pin, Support Post
31	134496	Cap, Tubing End
32	126919X	Bagger, Frame
33	128600	Pin, Hinge
34	127534	Gasket, Cover
35	129585	Container, Top
36	129586	Container, Bottom
37	132256	Seal, Cover
38	131859	Latch Handle, Cover
39	135495	Strip, Seal
40	71141008	Screw #10-24 x 1/2
—	104419X	Bag, 3.0 mil. 30 Gallon Trash (not included with bagger)
—	132410	Owner's Manual (English)
—	130933	Owner's Manual (French)

