


36" RIDING LAWN TRACTOR--MODEL NUMBER L 1900AT

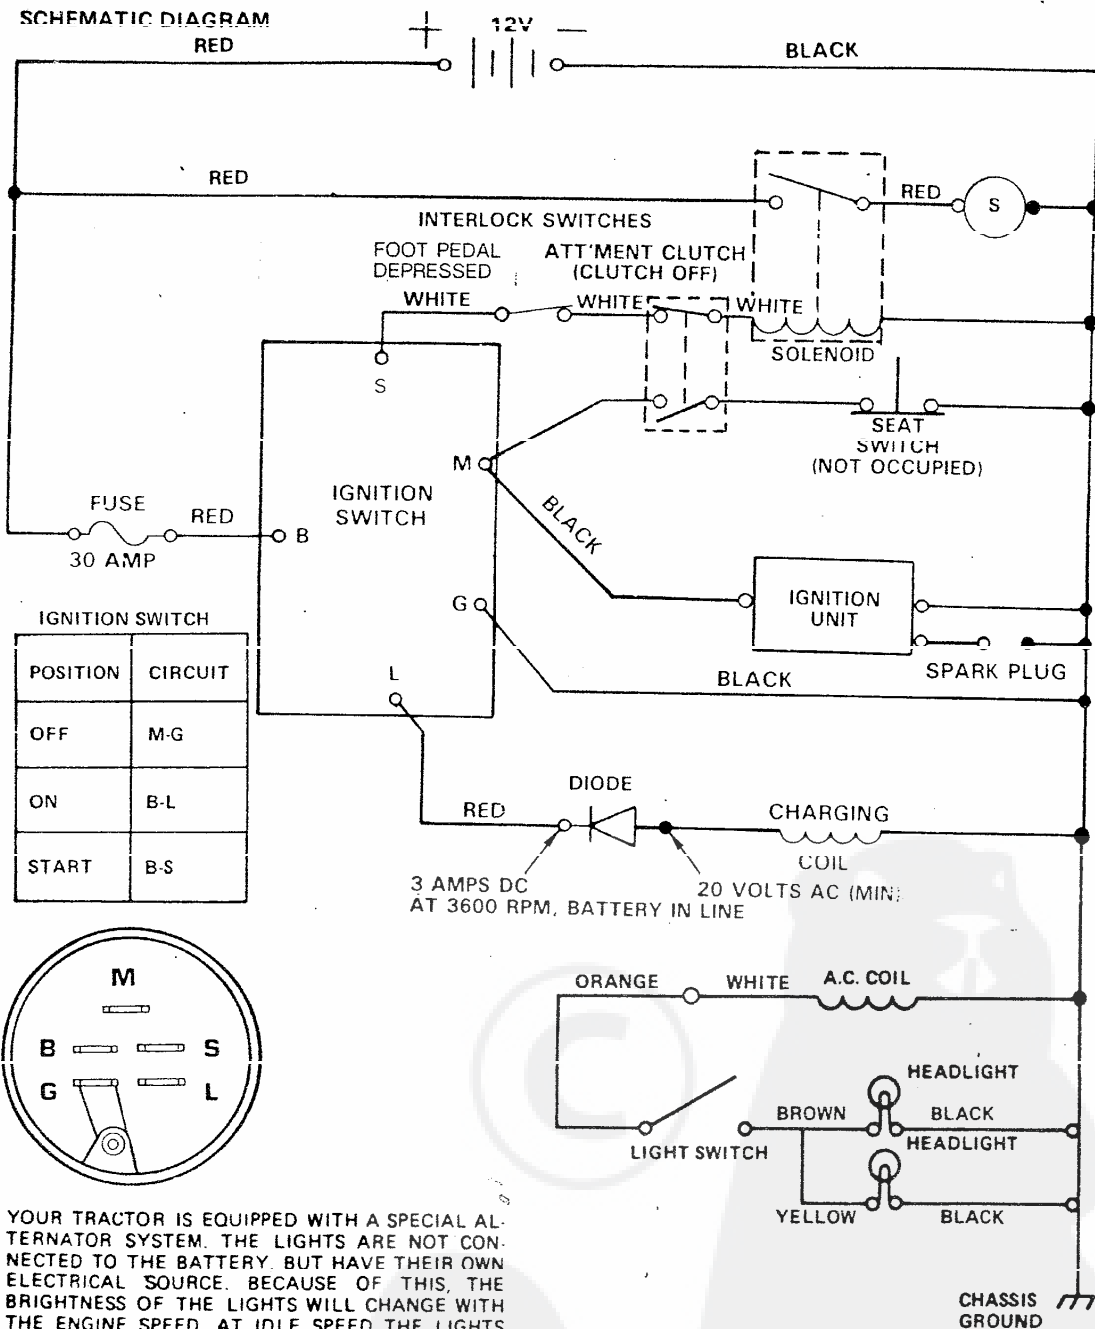

YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH THE ENGINE SPEED. AT IDLE SPEED THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

WIRING INSULATED CLIPS


If Insulated Clips and Cable Ties were removed for servicing of unit, they should be replaced to properly secure your wiring.

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

ELECTRIC & ENGINE

16

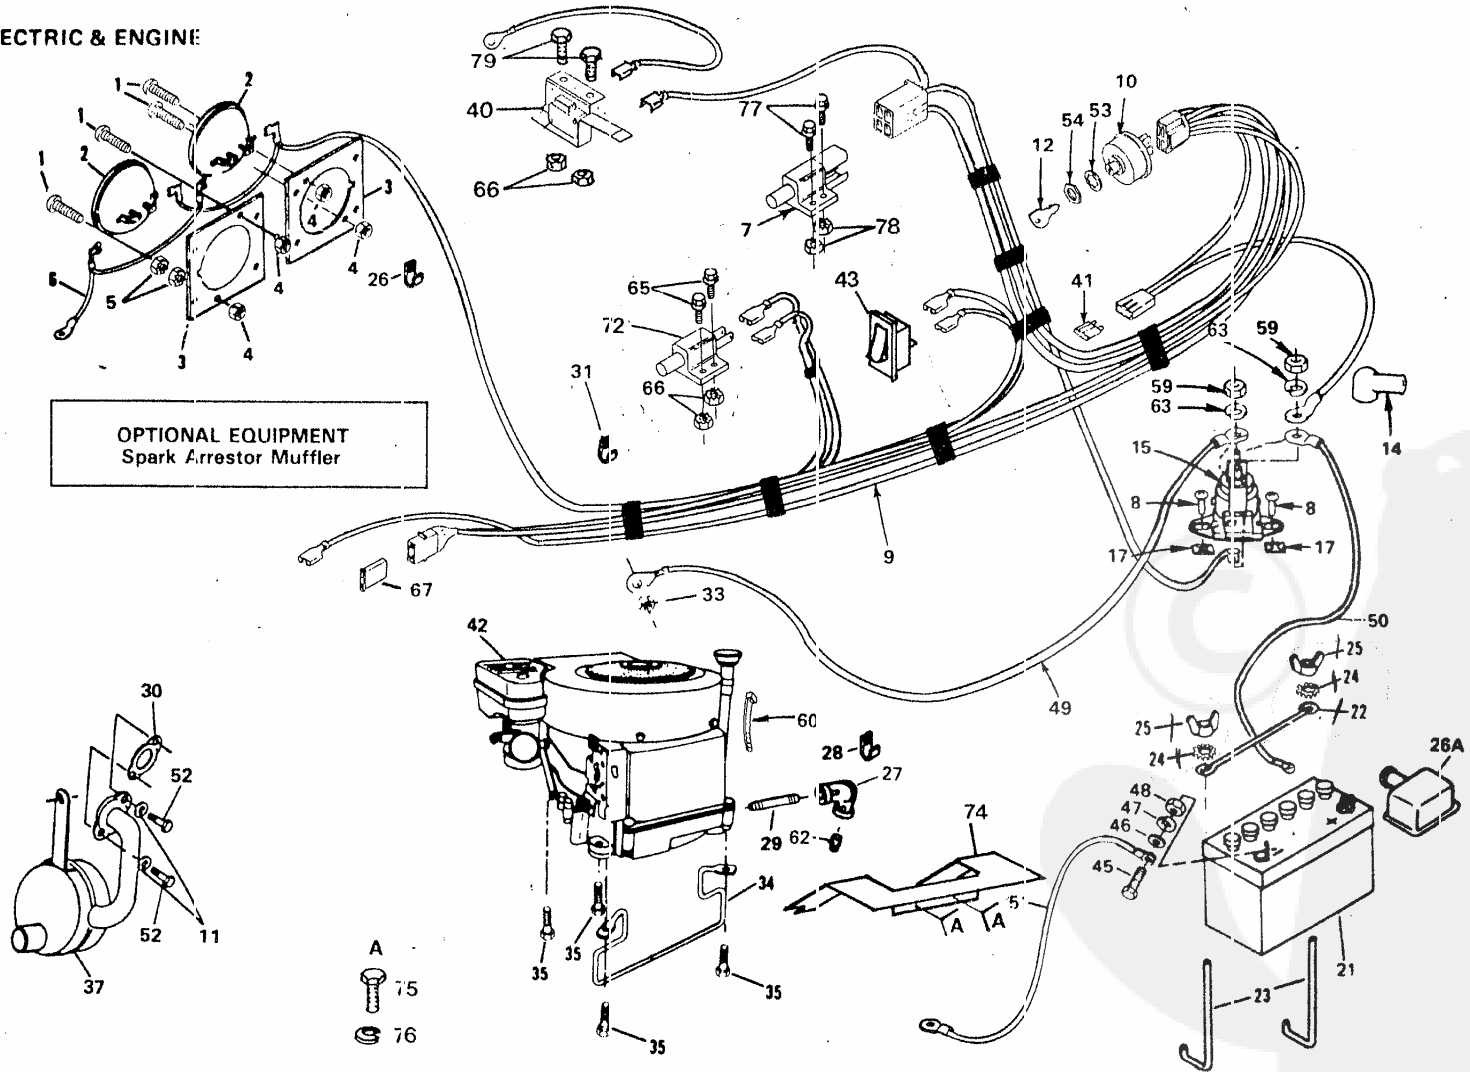

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT


ELECTRIC & ENGINE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	74291016	* Screw, Machine Phillips Truss Head No. 10-24 x 1	43	110712X	Light Switch
2	6452R	Headlight	45	74760412	* Hex Bolt 1/4-20 x 3/4
3	73025	Headlight Support	46	19091216	* Washer 9/32 x 3/4 x 16 Ga.
4	4632H	Locknut No. 10-24	47	10040400	* Lockwasher 1/4 - Heavy
5	73731000	Nut - Keps No. 10-24	48	73220400	* Hex Nut 1/4-20
6	71706	Wire Assembly	49	2957J	Cable Assembly (Solenoid to starter)
7	109553X	Switch - Interlock, Attachment clutch	50	4559J	Cable Assembly (Battery to Solemid)
8	74191008	* Screw Machine Phillips Pan Head No. 10-24 x 1/2	51	596J	Cable Assembly (Battery to Ground)
9	120298X	Wire Harness - Ignition	52	74760512	* Bolt 5/16 x 18 x 3/4
10	4406R	Ignition Switch (Inc. Key No. 12)	53	11151000	Lockwasher, Int Tooth 5/8
11	10040500	Lockwasher	54	3258J	Nut - Flat
12	7552H	Key Set	58	73350400	* Nut - Hex Jam 1/4-20
14	719J	Terminal Cover	60	719J	Tie - Cable
15	109081X	Solenoid	62	91084	Plug, Oil Drain
17	98000134	Nut, Speed No. 10-24	63	10090400	Washer - Lock 1/4
21	9272R	Battery Pack	65	71031008	Screw, Hex Washer Hd. 10-32 x 1/2
22	67187	Battery Rod	66	73951000	Nut, Keps #10-32
23	70456	Battery Bolt	67	6347R	Fuse 30 AMP
24	11030400	Lockwasher - Int./Ext. 1/4	68	74714	Exhaust Tube
25	73490400	* Wing Nut 1/4-20	69	10040600	Lockwasher, 1/4
26	2521R	Insulated Clip	72	104445X	Switch Interlock
26A	225J	Battery Terminal Cover	74	109730X	Heat Shield
27	13200300	Std. Elbow 90° 3/8 - 1& NPT	75	74760412	Bolt
28	5320R	Insulated Clip	76	10090400	Lock Washer
29	13280328	Pipe Nipple	77	74191008	Screw-Cr. Pan Mach. #10-24
30	1407J	Exhaust Gasket	78	73731000	Nut-Keps #10-24
31	6794R	Insulated Clip	79	74641008	Screw, Pan Hd. #10-32 x 1/2
33	53490	Locknut 1/4-20	80	677A822	Spark Arrestor Muffler
34	1795J	Belt Keeper	--	101539X	Sheet - Instruction, Tractor 15° Slope English
35	17490624	Screw, Hex. Hd. Thd. Flolling 3/8-.16 x 1 - 1/2	--	101572X	Sheet - Instruction, Tractor 15° Slope French
37	109560X	Muffler	--	120293X	Owners Manual (French)
40	121064X	Switch. Seat	--	120292X	Owners Manual (English)
41	108824X	Fuse - 30 Amp			
42	255707	Engine - Briggs and Stratton 10 H.P. Type No. 0111-01			

*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

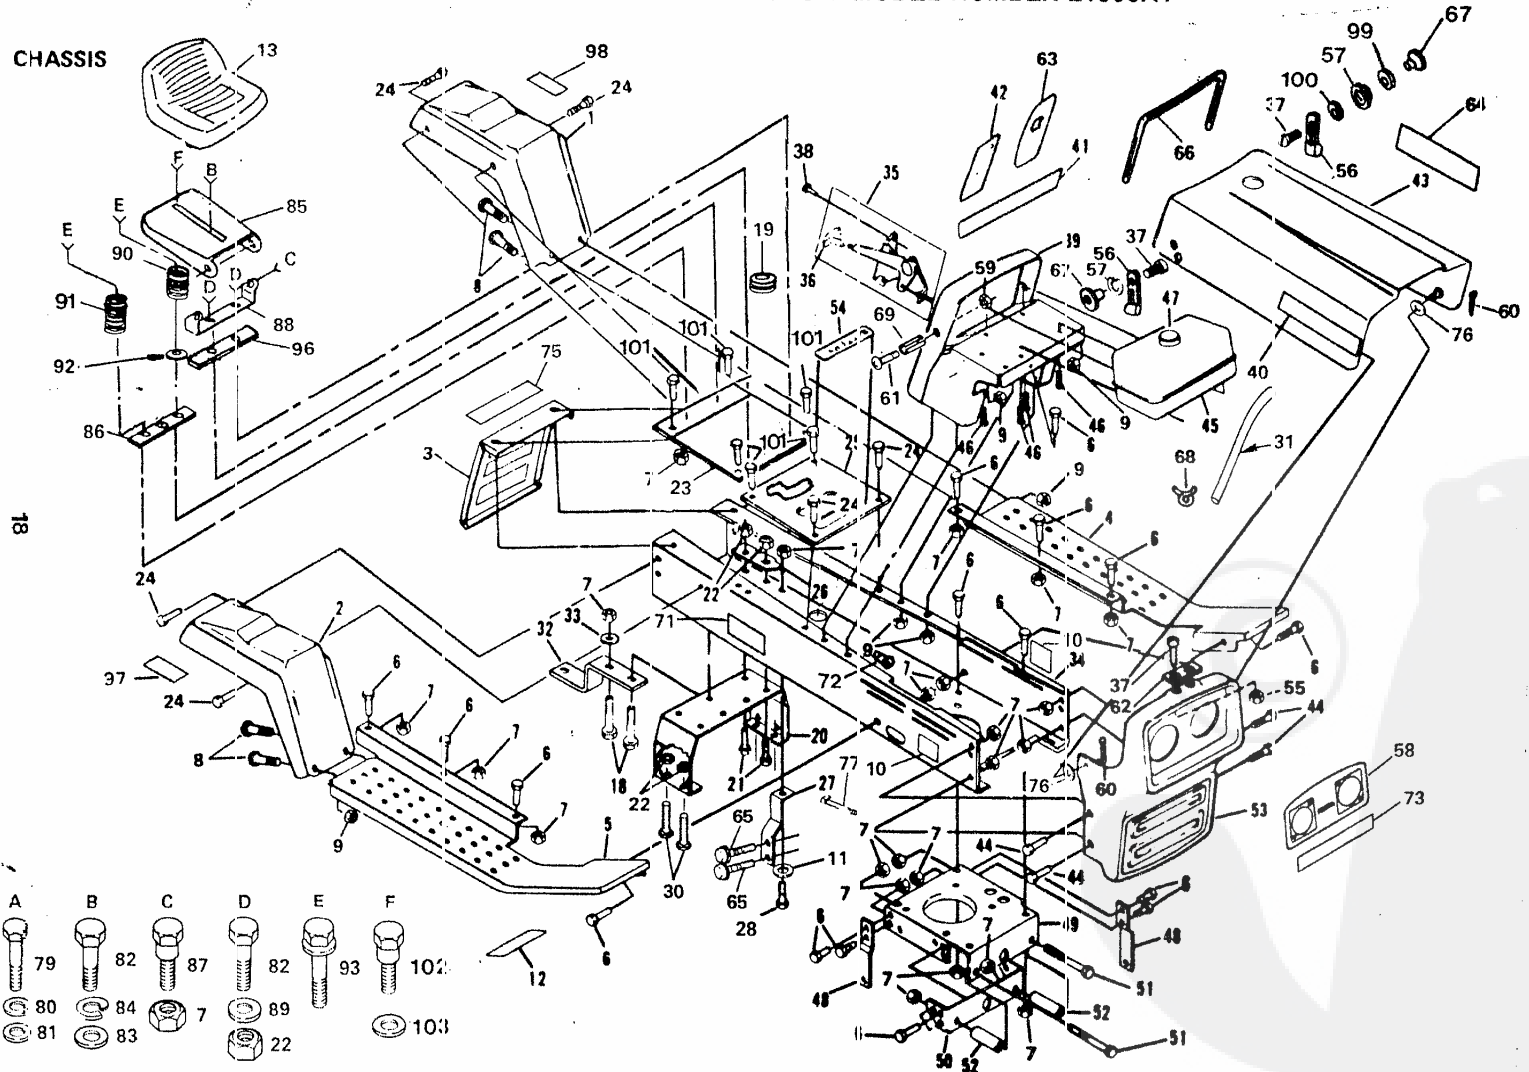


REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

CHASSIS

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	388J366	Fender - L.H.	50	71178	Rocker Bar Support
2	389J366	Fender - R.H.	51	74760544	*Bolt, Hex 5/16 - 18 x 2 - 3/4
3	120019X	Rear Cover	52	71431	Bushing
4	1539J	Foot Rest, L.H.	53	374J366	Grill Frame
5	1540J	Foot Rest, R.H.	54	74307	Battery Cap
6	74760512	*Bolt, Hex 5/16 - 18 x 3/4	55	4632H	Locknut No. 10 - 24
7	73680500	Locknut - Gripco 5/16 - 18 Gr. B	56	100225L	Hood Latch
8	74760508	Bolt, Hex 5/16 - 18 x 1/2	57	110356X	Cap - Snap
9	73510500	Nut, Keps 5/16 - 18	58	109324X	Decal - Headlight
10	120201X	Decal - H.P. and Speed	59	73731000	Nut, Keps No. 10 - 24
11	19112010	Washer 11/32 x 1 - 1/2 x 10 Ga.	60	76020312	*Cotter Pin 3/32 x 3/4
12	1133J	Decal - Clutch and Brake	61	74981020	Screw - Cross Recess, Pan Hd. Machine No. 10 - 24 x 1 - 1/4
13	110839X	Seat	62	470J	Hood Bumper
18	74780520	*Bolt, Hex 5/16 - 18 x 1 - 1/4 Gr. 5	63	120357X	Decal - Dash, L.H.
19	109641X	Grommet	64	109321X	Decal, Hood, L.H.
20	5929J	Transaxle Support	65	17490512	Screw - Hex Washer Hd. Thd. Forming Type TT 5/16 - 18 x 3/4
21	74760616	*Bolt, Hex 3/8 - 16 x 1	66	8937R	Hood Strip
22	73680600	Locknut - Gripco 3/8 - 16	67	2029J	Weldnut
23	109470X	Cover Plate	68	6999R	Hose Clamp
24	17490508	Screw - Hex Hd. Thd. Rolling 5/16 - 18 x 1/2	69	7206J	Spacer - Split
25	120171X	Chassis Cover w/Silk Screen	71	7827J	Decal - Brake, Parking
26	5930J	Plate - Stiffener	72	2751R	Clip - Fuel Line
27	71198X004	Axle Strap	73	104290X	Decal - Grill Stripes
28	74760516	*Bolt, Hex 5/16 - 18 x 1	75	109323X	Decal - Logo
30	74760644	Bolt - Hex 3/8 - 16 x 2 - 3/4	76	19111216	*Washer 11/32 x 3/4 x 16 Ga.
31	7119J	Fuel Line	77	7192J	Cable - Tie
32	71205	Toe Hitch	79	74760412	*Bolt - Hex 1/4 - 20 x 3/4
33	19122006	Washer 3/8 x 1 - 1/4 x 6 Ga.	80	10040400	*Lockwasher 1/4
34	120394X	Chassis	81	19091116	Washer 9/32 x 11/16 x 16 Ga.
35	7929J	Control Throttle (Inc. Key No. 36)	82	74780816	*Bolt, Hex 3/8 - 16 x 1
36	61159	Knob - Control	83	19171616	Washer 17/32x1x16 Ga.
37	74191008	*Screw, Pan Hd. Machine No. 10 - 24 x 1/2	84	10040600	*Washer - Lock 1/2
38	17720408	Screw, Hex Washer Hd. Thd. Cutting 1/4 - 20 x 1/2 Type 23	85	121069X	Pan, Seat
39	120016X	Dash Weldment	86	109474X	Plate, Seat, Reinforcement
40	109322X	Decal - Hood, R.H.	87	105529X	Bolt - Shoulder 5/16 - 18
41	1136J	Decal - Dash, Instructions	88	105513X	Bracket - Pivot, Seat
42	1135J	Decal - Dash, Controls	89	19131210	Washer 13/32 x 3/4 x 10 Ga.
43	104355X366	Hood Weldment	90	121068X	Spring - Compression L.H.
44	98000131	Screw, Hex Washer Hd. Mach. 5/16 - 18 x 3/4	91	121067X	Spring Comp. RH
45	73427	Fuel Tank	92	120609X	Washer
46	17760412	Screw, Truss Hd. Phillips Thd. Cutting 1/4 - 20 x 3/4 Type 23	93	17490612	Bolt
47	74145	Fuel Cap	95	109867X	Spring, Compression
48	71190	Brake Rod Bracket	96	120033X	Spacer, Pivot
49	1839J	Engine Base	97	110129X	Decal Caution
			98	110327X	Decal Caution (French)
			99	110357X	Washer - Snap Cap
			100	19060716	Washer 3/16 x 7/16 x 16 Ga.
			101	17490512	Screw-Hex Wash. Thr. Roll 5/16-18 x 3/4
			102	121094X	Shoulder Bolt
			103	19151616	Washer 15/32 x 1 x 8 Ga.

*STANDARD HARDWARE PURCHASE LOCALLY

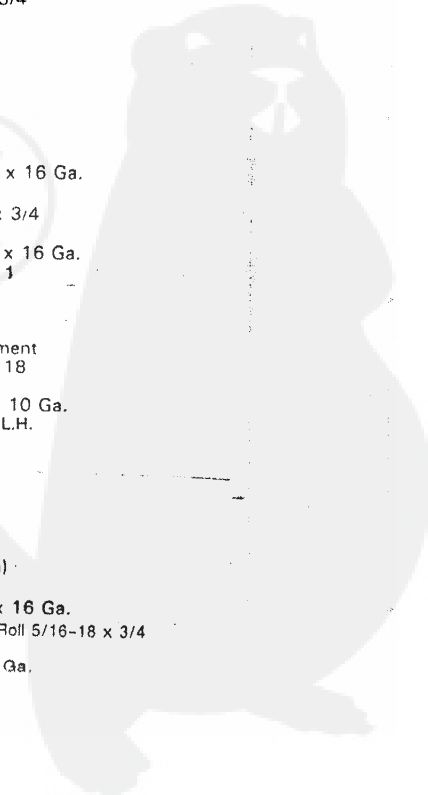


REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

CLUTCH-BRAKE DRIVE

20

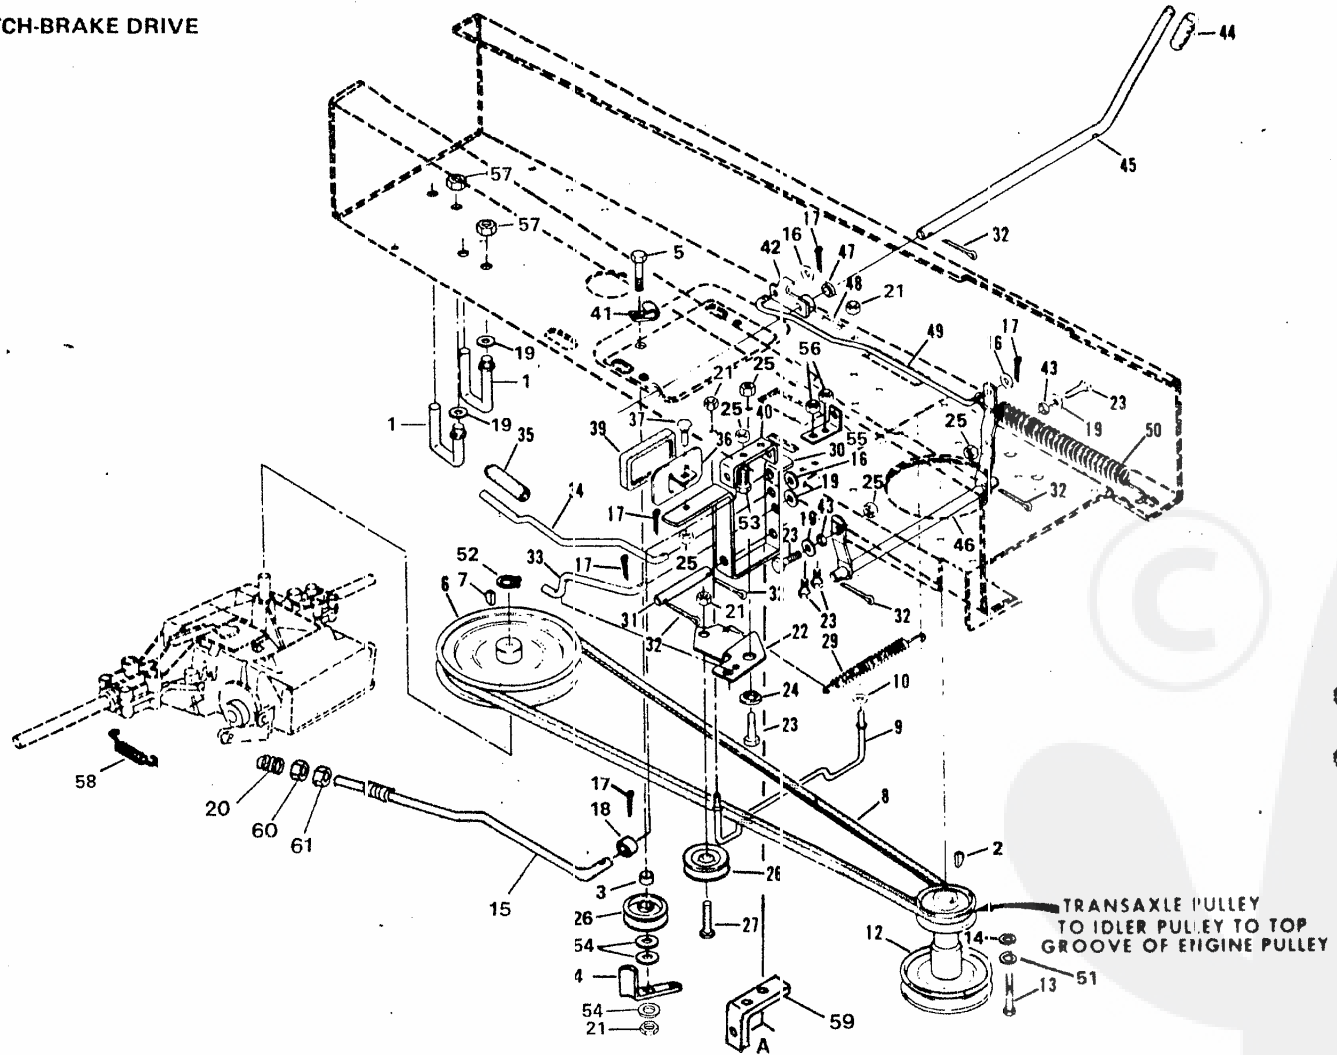

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

CLUTCH-BRAKE & DRIVE


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	5942J	Belt Guide	32	76020413	*Cotter Pin 1/8 x 1
2	65053	Woodruff Key #6	33	74419	Clutch Rod
3	5912J	Spacer	34	373J	Parking Brake Rod
4	6278J	Keeper - Belt	35	7821J	Grip
5	74760644	Bolt, Hex 3/8 - 16 x 2 - 3/4	36	71222	Pedal Plate
6	5925J	Pulley - Transaxle	37	72140505	Bolt, Carriage 5/16 - 18 x 3/4 Gr. 5
7	2228M	Woodruff Key No. 9	39	67365	Foot Pad
8	5928J	V-Belt	40	71199	Pedal Bracket
9	71241	Mid Belt Guide	41	2751R	Clip - Fuel Line
10	19131416	Washer 13/32 x 7/8 x 16 Ga.	42	73229	Clutch Arm Assembly
12	71923	Engine Pulley	43	71195	Spacer
13	74610624	Bolt 3/8-24 x 1 3/4 Gr. 5	44	7822J	Grip
14	19122405	Washer 3/8 x 1 1/2 x 5 Ga.	45	71242	Clutch Handle
15	120297X	Brake Rod	46	71191	Clutch Arm Assembly
16	19131216	Washer 13/32 x 3/4 x 16 Ga.	47	19171616	Washer 17/32 x 1 1/2 x 16 Ga.
17	76020312	Cotter Pin 3/32 x 3/4	48	2364J	Pin, Spiral 3/16 x 1
18	71616	Spacer	49	74474	Blade Clutch Rod
19	19111216	Washer 11/32 x 3/4 x 16 Ga.	50	71248	Spring
20	106888X	Brake Spring	51	10040600	*Lockwasher Heavy 3/8
21	73680600	Nut - Crownlock 3/8 - 16	52	12000028	Retainer Ring
22	7120J	Idler Bracket	53	74780512	*Bolt, Hex 5/16 - 13 x 3/4 Gr. 5
23	74760512	*Bolt, Hex 5/16 - 18 x 3/4	54	19131210	Washer 13/32 x 3/4 x 10 Ga.
24	71202	Bushing	55	71204	Switch Bracket
25	73680500	Locknut - Gripco 5/16 - 18 Gr. B	56	73680500	Locknut - Gripco 5/16 - 18
26	67400	Fulley - Idler	57	73510500	Nut - Keps 5/16 - 13
27	74760624	*Bolt, Hex 3/8 - 16 x 1 - 1/2	58	110422X	Spring
29	2044J	Spring - Idler	59	120295X	Arm Brake
30	6048J	Foot Pedal	60	73680600	Nut, Crownlock 3/8-16 UNC
31	71223	Fedal Shaft	61	73350600	Nut, Jam 3/8-16 UNC
			62	74780512	Bolt 5/16-18 UNC X 3/4
			63	73680500	Nut, Crownlock 5/16 - 18UNC

*STANDARD HARDWARE--PURCHASE LOCALLY

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

STEERING AND WHEELS

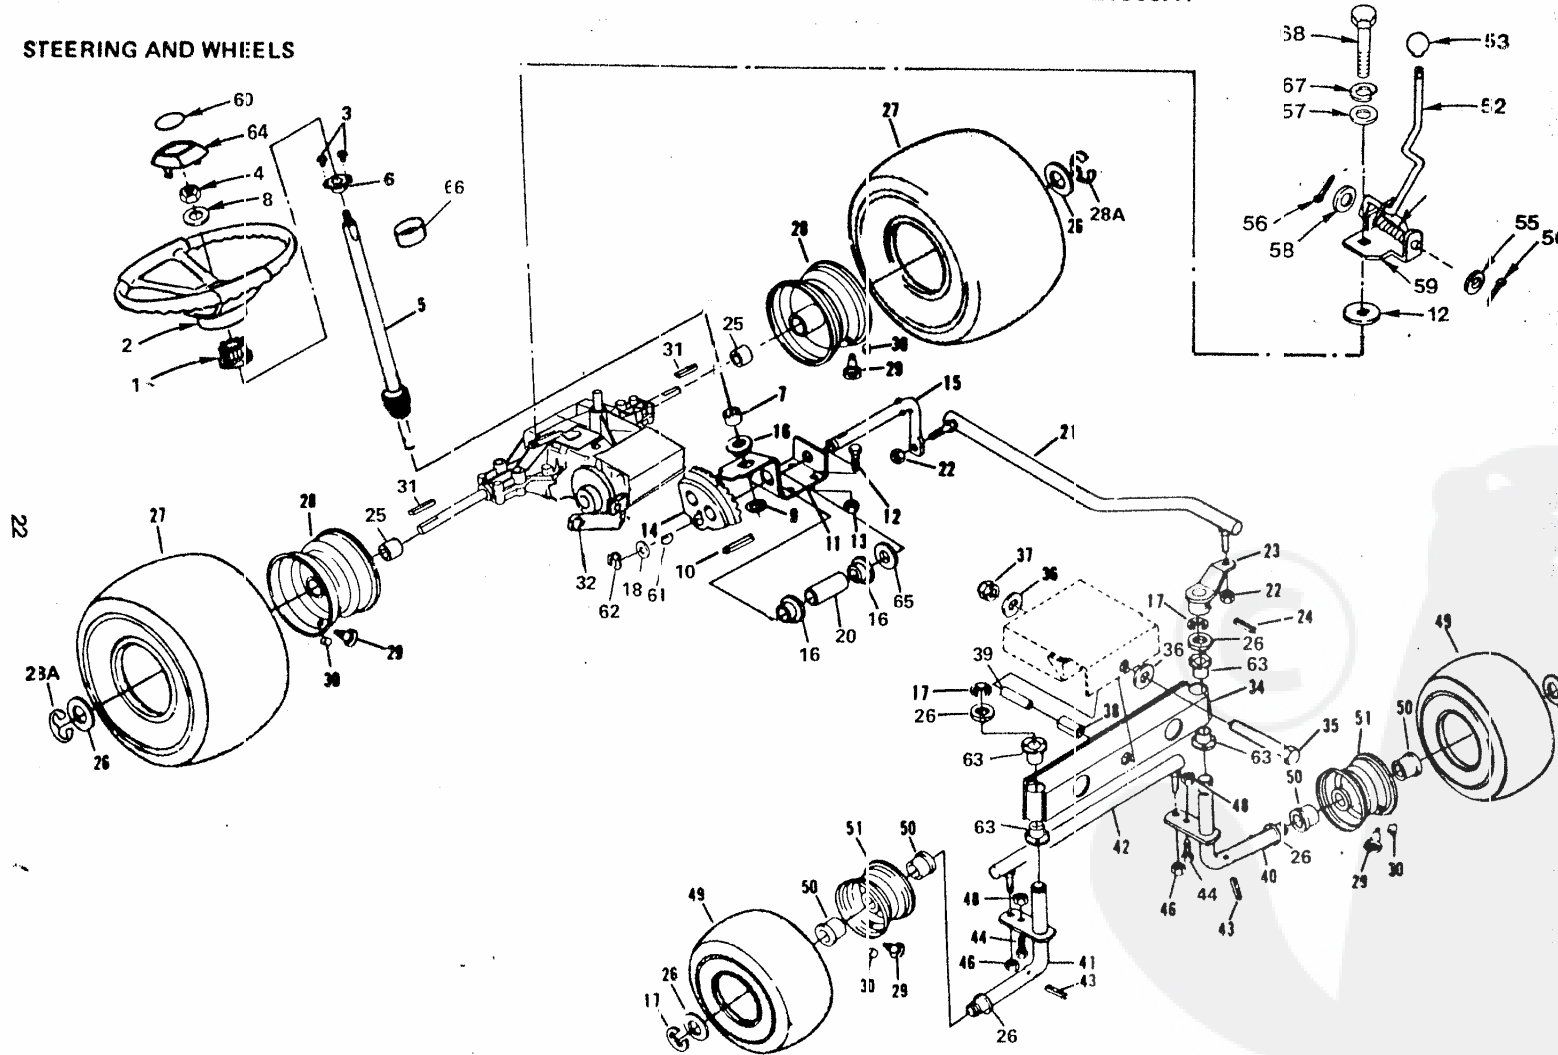


REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

STEERING AND WHEELS

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	100711L	Steering Wheel Adapter	34	104532X	Rocker Bar Assembly
2	100713N	Steering Wheel	35	74760848	Bolt, Hex 1/2 - 13 x 3
3	17211008	Hex Washer Hd. Sht. Metal Screw No. 1) - 16 x 1/2 Type AB	36	19171416	Washer 17/32 x 7/8 x 16 Ga.
4	73940800	* Nut, Hex Jam 1/2 - 20	37	73680800	Locknut - 1/2 - 13
5	677A208	Steering Shaft Assembly	38	67151	Bushing
6	1554J	Bushing - Steering	39	71188	Pivot Spacer
7	74580	Shaft Spacer	40	677A169	Spindle Assembly - L.H.
8	100712K	Washer	41	677A168	Spindle Assembly - R.H.
9	19212013	Washer 21/32 x 1 - 1/4 x 13 Ga.	42	73240	Tie Rod
10	1572H	Pin - Roll	43	9530R	Groove Pin
11	120017X	Steering Bracket ASM	44	74760612	* Bolt, Hex 3/8 - 16 x 3/4
12	74760512	* Bolt - Hex 5/16 - 18 x 3/4	46	73810500	Nut - Hex Nylon 5/16 - 24
13	73680500	Locknut - Gripco 5/16 - 18	48	73680600	Nut - Crownlock 3/8 - 16
14	101060M	Gear	49	71651	Tire (15 x 6.00 x 6)
15	101429X	Steering Rod	---	4479R	Tube - Tire (not furnished with Tractor)
16	71208	Bushing	50	625J	Bearing
17	12000029	Klip Ring	51	677A98	Rim Assembly (Inc. Key No. 50)
18	19211621	Washer 21/32 x 1 x 21 Ga. (C - 4 as required)	52	105783X	Rod, Shifter
20	101171K	Spacer - Split	53	106279X	Knob - Control
21	71219	Drag Link	54	105700X	Spring, Torsion
22	7810H	Nut, Centerlock 3/8 - 24 UNF	55	19151216	Washer 15/32 x 3/4 x 16 Ga.
23	71185	Steering Arm Assembly	56	76020416	* Cotter Pin 1/8 x 1
24	62079	Spring Pin 1/4 x 1 - 1/4	57	19091210	Washer 9/32 x 3/4 x 1) Ga.
25	2935J	Spacer	58	105701X	Washer - Shift Plate
26	19252016	Washer 25/32 x 1 - 1/4 x 16 Ga.	59	106632X	Shift Plate
27	71653	Tire (18.00 - 9.50 x 8)	60	109325X	Decal - Steering Wheel
---	4445H1	Tube - Tire (not furnished with Tractor)	61	2228M	Key - Woodruff
28	71652	Rim	62	12000040	Ring - Klip
28A	12000001	E Ring	63	3366R	Bearing
29	65139	Valve Stem	64	100710L	Insert - Steering Wheel
30	59192	Valve Cap	65	19211616	Washer 21/32 x 1 x 6 Ga.
31	2703J	Square Key 3/16 x 2	66	109420X	Sleeve, Steering
32	4150-49	Transaxle Assembly - Focte (see pages 26 and 27 for parts breakdown)	67	10040400	Washer Lock 1/4
			68	71040412	Bolt Hex 1/4-28X3/4


*STANDARD HARDWARE--PURCHASE LOCALLY

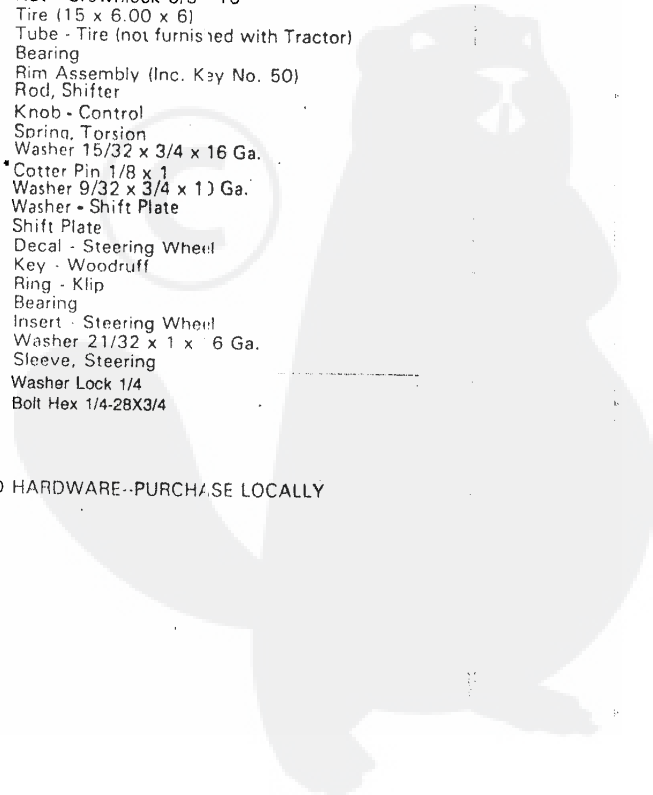

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

MOWER

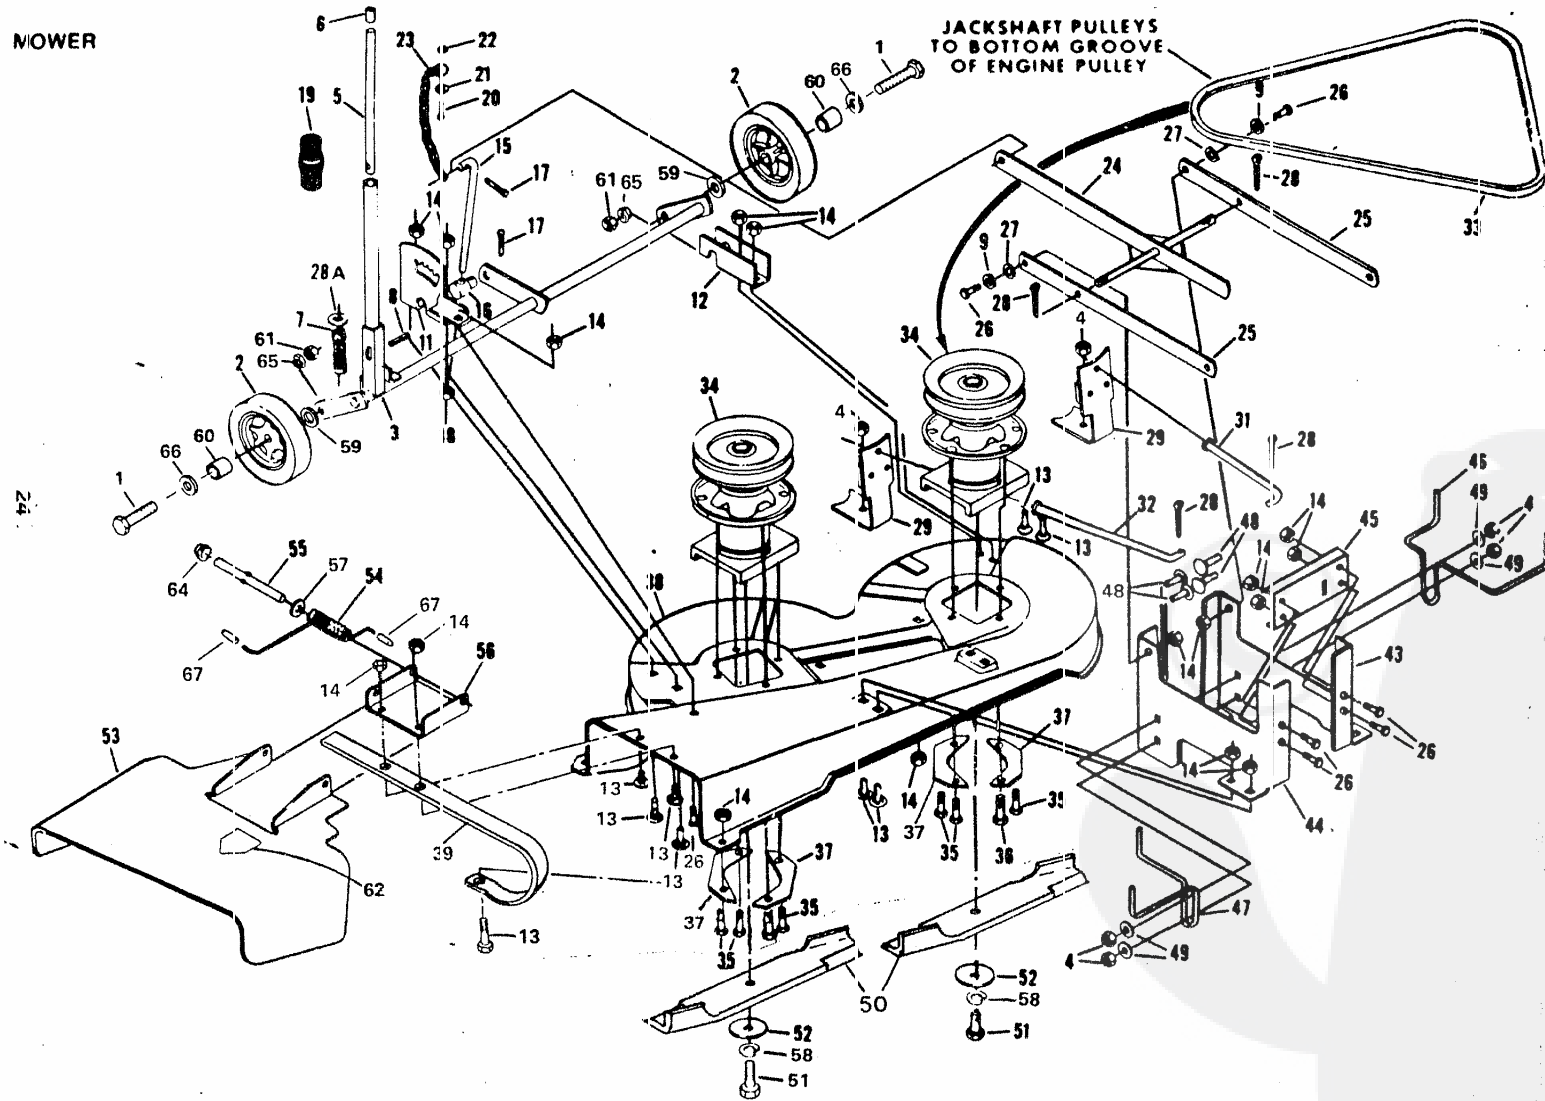


REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT

MOWER

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	74610644	Hex Bolt 3/8 - 24 x 2 - 3/4 Gr. 5	35	17490612	Screw - Hex Washer Thd. Rolling 3/8 - 16 x 3/4 Type TT
2	9536H	Gauge Wheel	36	17490620	Screw - Hex Washer Thd. Rolling 3/8 - 16 x 1 - 1/4 Type TT
3	101061N	Pivot Rod Assembly	37	100668L	Plate - Support
4	73680600	Nut - Crownlock 3/8 - 16	38	677A745	Housing w/Silk Screening
5	1663J	Flod - Plunger	39	8055J	Runner - R.H.
6	7740J	Cap - Lever Plunger	43	71276	Housing Bracket - L.H.
7	71669	Spring	44	71277	Housing Bracket - R.H.
8	667J	Pin - Drive Lock	45	71278	Channel
9	19111216	Washer 11/32 x 3/4 x 16 Ga.	46	71298	Belt Keeper - L.H.
11	72937	Quadrant Assembly	47	71299	Belt Keeper - R.H.
12	67337	Pivot Rod Support	48	72240608	*Bolt, Carriage 3/8 - 16 x 1
13	7214050E	Bolt, Carriage 5/16 - 18 x 5/8 Gr. 5	49	19131407	Washer 13/32 x 7/8 x 7 Ga.
14	7368050C	Locknut - Gripco 5/16 - 18 Gr. B	50	120262X	Blade
15	71300	Adjustment Rod	51	74610624	*Bolt, Hex 3/8 - 24 x 1 - 1/2 Gr. 5
16	71301	Turnion	52	19133808	Washer 13/32 x 2 - 3/8 x 8 Ga.
17	76020312	Cotter Pin 3/32 x 3/4	53	101025K	Deflector (Discharge Guard) w/Silk Screen
18	73800600	Locknut w/Washer 3/8 - 16 UNC	54	71526	Discharge Spring
19	1747J	Grip. Handle	55	100569K	Hinge Rod
20	74230416	*Screw, Phillips Pan Hd. Machine 1/4 - 20 x 1	56	120244X	Bracket - Deflector
21	19091616	Washer 9/32 x 1 x 16 Ga.	57	19111416	Washer 11/32 x 7/8 x 16 Ga.
22	73680400	*Nut, Hex Lock 1/4 - 20	58	10030600	Lockwasher 3/8
23	74014	Sway Chain	59	19131316	*Washer 13/32 x 13/16 x 16 Ga.
24	72915	Parallel Rod Assembly	60	7375H	Bushing
25	71297	Parallel Link	61	7810H	*Nut - Lock 3/8 - 24
26	74760512	*Bolt, Hex Head 5/16 - 18 x 3/4	62	3495J	Label - Warning CPSC
27	71616	Spacer	64	5846R	Pushnut
28	76020416	*Cotter Pin 1/8 x 3/4	65	101062K	Bushing - Height Adj.
28A	19151216	Washer 15/32 x 3/4 x 16 Ga.	66	19131614	Washer 13/32 x 1 - 1/4 x 14 Ga.
28B	72140506	*Bolt, Carriage Sh. Shoulder 5/16 - 18 x 3/4 Gr. 5	67	105304X	Cap - Sleeve
29	106577X	Brake Assembly			
31	71525	Brake Rod - L.H.			
32	71524	Brake Rod - R.H.			
33	<u>62828</u>	v Belt			
34	<u>105772X</u>	Jackshaft Assembly			

*STANDARD HARDWARE--PURCHASE LOCALLY

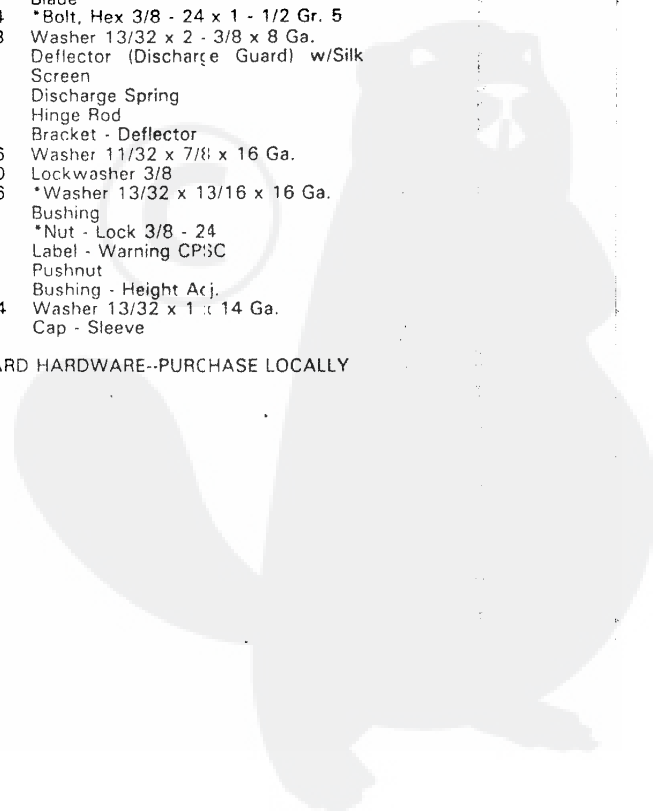


REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT
TRANSAXLE FOOTE--MODEL NUMBER 4150-49

TRANSAXLE

WARRANTY SERVICE MUST BE PERFORMED BY AN AUTHORIZED FOOTE DEALER.

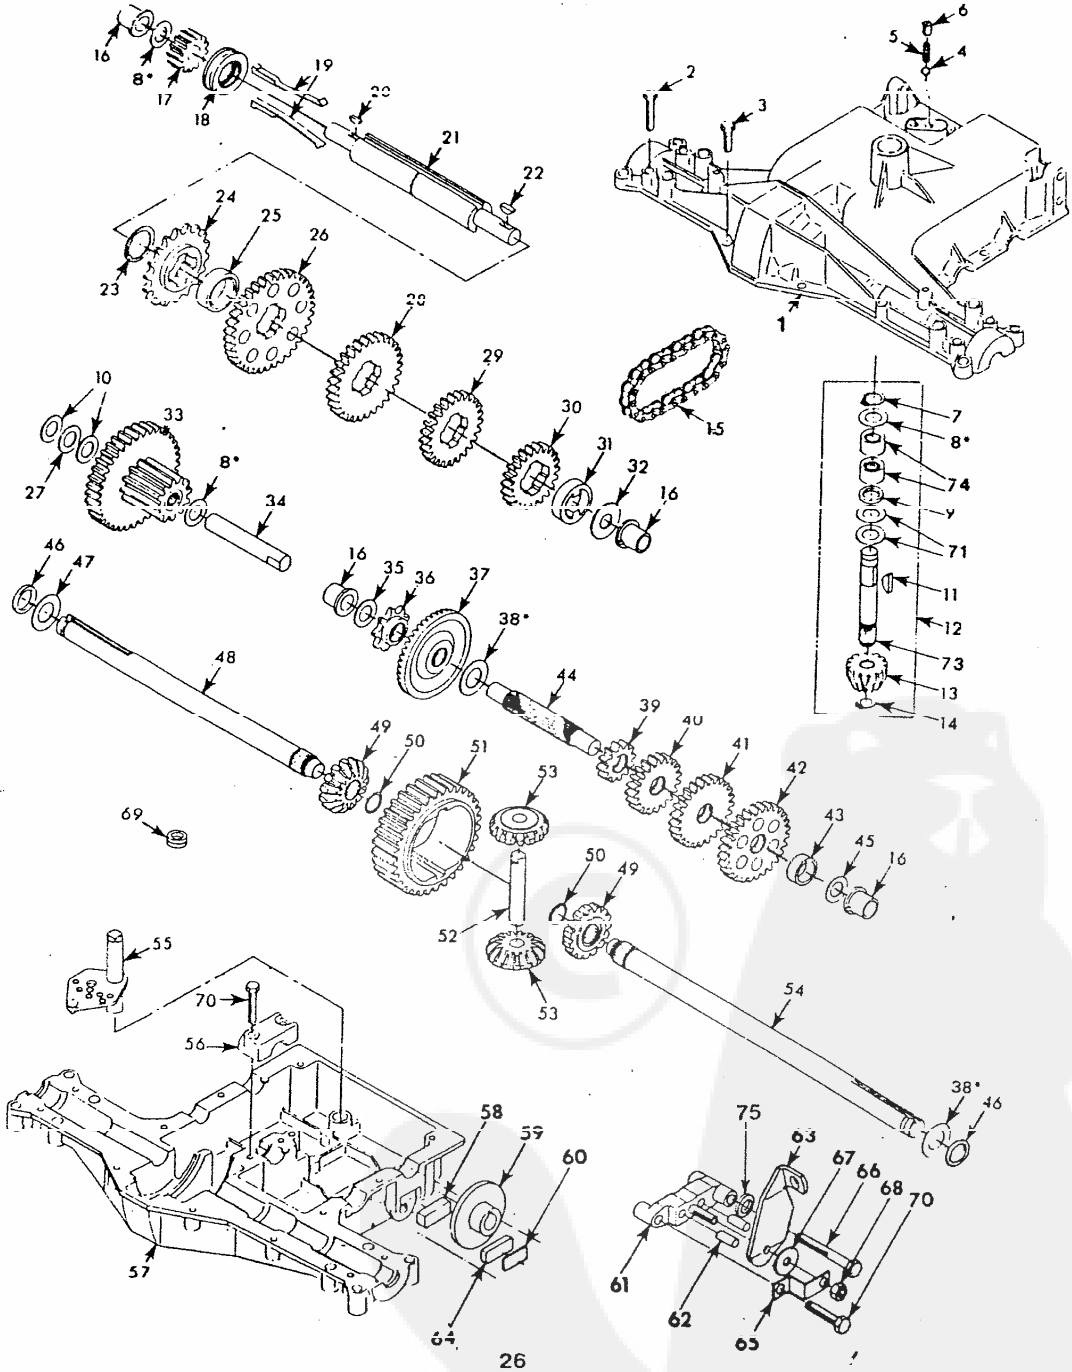

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT TRANSAXLE FOOTE--MODEL NUMBER 4150-49

TRANSAXLE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	3655-B	Housing, Upper	38	3408	Washer, Plain, .758 x 1.25 x .020
2	1360	Screw, Tapping, 1/4 - 20 x 1.31 Lg.	38	3732	Washer, Plain, .758 x 1.25 x .025
3	3396	Screw, Tapping, 1/4 - 20 x .875 Lg.	38	3184	Washer, Plain, .758 x 1.25 x .031
4	1151	Ball, Detent	38	3733	Washer, Plain, .758 x 1.25 x .035
5	3626	Spring, Detent	38	3198	Washer, Plain, .758 x 1.25 x .040
6	3623	Screw, Set	38	3734	Washer, Plain, .758 x 1.25 x .045
7	1099	Ring, Retaining	38	3735	Washer, Plain, .758 x 1.25 x .050
8	1441	Washer, Plain, .632 x 1.00 x .020	38	3736	Washer, Plain, .758 x 1.25 x .055
8	1423	Washer, Plain, .632 x 1.00 x .026	38	3180	Washer, Plain, .758 x 1.25 x .062
8	1082	Washer, Plain, .632 x 1.00 x .031	39	3646	Gear, Spur, 12T
8	1424	Washer, Plain, .632 x 1.00 x .036	40	3866	Gear, Spur, 20T
8	1068	Washer, Plain, .632 x 1.00 x .041	41	3719	Gear, Spur, 25T
8	1425	Washer, Plain, .632 x 1.00 x .046	42	3683	Gear, Spur, 31T
8	1358	Washer, Plain, .632 x 1.00 x .050	43	3714	Spacer
8	1145	Washer, Plain, .632 x 1.00 x .060	44	3657	Shaft, Drive
8	1319	Washer, Plain, .632 x 1.00 x .082	45	1145	Washer, Plain, .640 x 1.00 x .060
9	3312	O-Ring	46	3191	Seal, Felt
10	1425	Washer, Plain, .632 x 1.00 x .046	47	3184	Washer, Plain, .758 x 1.25 x .031
11	1374	Key, Woodruff, No. 9	48	3846	Axle, L.H.
12	4134	Assembly, Kit, Input Shaft (Inc's Key No's 7, 8, 9, 11, 13, 14, 73 and 2 each Key No's 71 & 74)	49	3780	Gear, Miter, 15T
13	3590	Pinion, Bevel, 14T	50	3656	Ring, Retaining
14	3624	Ring, Retaining	51	3839	Gear, Spur, 22T
15	3625	Chain, 24 Pitches	52	3840	Shaft, Cross
16	1542	Bearing, Flange	53	3781	Gear, Miter, 15T
17	3773	Gear, Spur, 14T	54	3845	Axle, R.H.
18	3631	Collar, Clutch	55	4192	Ass'y., Shifter
19	3676	Key, Clutch	56	3775	Cap., Support
20	1369	Key, Woodruff, No. 3	57	3654-B	Housing, Lower
21	3663	Shaft, Intermediate	58	3757	Puck, Friction
22	1375	Key, Woodruff, No. 61	59	3276	Disc, Brake
23	3627	Ring, Retaining	60	3758	Spacer
24	3640	Sprocket, 18T.	61	3862	Assembly, Jaw, Brake
25	3841	Spacer	62	3898	Pin, Dowel
26	3786	Gear, Spur, 37T	63	3768	Lever, Actuating
27	3422	Spacer, .630 x 1.00 x .169	64	3874	Puck, Friction
28	3867	Gear, Spur, 30T	65	3873	Bracket, Anti-Rotation
29	3783	Gear, Spur, 25T	66	3875	Screw, Tapping, 5/16 - 18 x 2.25 Lg.
30	3741	Gear, Spur, 19T	67	3760	Washer, Plain, .321 x 1.00 x .055
31	3715	Spacer 1.33 x 1.50 x .375	68	3847	Nut, Lock, 5/16 - 24
32	3628	Washer, Plain, .640 x 1.37 x .061	69	3789	V-Ring
33	4286	Assembly, Gear, Comb, 12T & 35T	70	3724	Screw, Tapping 5/16 - 18 x 1.44 Lg.
34	3658	Shaft, Idle	71	3876	Washer, Plain, .632 x 1.38 x .046
35	1959	Washer, Plain, .631 x 1.00 x .010	72	4300	Grease
36	3645	Sprocket, 9T.	73	----	Input Shaft (Order Key No. 12)
37	3853	Gear, Bevel, 42T	74	----	Bearing, Needle (Order Key No. 12)
38	3749	Washer, Plain, .758 x 1.12 x .010	75	120478	Washer, Plain, .343 x .81 x .059
38	3652	Washer, Plain, .758 x 1.12 x .015			
38	3693	Washer, Plain, .758 x 1.12 x .020			
38	3653	Washer, Plain, .758 x 1.12 x .025			


*USE IN VARIOUS COMBINATIONS TO MAINTAIN PROPER CLEARANCES
+ NOT SOLD SEPARATELY--ORDER KEY NO. 12

REPAIR PARTS

36" RIDING LAWN TRACTOR, MODEL NUMBER L1000AT
BRIGGS AND STRATTON 10 H.P. ENGINE--MODEL NO. 255707, TYPE NO. 0111-01

CYLINDER, CRANKSHAFT AND ENGINE BASE GROUP

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND WARRANTY SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

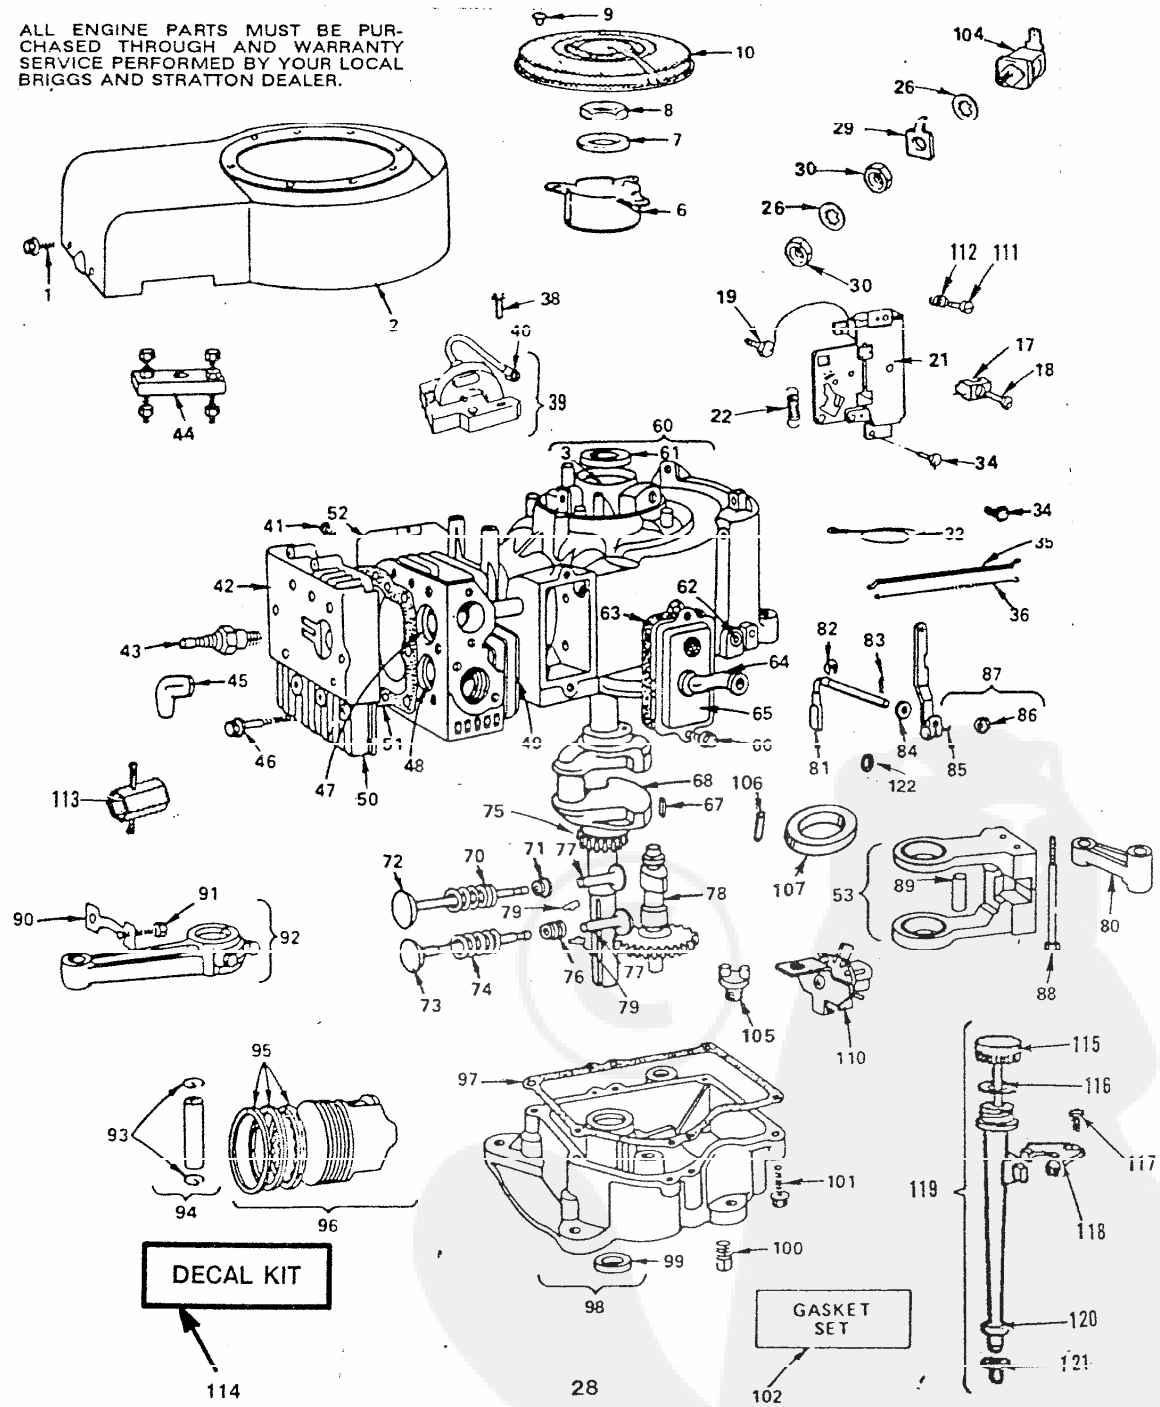

REPAIR PARTS

**36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT
BRIGGS AND STRATTON 10H.P. ENGINE--MODEL NO. 255707, TYPE NO. 0111-01**

CYLINDER, CRANKSHAFT AND ENGINE BASE GROUP

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	93158	Screw - Blower Hsg. Mtg. Sem	81	231058	Crank - Governor
2	398333	Housing - Blower	82	93307	Retainer - F-Ring
3	399265	Bushing - Cylinder	83	93306	Cotter - Hairpin
		NOTE: Requires Special Tools For Installation	84	222450	Washer - Governor Crank
6	222561	Cup - Screen Mtg.	85	92613	Bolt - Governor Lever
7	224061	Washer - Spring	86	231082	Nut - Hex 10 - 24
8	92284	Nut - Hex	87	490927	Lever Assy. - Governor (Inc. Key No.'s 85 & 86)
9	93805	Screw - Sem	88	93875	Screw - Counterweight
10	222562	Screen - Flush Rotating	89	298909	Pin - Counterweight
17	221535	Clamp - Casing	90	222299	Lock - Conn. Rod Screw
18	93496	Screw - Sem	91	92909	Screw - Conn. Rod
19	93572	Screw - Control Brkt. Mtg.	92	490348	Rod Assy. - Conn. (Inc. Key No's 90 & 91)
20	231039	Spacer - Control Brkt. Mtg.			NOTE: For Connecting Rod With .020" Undersize Crank Pin Bore - Order No. 490469
21	491594	Plate - Gov. Control	93	260924	Lock - Piston Pin
22	260695	Spring - Governor	94	299691	Pin Assy. - Piston - Std. (Inc. Key No. 93)
26	92791	Washer - Lock - Shakeproof	94	391286	Pin Assy. - Piston .005" O.S.
29	93722	Terminal - Spade	95	391780	Ring Set - Piston - Std.
30	90576	Nut - Hex 8 - 32	95	391781	Ring Set - Piston .010" O.S.
32	398808	Wire - Ground	95	391782	Ring Set - Piston .020" O.S.
34	93572	Screw	95	391783	Ring Set - Piston .030" O.S.
35	262348	Link - Governor	96	391285	Piston Assy. - Std. (Inc. Key No's 93 & 95)
36	260584	Spring - Governor Link	96	391287	Piston Assy. - .010" O.S.
38	93381	Screw - Armature Mtg. Sem	96	391288	Piston Assy. - .020" O.S.
39	356611	Armature - Magneto	96	391289	Piston Assy. - .030" O.S.
40	221798	Terminal - Ignition Cable	97	270808	*Gasket - Crankcase Cover 1/64" thick
41	93163	Screw - Cylinder Shield Mtg. Sem.	97	270915	*Gasket - Crankcase Cover .005" thick
42	222744	Cover - Cylinder Head	97	270916	*Gasket - Crankcase Cover .009" thick
43	293918	Plug - Spark	98	391784	Sump - Oil (Inc. Key No.s 97 & 99)
44	19203	Flywheel Puller	99	291675	Seal - Oil
45	66538	Elbow - Spark Plug	100	91004	Plug - Oil Drain
46	93723	Screw - Cylinder Head	101	93585	Screw - Sump Mtg. Sem
47	261463	+Seat - Intake Valve	102	393411	Gasket Set
48	210940	+Seat - Exhaust Valve	104	398525	Insulator Assembly
49	231218	+Guide - Exhaust or Intake Valve Head - Cylinder	105	66768	Plug - Oil Filler
50	212914	*Gasket - Cylinder Head	106	94160	Pin Eccentric
51	271866	Shield - Cylinder	107	261242	Eccentric - Crankshaft
52	222744	Counterweight Assembly (Inc. Key No. 89)	110	490815	Oil Slinger, Gov. Gear & Bracket Assy.
53	391373	Cylinder Assy. (Inc. Key No. 61)	111	90200	Screw-Machine, Fill. Hd.
60	396324	Seal - Oil	112	26157	Spring-Throttle Adjustment
61	391086	Bushing - Gov. Crank	113	89838	Wrench-Spark Plug
62	231597	*Gasket - Valve Cover	114	---	Decal Kit
63	27803	Tube - Breather	115	391841	Cap and Dipstick-Oil Filler
64	280100	Breather Assembly	116	270920	Seal-Oil Filler Cap
65	391406	Screw - Sem	117	93804	Screw-Clamp Mtg.
66	93231	Key - Flywheel	118	223394	Clamp-Oil Filler Tube
67	222698	Crankshaft to replace Crankshaft	119	392067	Fill Group-Oil
68	491646	Gear Key, Order Part No. 94196	120	280134	Tube-Oil Filler
70	65906	Spring - Intake Valve	121	68838	Seal-Filler Tube
71	221596	Retainer - Intake Valve	122	491323	Oil - Seal
72	261462	Valve - Intake			
73	261185	Valve - Exhaust			
74	26828	Spring - Exhaust Valve			
75	262135	Gear - Timing			
76	292260	Rotocoil - Exhaust Valve			
77	262248	Tappet - valve			
78	212897	Gear - Cam			
79	93630	Retainer - Exhaust Valve Rotocoil (2)			
80	212359	Link - Counterweight			


+Special Tools Required to Install
*Included in gasket Set - Part No. 393411

REPAIR PARTS

36" RIDING LAWN TRACTOR—MODEL NUMBER L1900AT
BRIGGS AND STRATTON 10 H.P. ENGINE—MODEL 255707, TYPE NO. 0111-01

CARBURETOR

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND WARRANTY SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

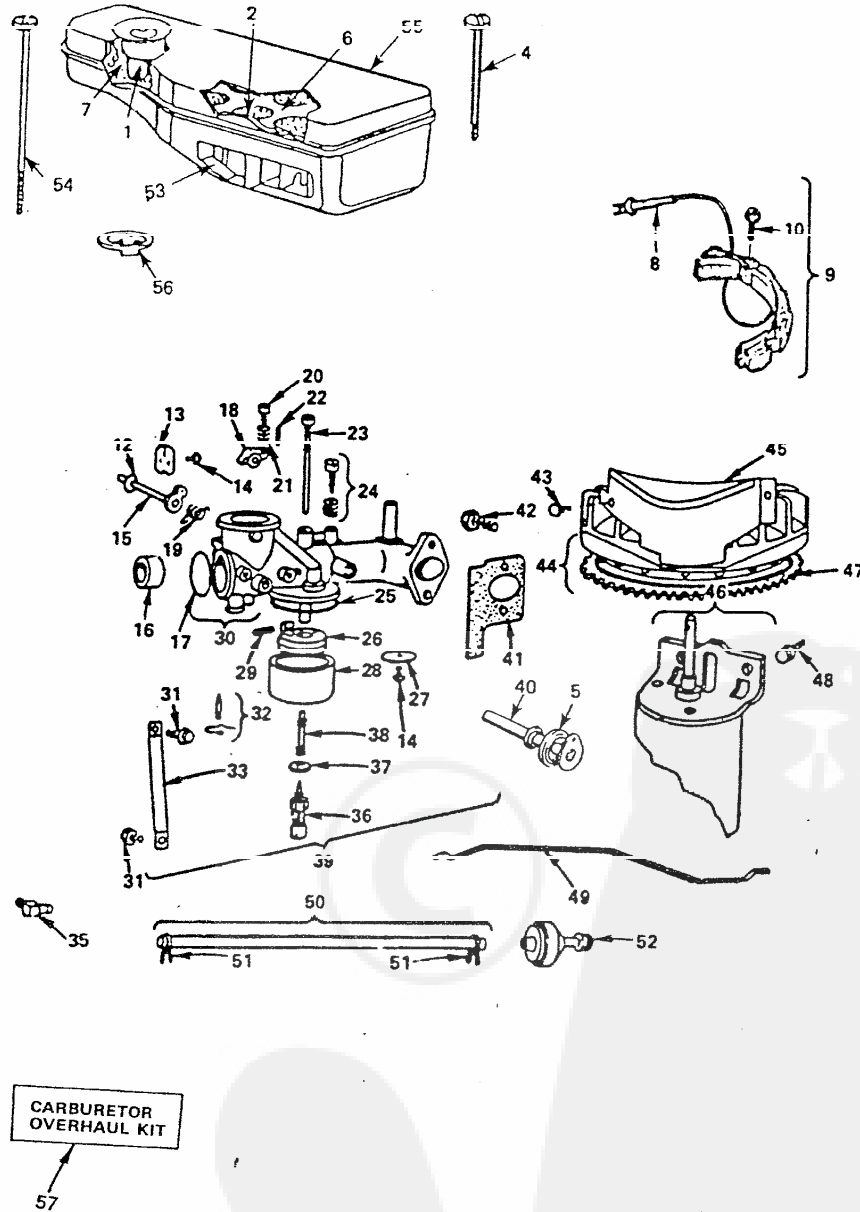

REPAIR PARTS

36"RIDING LAWN TRACTOR--MODEL NUMBER L1900AT
BRIGGS AND STRATTON 10 H.P. ENGINE--MODEL NO. 255707, TYPE NO. 0111-01

CARBURETOR

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	222380	Cup - Air Cleaner Support	29	233333	Pin - Float Hinge
2	222495	Air Cleaner, Spacer	30	391787	Body Assembly Carburetor (Inc. Key No. 17)
4	93622	Screw - Air Cleaner	31	93572	Screw
5	398970	Seal - Throttle Shaft	32	394681	*Valve - Fuel Inlet
6	222382	Plate - Air Cleaner Cartridge	33	222311	Bracket - Carburetor
7	270843	Air Cleaner - Element	35	67218	Connector - Fuel Pipe
8	393456	Diode & Connector	36	396568	+Valve - Needle
9	393474	Stator - Alternator (Inc. Key No's. 8 & 10)	37	222014	+Washer - Float Bowl
10	93621	Screw - Sem	38	231323	+Screw - Nozzle
11	94018	Screw - Sem	39	491562	Carburetor Assy. (Inc. Key No's 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 36, 37 & 38) (Choke-A-Matic)®
12	270382	Washer - Choke Shaft	40	491006	Shaft & Lever - Throttle
13	222010	Valve - Choke	41	270872	*Gasket - Carburetor Mounting
14	93499	Screw - Throttle & Choke Valve Mtg. Sem	42	93357	Screw - Carburetor Mounting
15	390684	Shaft & Lever - Choke	43	93984	Screw - Sem
16	213115	Venturi - Carburetor	44	391988	Flywheel & Ring Gear Assy. - Magneto (Inc. Key No. 47)
17	221997	+Plug - Welch	45	395405	Cover & Shield - Starter
18	211712	Stop - Throttle	46	394335	Motor - Starting
19	261116	Spring - Choke Return	47	392134	Gear - Ring (Inc. Mounting parts)
20	91920	Screw - Machine, Fill. Hd. 8 - 32 x 5/8	48	93523	Screw - Sem
21	26157	Spring - Throttle Adjustment	49	261610	Link - Choke
22	33043	Pin - Throttle Stop	50	393815	Line - Fuel (Inc. Key No. 51) (11" Long)
23	299740	+Nozzle - Carburetor	51	93053	Clamp - Fuel Pipe
24	292681	+Valve Assembly - Carburetor Idle	52	298090	Filter - Fuel
25	270511	+Gasket - Float Bowl	53	280118	Support - Air Cleaner Element
26	299707	Float - Carburetor	54	93323	Screw - Air Cleaner
27	222433	Valve - Throttle	55	391786	Cleaner - Air (Inc. Key No's 1, 2, 4, 6, 7, 53 & 54)
28	221995	Bowl - Float	56	270853	Gasket - Air Cleaner
			57	394698	Carburetor Overhaul Kit

*Included in Carburetor Overhaul Kit - Part No. 394698


*Included in Gasket Set - Part No. 393411

REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L1900AT
BRIGGS AND STRATTON 10 H.P. ENGINE--MODEL NO. 255707, TYPE NO. 0111-01

STARTER MOTOR

ALL ENGINE PARTS MUST BE PURCHASED THROUGH AND WARRANTY SERVICE PERFORMED BY YOUR LOCAL BRIGGS AND STRATTON DEALER.

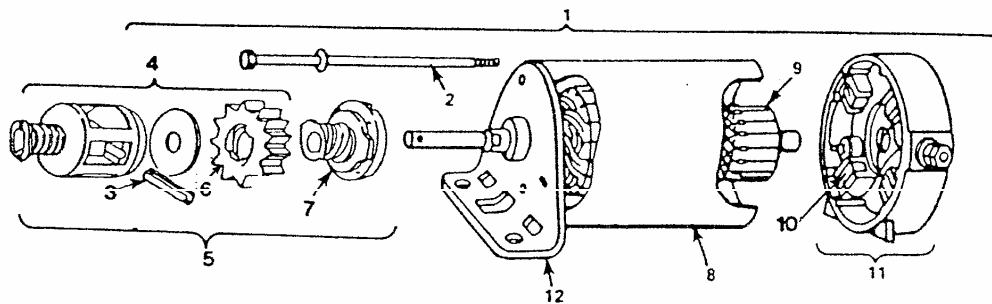

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	394805	Motor - Starting (Inc. Key No's. 2, 3, 4, 5, 6, 7, 8, 9, 10, 11 & 12)	7	398003	Clutch Assembly
2	94003	Thru Bolt Assembly	8	393825	Housing Assembly
3	94192	Roll Pin	9	300937	Armature Assembly
4	393254	Retainer Kit (Inc. Key No.'s 3, 4 & 6)	10	395538	Brush Assembly
5	396865	Drive Assembly (Inc. Key No's 3, 4, 6 & 7)	11	395537	End Cap Assy. Commutator (Inc. Key No. 10)
6	280104	Gear	12	394856	End Cap Assy. Drive