


Tele 02 / 3760090

gg de Tihange Tel: 21.33.23

# OWNER'S MANUAL

8 H.P.  
36" RIDING  
LAWN TRACTOR  
MODEL NUMBER L8218BR

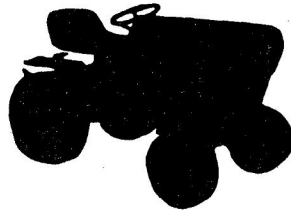


LAWN AND GARDEN  
POWER EQUIPMENT

**ROPER**

**OUTDOOR POWER PRODUCTS**

A DIVISION OF ROPER CORPORATION


1905 WEST COURT STREET  
KANKAKEE, ILLINOIS 60901

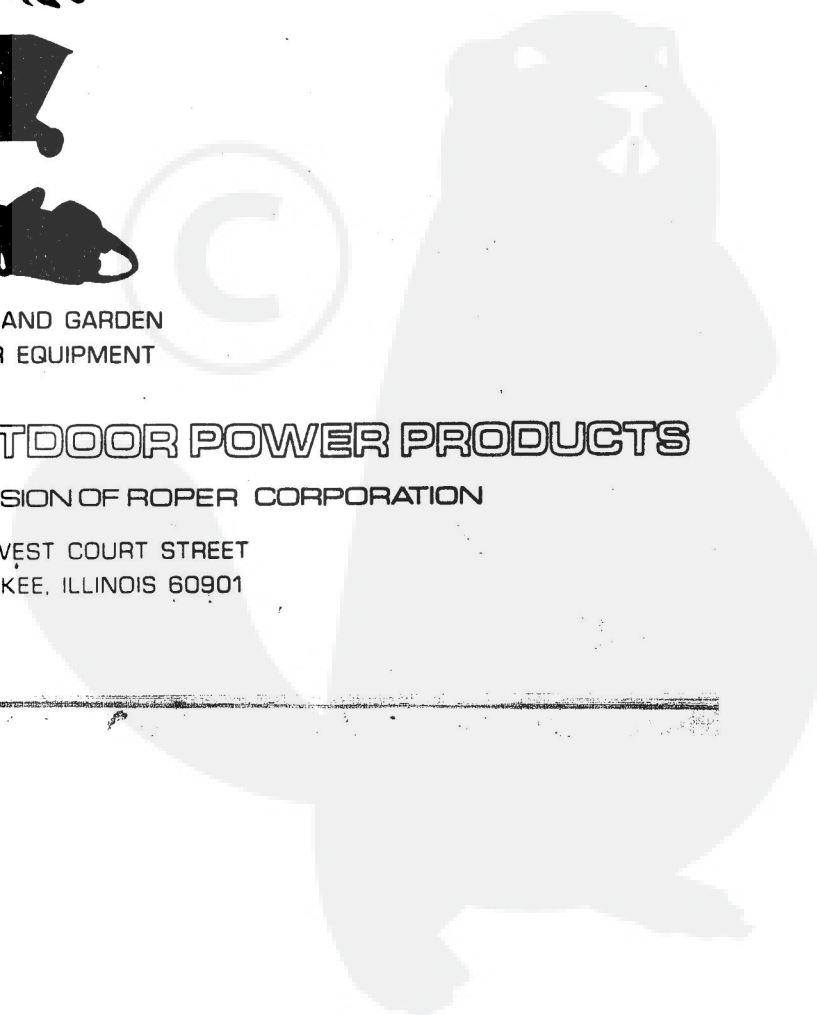

# REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

## ELECTRIC & ENGINE

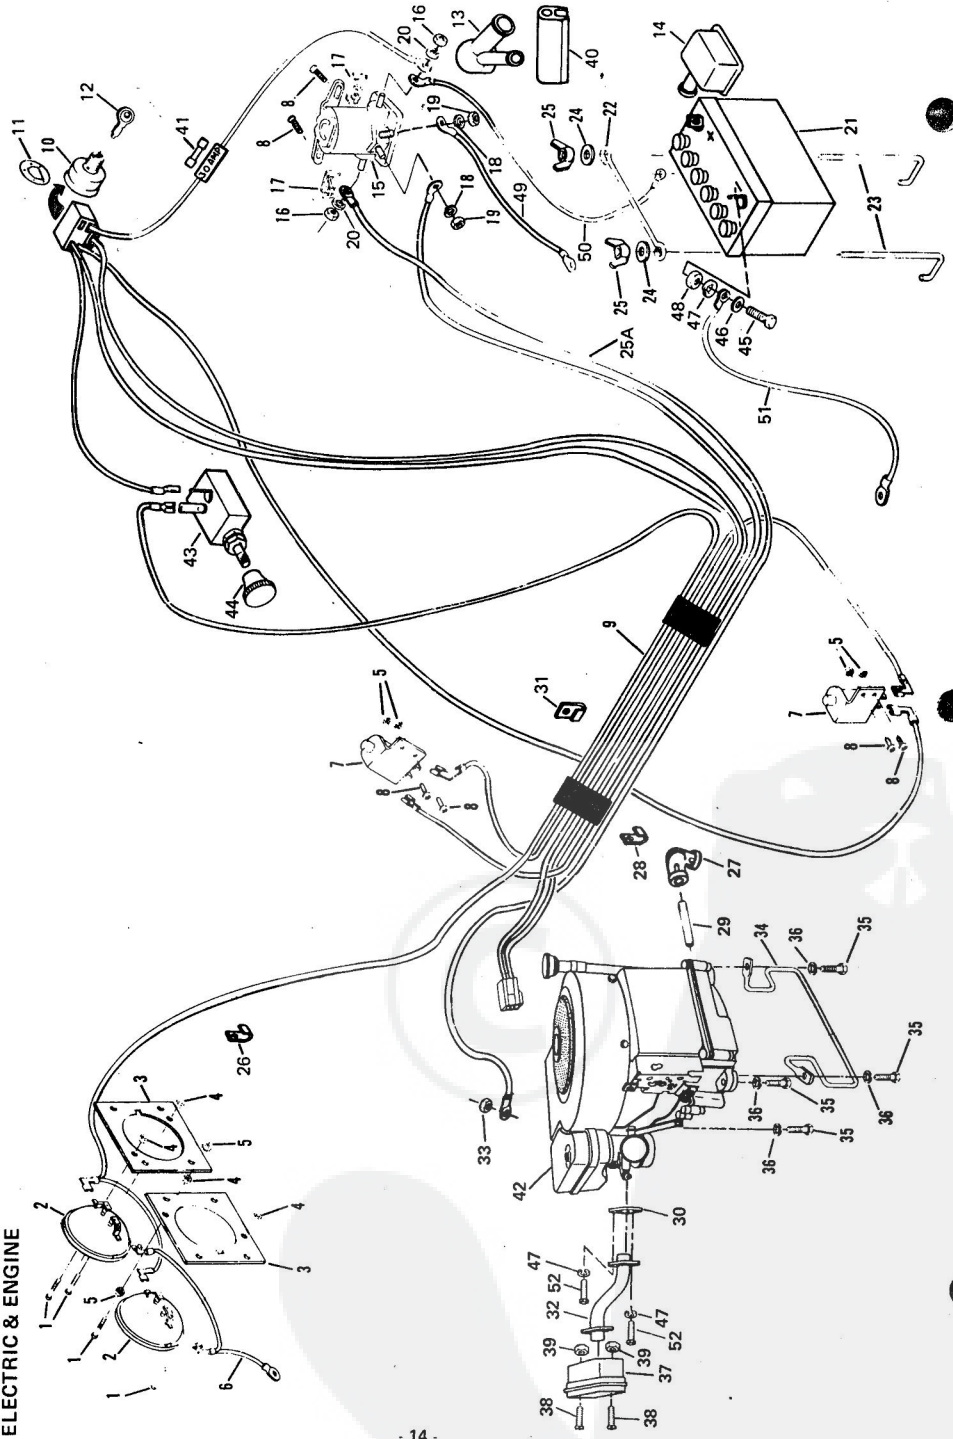

## REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

### ELECTRIC & ENGINE


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	65421	Screw, Machine Truss Head No. 10 - 24 x 1	27	4017P	Std. Elbow 90° 3/8 - 18 NPT
2	6452R	Headlight	28	5320R	Insulated Clip
3	73025	Headlight Support	29	73458	Nipple
4	53491	Nut, Lock No. 10 - 24	30	72144	Exhaust Gasket
5	561P	Nut, Keps No. 10 - 24	31	6794R	Insulated Clip
6	71706	Wire Assembly	32	74714	Exhaust Tube
7	7755R	Safety Switch	33	53490	Nut, Lock 1/4 - 20
8	3359P	Screw, Machine Phillips Head No. 10 - 24 x 1/2	34	75082	Beit Keeper
9	479J	Wire Harness	35	71232	Screw, Hex Hd. Thrd. Form 3/8 - 16 x 1 - 1/4
10	4406R	Ignition Switch (Inc. Ref No. 12)	36	1004P	*Washer, Lock 3/8
11	8657R	Terminal Identifier	37	74715	Muffler
12	7552H	Key Set	38	3271P	Hex Bolt 5/16 - 18 x 2 - 3/4
13	51J	Terminal Cover (Dual)	39	54922	Nut, Keps 5/16 - 18
14	225J	Terminal Cover	40	871J	Solenoid Insulator
15	7754R	Solenoid	41	6347R	Fuse - 30 Amp.
16	538P	*Nut, Hex Jam 5/16 - 24	42	191707	Engine - Briggs and Stratton 8 H.P. Type No. 5627-01 (See pages 26 thru 28)
17	60891	Nut, Speed No. 10 - 24	43	7793R	Light Switch
18	1006P	*Washer, Lock No. 10	44	7794R	Knob, Light Switch
19	543P	*Nut, Hex No. 10 - 32	45	3003P	*Hex Bolt 1/4 - 20 x 3/4
20	1003P	*Lockwasher 5/16	46	1506P	*Washer 9/32 x 5/8 x 16 Ga.
21	228J	Battery	47	1002P	*Lockwasher 1/4
22	67187	Battery Rod	48	503P	*Hex Nut 1/4 - 20
23	70456	Battery Bolt	49	8027R	Wire - Ground Solenoid
24	53847	Washer .265 x .750 x .063	50	597J	Battery Cable
25	52231	Wing Nut 1/4 - 20	51	596J	Ground Cable
25A	599J	Wire - Solenoid to Starter	52	70541	Screw, Hex Hd. 1/4 - 20 x .62
26	2521R	Insulated Clip	...	1174J	Owners Manual

\*STANDARD HARDWARE--PURCHASE LOCALLY

**REPAIR PARTS**

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

CHASSIS

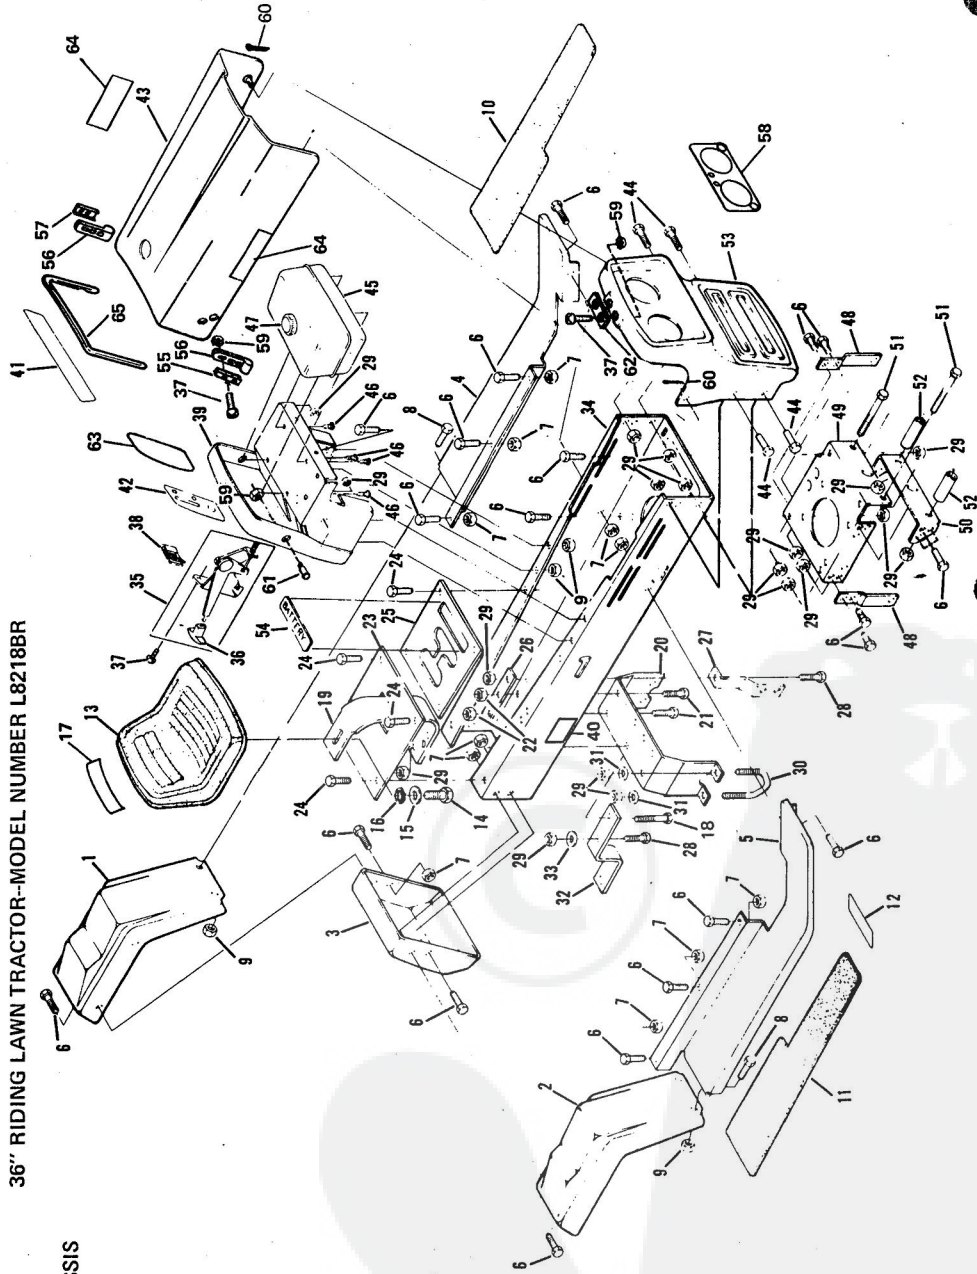

## REPAIR PARTS

### 36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

#### CHASSIS


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	388J	Fender - L.H.	35	74866	Throttle Control Lever (Inc. Key No. 36)
2	677A15	Rear Cover Ass'y.	36	61159	*Knob - Throttle Control
3	386J	Foot Rest - L.H.	37	6005P	*Screw, Machine No. 10 - 24 x 1/2
4	387J	Foot Rest - R.H.	38	60891	Nut, Speed No. 10 - 24
5	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4	39	677A13	Dash Weldment
6	67818	Nut, Lock 5/16 - 18	40	75078	Decal - 8"
7	54262	Screw, Hex Head w/Washer 5/16 - 18 x 5/8	41	655J	Decal - Dash Instructions
8	65221	Nut, Lock 5/16 - 18	42	482J	Decal - Dash Controls
9	73302	Foot Rest Pad, L.H.	43	677A12	Hood Weldment
10	73303	Foot Rest Pad, R.H.	44	71949	Screw, Hex Washer Hd. 5/16 - 18 x 3/4
11	376J	Decal - Clutch and Brake	45	73427	Fuel Tank
12	476J	Seat	46	68346	Screw, Thd. Cutting 1/4 - 20 x 3/4
13	3042P	*Bolt, Hex Head 1/2 - 13 x 1	47	74145	Fuel Cap
14	53084	Washer, .531 x 1.187 x .127	48	71190	Brake Rod Bracket
15	1000P	*Washer, Lock 1/2	49	71177	Engine Base
16	245J	Decal - Seat	50	71178	Rocker Bar Support
17	52404	Bolt, Hex Head 5/16 - 18 x 1 - 1/4	51	3271P	*Bolt, Hex Head 5/16 - 18 x 2 - 3/4
18	73790	Seat Spring	52	71431	Bushing
19	73791	Transaxle Support	53	374J	Grill Frame
20	3023P	*Bolt, Hex Head 3/8 - 16 x 1	54	74307	Battery Cap
21	65543	Nut, Lock 3/8 - 16	55	8935R	Hood Latch Cover - R.H.
22	383J	Cover Plate	56	8889R	Hood Latch
23	71263	Screw, Hex Hd. Thd. Cutting 5/16 - 18 x 1/2	57	9015R	Hood Latch Cover - L.H.
24	677A53	Chassis Cover	58	602J	Decal - Headlight
25	71507	Support	59	561P	Nut, Keys No. 10 - 24
26	71198	Axle Strap	60	2503P	*Cotter Pin 3/32 x 3/4
27	3011P	*Bolt, Hex Head 5/16 - 18 x 1	61	8753R	Hood Latch Pin
28	67818	Nut, Lock 5/16 - 18	62	470J	Hood Bumper
29	71606	Clamp	63	481J	Decal - Dash - L.H.
30	59944	Washer, .312 x .750 x .127	64	242J	Decal, Hood Sides
31	71205	Tow Hitch	65	892J	Hood Strip
32	62735	Washer, .375 x 1.250 x .201	...	941J	Warranty Tag
33	73789	Chassis			
34					

\*STANDARD HARDWARE--PURCHASE LOCALLY

# REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

## CLUTCH-BRAKE & DRIVE

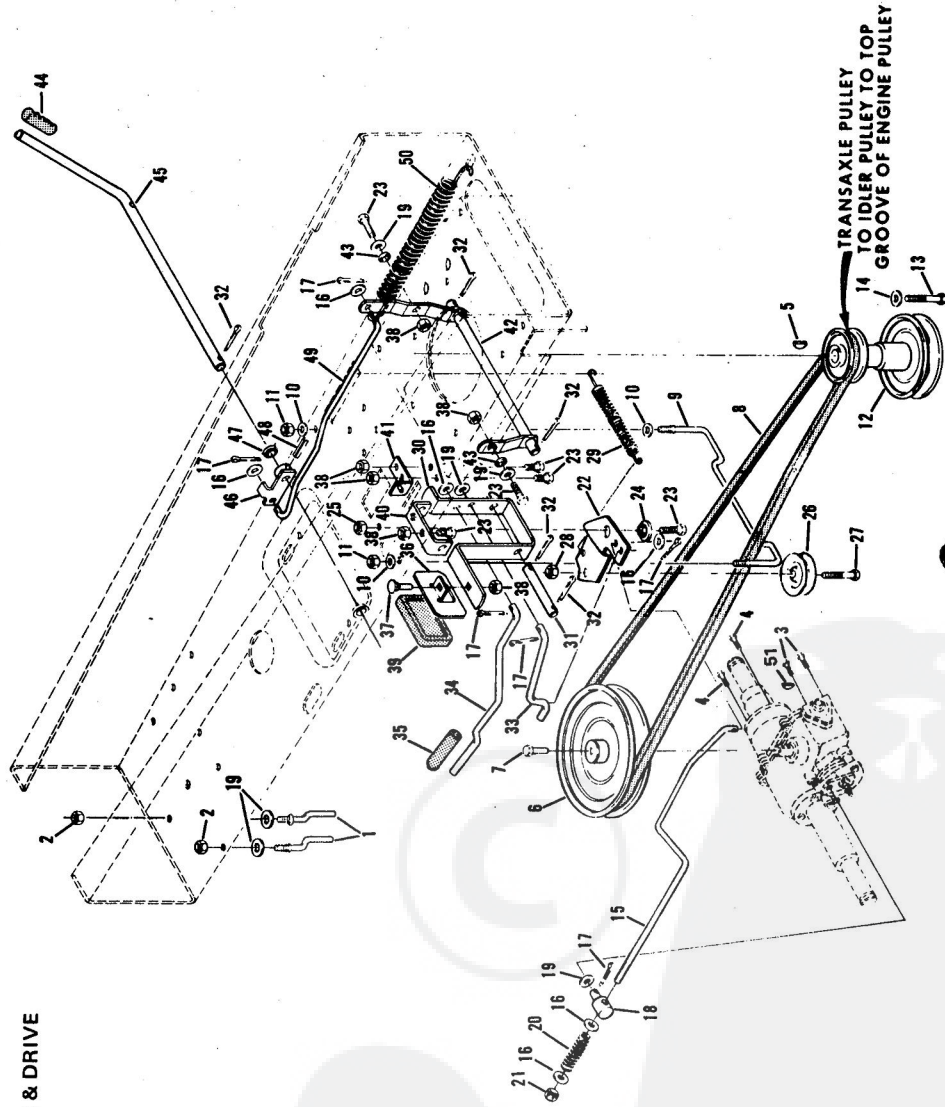

## REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

### CLUTCH-BRAKE & DRIVE


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	71200	Belt Guide	23	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4
2	54922	Nut, Keps 5/16 - 18	24	71202	Bushing
3	68205	Screw, Hex Head w/Washer 5/16 - 18 x 7/8	25	63124	Nut, Lock 5/16 - 18
4	68206	Screw, Hex Head w/Washer 5/16 - 18 x 1 - 1/8	26	67400	Pulley - Idler
5	65053	Key, Woodruff No. 6	27	3027P	*Bolt, Hex Head 3/8 - 16 x 1 - 1/2
6	73542	Pulley - Transaxle	28	65843	Nut, Lock 3/8 - 16
7	6058P	Screw, Machine w/Washer 1/4 - 20 x 3/4 Gr. 5	29	388J	Spring - Idler
8	73794	Belt	30	390J	Foot Pedal
9	71241	Mid Belt Guide	31	71223	Pedal Shaft
10	51785	Washer, 400 x .875 x .063	32	2506P	*Cotter Pin 1/8 x 1
11	55615	Nut, Lock 3/8 - 16	33	74419	Clutch Rod
12	71923	Pulley - Engine	34	373J	Park Brake Rod
13	68874	Screw, Machine w/Washer Nylon 3/8 - 24 x 1 - 3/8	35	71226	Grip
14	62735	Washer, .375 x 1.250 x .201	36	71222	Pedal Plate
15	73792	Brake Rod	37	16P	*Bolt, Carriage 5/16 - 18 x 3/4
16	53998	Washer, .406 x .750 x .063	38	67818	Nut, Lock 5/16 - 18
17	2503P	*Cotter Pin 3/32 x 3/4	39	67365	Foot Pad
18	71238	Trunion	40	71199	Pedal Bracket
19	50806	Washer, .328 x .750 x .063	41	71204	Switch Bracket
20	71239	Brake Spring	42	71191	Clutch Arm Assembly
21	62336	Nut, Lock 3/8 - 16	43	71195	Spacer
22	71201	Idler Bracket	44	71246	Grp
			45	71242	Clutch Lever
			46	73229	Clutch Arm Assembly
			47	53632	Washer, .531 x 1 x .063
			48	52379	Spring Pin 3/16 x 1
			49	74474	Blade Clutch Rod
			50	71248	Spring
			51	52859	Key, Woodruff No. 61

\*STANDARD HARDWARE--PURCHASE LOCALLY

**REPAIR PARTS**

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

**STEERING & WHEELS**

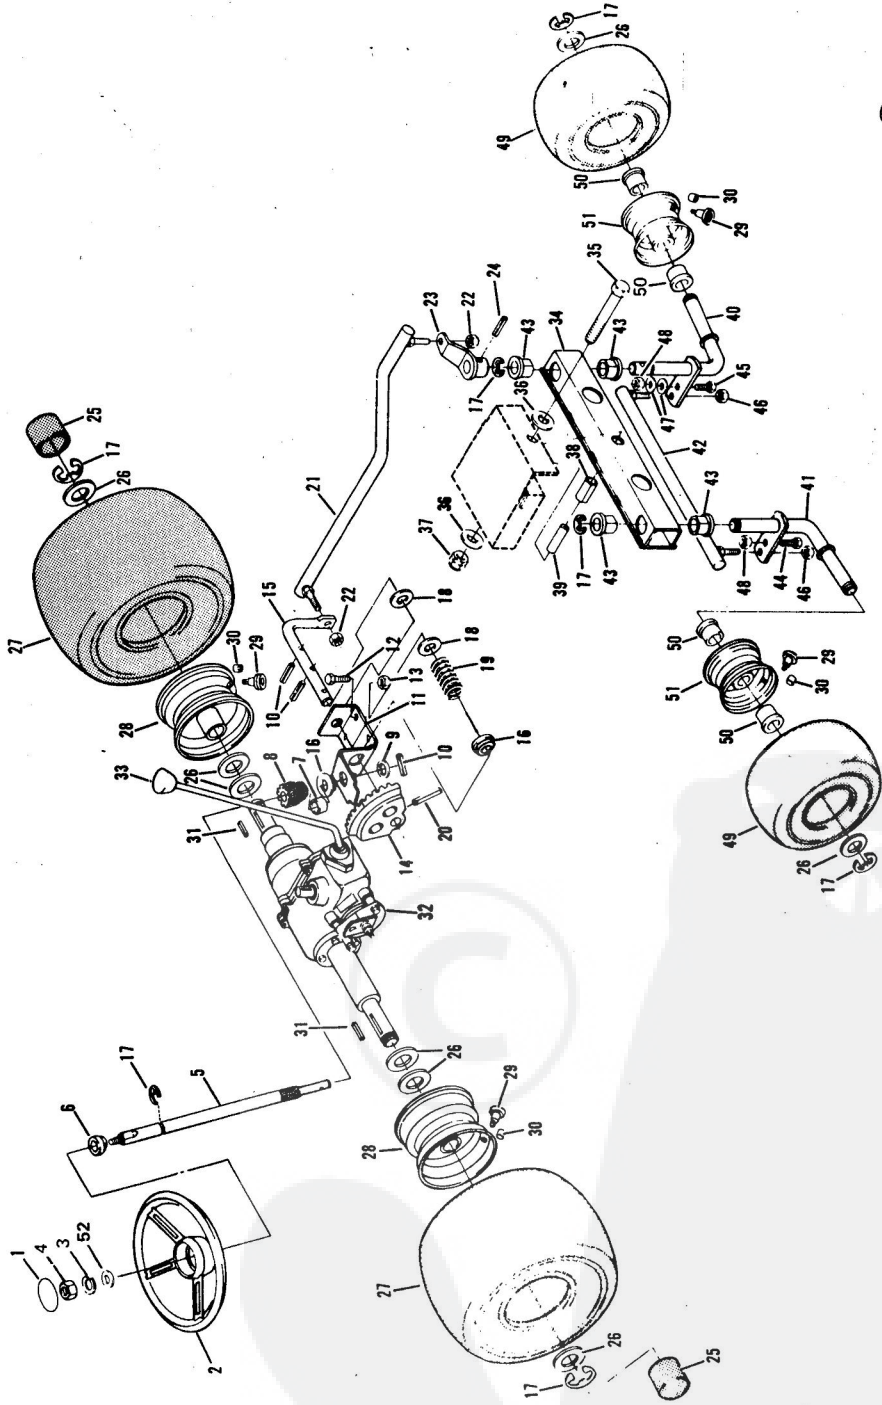



## REPAIR PARTS

### 36" RIDING LAWN TRACTOR--MODEL NUMBER L82188R

#### STEERING AND WHEELS


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	1114J	Steering Wheel Insert	29	65139	Valve Stem
2	506J	Steering Wheel	30	59192	Valve Cap
3	1000P	*Lockwasher 1/2	31	66414	Square Key 3/16 x 2
4	558P	*Nut, Hex Jam 1/2 - 20	32	794191A	Transaxle Assembly Model 143.658A (See Pages 24 thru 25)
5	74579	Steering Shaft	33	71267	Knob - Transmission
6	71210	Bushing	34	71179	Rocker Bar Assembly
7	74580	Shaft Spacer	35	64606	Bolt, Hex Head 1/2 - 13 x 3
8	74581	Pinion Gear	36	59164	Washer, .515 x .875 x .063
9	69385	Washer, .630 x 1.50 x .127	37	60249	Nut, Lock 1/2 - 13
10	52379	Spring Pin 3/16 x 1	38	67151	Bushing
11	74577	Steering Bracket	39	71188	Pivot Spacer
12	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4	40	73236	Kingpin Assembly - L.H.
13	67818	Nut, Lock 5/16 - 18	41	73237	Kingpin Assembly - R.H.
14	71172	Gear	42	73240	Tie Rod
15	74578	Steering Rod	43	71182	Bearing Kingpin
16	71208	Bushing	44	3021P	*Bolt, Hex Head 3/8 - 16 x 3/4
17	52913	E-Ring 3/4 Shaft	45	3023P	*Bolt, Hex Head 3/8 - 16 x 1
18	53462	Washer, .656 x 1.250 x .093	46	67892	Nut, Lock 5/16 - 24
19	72589	Spring	47	55611	Washer, .405 x .860 x .172
20	73446	Drive - Lock Pin	48	65543	Nut, Lock 3/8 - 16
21	71219	Drag Link	49	71651	Tire (15 x 6.00 x 6)
22	61342	*Nut, Hex Lock 3/8 - 24	50	625J	Bearing
23	71185	Steering Arm Assembly	51	620J	Rim (Inc. Ref. No. 50)
24	62079	Spring Pin 1/4 x 1 - 1/4	52	53632	Washer, .531 x 1.00 x .063
25	74255	Hub Cap			
26	52966	Washer, .756 x 1.250 x .063			
27	71653	Tire (18.00 - 9.50 x 8)			
28	71652	Rim			

\*STANDARD HARDWARE--PURCHASE LOCALLY.

# REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR

MOWER

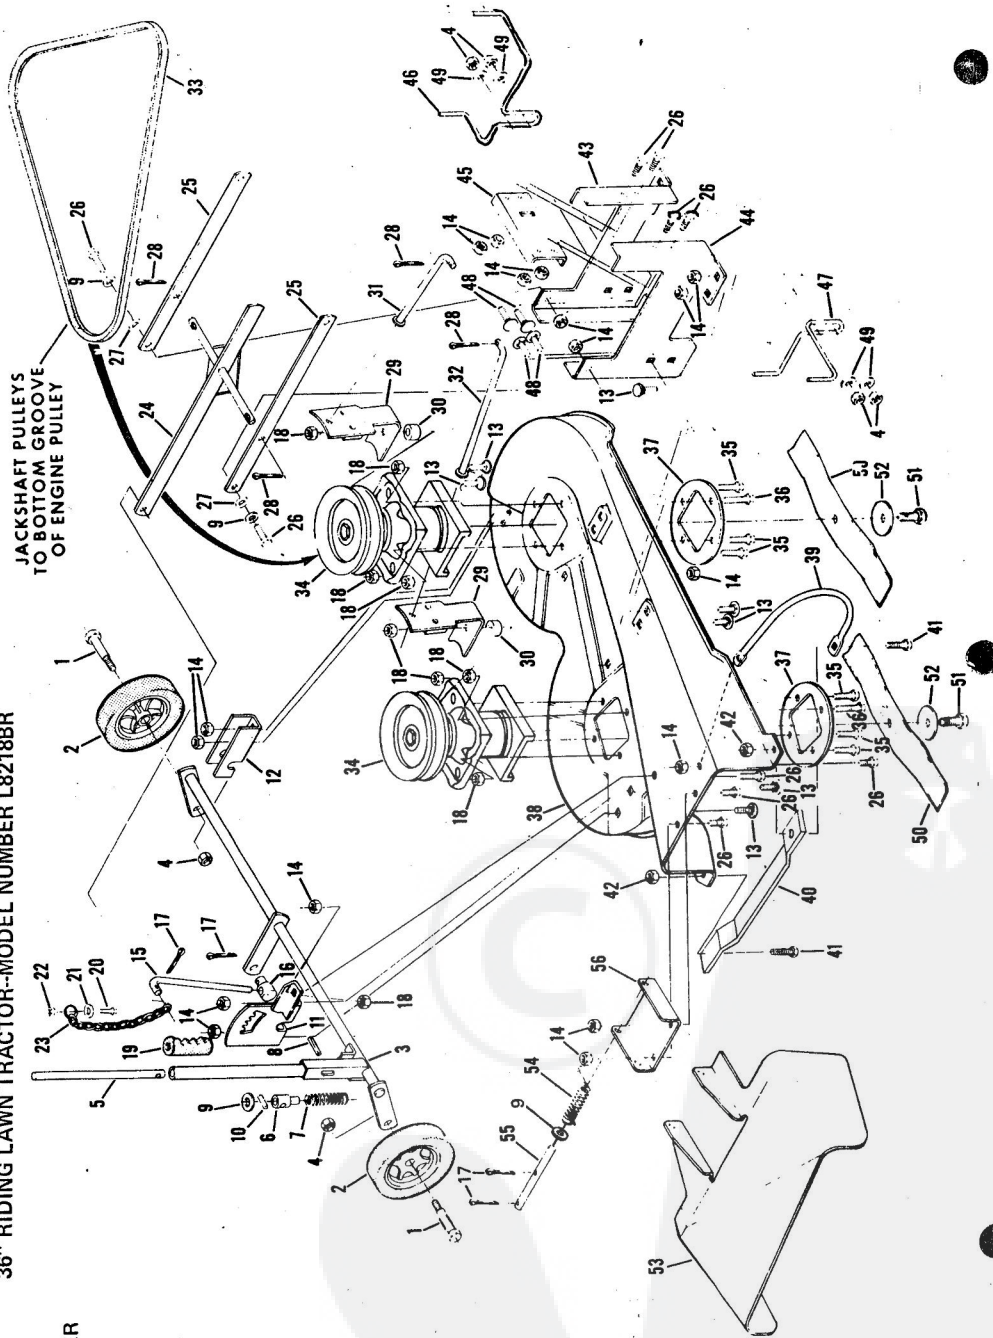

# REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L82188R

MOWER


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	60838	Axle Bolt	29	73559	Brake Spring Assembly
2	63655	Gauge Wheel	30	71522	Spacer, Brake Spring
3	71671	Pivot Rod Assembly	31	71525	Brake Rod - L.H.
4	65543	Nut, Lock 3/8 - 16	32	71524	Brake Rod - R.H.
5	73963	Rod	33	62828	Belt
6	71658	Plunger	34	677A14	Jacksaft Assembly
7	71669	Spring	35	3023P	*Bolt, Hex Head 3/8 - 16 x 1
8	54960	Spring Pin - Slotted 1/4 x 1 - 1/2	36	3027P	*Bolt, Hex Head 3/8 - 16 x 1 - 1/2
9	50806	Washer, .328 x .750 x .063	37	71575	Plate
10	52870	Spring Pin 1/8 x 5/8	38	677A51	Housing w/Silk Screening
11	72937	Quadrant Assembly	39	71647	Housing Skid
12	67337	Pivot Rod Support	40	74016	Skid Bar
13	15P	Bolt, Carriage 5/16 - 18 x 5/8	41	51447	Screw, Machine 5/16 - 18 x 7/8
14	67818	Nut, Lock 5/16 - 18	42	54922	Nut, Keps 5/16 - 18
15	71300	Adjustment Rod	43	71276	Housing Bracket - L.H.
16	71301	Trunion	44	71277	Housing Bracket - R.H.
17	2503P	*Cotter Pin 3/32 x 3/4	45	71278	Channel
18	62336	Nut, Lock 3/8 - 16	46	71298	Belt Keeper - L.H.
19	71672	Grip	47	71299	Belt Keeper - R.H.
20	3275P	Phillips Pan Hd. Machine Screw 1/4 - 20 x 1	48	19P	*Bolt, Carriage 3/8 - 16 x 3/4
21	65329	Washer, .266 x 1 x .063	49	54005	Washer, .381 x .860 x .083
22	53490	Nut, Lock 1/4 - 20	50	71285	Blade
23	74014	Sway Chain	51	67676	Screw, Hex Head 3/8 - 24 x 7/8 Gr. 5
24	72915	Parallel Rod Assembly	52	67354	Washer, .390 x 2.38 x .156
25	71297	Parallel Link	53	677A52	Discharge Guard
26	3010P	*Bolt, Hex Head 5/16 - 18 x 3/4	54	71526	Discharge Spring
27	71616	Spacer	55	71555	Hinge Rod
28	2506P	*Cotter Pin 1/8 x 1	56	71528	Bracket - Discharge Guard

\*STANDARD HARDWARE--PURCHASE LOCALLY

**REPAIR PARTS**

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR  
TRANSAXLE NO. 794191A--MODEL NUMBER 143.658A

ALL TRANSAXLE PARTS MUST BE PURCHASED THROUGH AND SERVICE PERFORMED BY YOUR LOCAL TECUMSEH DEALER.

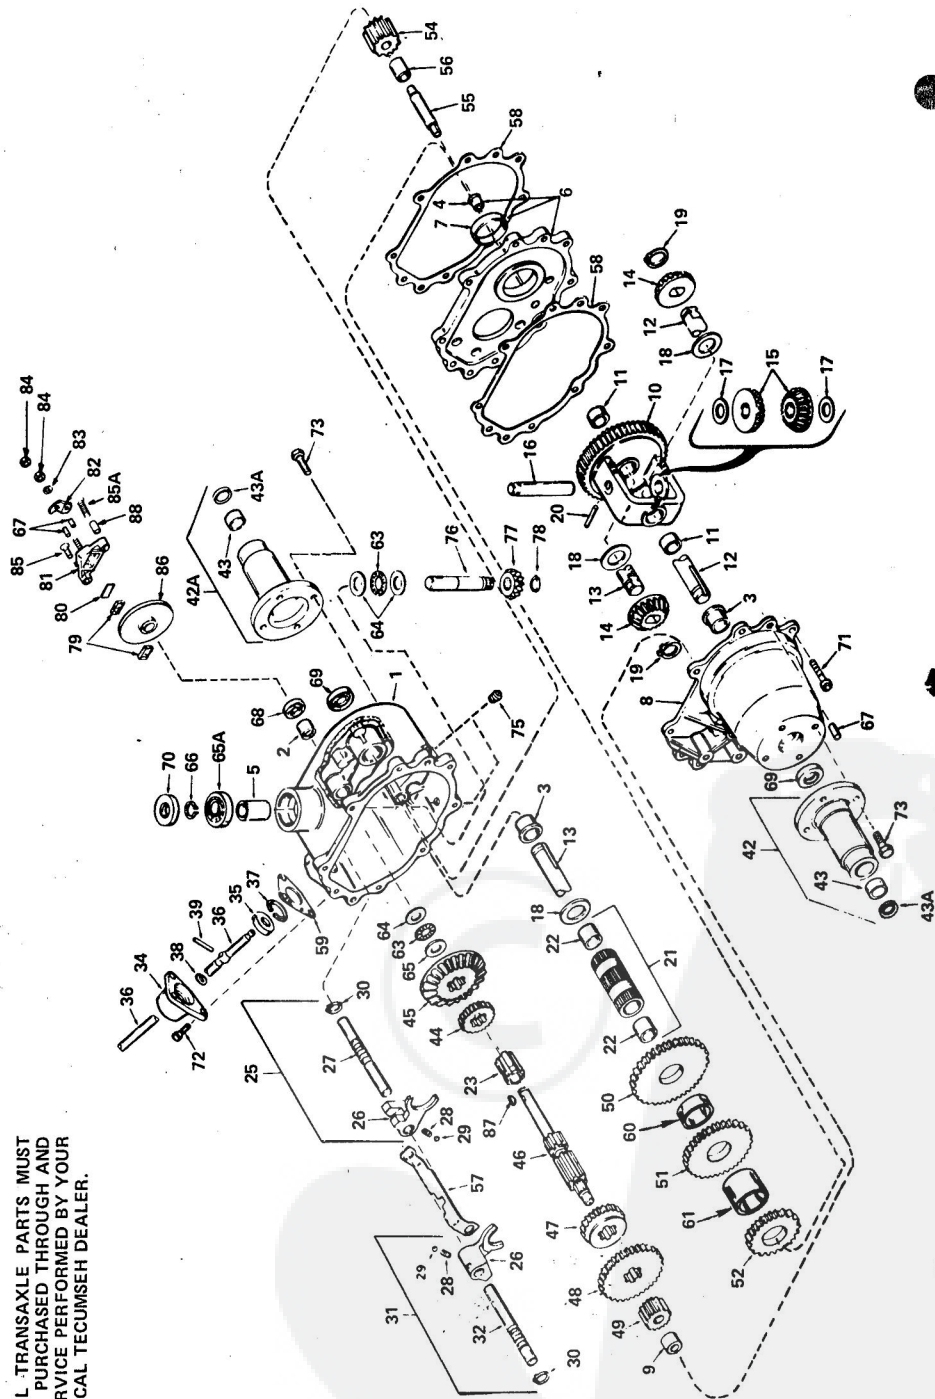

## REPAIR PARTS

36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR  
TRANSAXLE NO. 794191A--MODEL NUMBER 143.658A

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
	794191A	Complete Transaxle			
1	770063	Case Ass'y., Transaxle (Inc. No's. 2, 3 & 5)	45	778057	Gear, Bevel (33 Teeth)
2	780086	Bearing, Needle	46	776138	Shaft, Shifter & Brake
3	780059	Bearing, Bronze	47	778058	Gear, Shifting (2nd & 3rd)
4	780060	Bearing, Bronze	48	778059	Gear, Shifting (1st & Rev.)
5	780061	Bearing, Bronze	49	778060	Gear, Spur (12 Teeth)
6	786033	Plate Ass'y., Center (Inc. No's. 4 & 7)	50	778140	Gear, Countershaft Drive (39 Teeth)
7	780062	Bearing, Bronze	51	778141	Gear, Countershaft (34 Teeth)
8	772042	Cover Ass'y., Transaxle (Inc. No's. 3 & 9)	52	778142	Gear, Countershaft (25 Teeth)
9	780063	Bearing, Needle	54	778064	Gear, Reverse Idler
10	778053	Gear Ass'y., Differential (Inc. No. 11)	55	776057	Shaft, Reverse Idler
11	780064	Bearing, Bronze	56	786036	Spacer, Reverse Idler
12	774221	Axle, Left Hand	57	784087	Stop, Shifter
13	774220	Axle, Right Hand	58	788033	Gasket, Case & Cover
14	778067	Gear, Bevel	59	788003	Gasket, Shift Lever Housing
15	778068	Pinion, Bevel	60	786079	Spacer
16	786034	Pin, Drive	61	786078	Spacer
17	780065	Washer, Thrust	63	780071	Bearing, Thrust
18	780001	Washer, Thrust	64	780072	Washer, Thrust
19	788038	Ring, Snap	65	780073	Washer, Thrust
20	792040	Pin, Roll	66	780093	Bearing, Ball
21	786080	Sleeve Ass'y., Countershaft (Inc. 2 of No. 22)	67	792035	Ring, Snap
22	780066	Bearing, Bronze	68	786026	Pin, Dowel
23	776090	Shaft, Idler	69	788043	Seal, Oil
25	784079	Rod Ass'y., Shift (1st & Rev.) (Inc. No's. 26 thru 30)	70	788009	Seal, Oil
26	784004	Spring	71	788035	Seal, Oil
27	784083	Ball, Steel	72	792036	Screw, Flanged Hex Hd. 1/4 - 20 x 1 - 1/4
28	792003	Ring, Snap	73	792007	Screw, Socket Hd. Cap. 1/4 - 20 x 3/4
29	792004	Rod Ass'y., Shift (2nd & 3rd) (Inc. No's. 26, 28, 29, 30 & 32)	74	792037	Screw, Hex Hd., Sems 5/16 - 18 x 1
30	792017	Spring	75	792039	Plug, Pipe 1/8"
31	784084	Ring, Snap	76	776103	Shaft, Input
32	784085	Housing, Shift Lever	77	778077	Pinion, Input
34	784088	Keeper, Shift Lever	78	788040	Ring, Retaining
35	784094	Lever, Shift	79	790006	Pad, Brake
36	784284	Ring, Snap	80	790007	Plate, Brake Pad
37	792016	Ring, Quad	81	790005	Holder, Brake Pad
38	792001	Pin, Drive	82	790004	Lever, Brake
39	792049	Housing Ass'y., Axle (Inc. No's. 43 & 43A)	83	790004	Washer, Flat
42	782036A	Housing Ass'y., Axle (Inc. No's. 43 & 43A)	84	792076	Nut, Lock
42A	782043	Bearing, Needle	85	792073	Screw, Hex Hd. Cap. 1/4 - 20 x 1 - 1/4
43	530105	Seal, Oil	86	792085	Thrd. Forming
43A	788042	Gear (16 Teeth)	87	792045	Screw, Hex Hd. Cap 1/4 - 20 x 2 - 1/4
44	778024		88	786066	Disk, Brake
					Key, Woodruff No. 61
					Spacer




**36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR  
BRIGGS & STRATTON 8 H.P. ENGINE--MODEL NO. 191707, TYPE NO. 5627-01**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	392005	Cylinder Assembly (Inc. Key No. 3)	227	391733	Lever Assy. - Governor (For 1/4" Dia. Crank)
2	391726	Bushing - Cylinder	229	220680	Washer - Flat
3	294606	Seal - Oil	230	222450	Washer - Gov. Lever (1/4" I.D.)
5	212286	Head - Cylinder	232	260584	Spring - Governor Link
7	270430	Gasket - Cylinder	265	221535	Clamp - Casing
8	391406	Breather Tube Assembly	284	93804	Screw - Clamp Mtg.
9	27803	Gasket - Valve Cover	304	391379	Housing - Blower
10	93394	Screw - Sem	305	93158	Screw - Blower Housing Mounting Sem
11	280005	Tube - Breather	306	222830	Shield - Cylinder
12	27750	*Gasket - Crankcase Cover - 1/64" Thick	307	93163	Screw, Cylinder Shield Mtg. Sem
12	27876	*Gasket - Crankcase Cover - .005" Thick	308	222636	Cover, Cylinder Head
12	27877	*Gasket - Crankcase Cover - .009" Thick	332	92284	Nut, Flywheel
13	93211	Screw - Cylinder Head (2 - 21/32" Long)	333	298968	Armature Assembly
14	93723	Screw - Cylinder Head (3" Long)	334	93381	Screw, Armature Mounting Sem
15	91084	Plug, Oil Drain	337	293918	Plug, Spark (1 - 1/2" High - 38 M.M. Resistor)
16	391757	Crankshaft			NOTE: Ignition Cable Terminal No. 221798
18	298616	Sump - Oil (Inc. Key No's. 12 & 20)	340	26018	Spring - Breaker Arm
20	298423	Seal - Oil	341	93381	Screw - Breaker Arm Mounting Sem
22	93585	Screw - Sump	342	65704	Plunger - Breaker Point
24	61760	Key - Flywheel	345	222117	Cover - Breaker Point
25	391673	Piston Assy. - Std.	346	93014	Screw - Sem
25	391674	Piston Assy. - .010" O.S.	351	93735	Screw - Terminal
25	391675	Piston Assy. - .020" O.S.	352	66068	Washer - Insulating
25	391676	Piston Assy. - .030" O.S.	353	92791	Washer - Lock Shakeproof
26	391669	Ring Set - Piston - Std.	354	90576	Nut - Hex 8 - 32
26	299743	Ring Set - Piston - Std. Chrome	355	66554	Collar - Insulating
26	391670	Ring Set - Piston - .010" O.S.	356	299500	Wire - Ground
26	391671	Ring Set - Piston - .020" O.S.	358	299577	Gasket Set
26	391672	Ring Set - Piston - .030" O.S.	363	19165	Puller - Flywheel
27	68546	Lock - Piston Pin	372	220477	Clamp - Condenser
28	295840	Pin Assembly - Piston - Standard	294628	294628	Breaker Points and Condenser Set
28	295841	Pin Assembly - Piston - .005" O.S.			NOTE: 299061 Ignition Kit Includes 294628 Point Set, 65704 Plunger, 61760 Key - Flywheel
29	390402	Rod Assy. - Connecting	422	222502	Clamp - Oil Filler Tube
		NOTE: For Connecting Rod with .020" Undersize Crankpin Bore - Order No. 390773	455	222561	Cup - Screen Mounting
31	222114	Lock - Connecting Rod Screw	468	222562	Screen - Flush Rotating
32	92659	Screw - Connecting Rod	516	260374	Spring - Connector
33	390419	Valve - Exhaust	520	93722	Terminal Spade
34	261055	Valve - Intake	523	391840	Cap and Dipstick - Oil Filler
35	65906	Spring - Intake Valve	524	68838	Seal - Filler Tube
36	26828	Spring - Exhaust Valve	525	280133	Tube - Oil Filler
40	221596	Retainer - Intake Valve	552	231055	Bushing - Gov. Crank (1/4" I.D.)
41	292260	Rotocoil - Exhaust Valve	562	92613	Bolt - Governor Lever
42	93630	Retainer - Exhaust Valve Rotocoil	592	231082	Nut, Hex 10 - 24
45	260933	Tappet - Valve	614	93306	Cotter - Hair Pin
46	211689	Gear - Cam	615	93307	Retainer - E-Ring
74	93042	Screw - Sems	635	66538	Elbow - Spark Plug
75	220865	Washer - Spring	657	93496	Screw - Sem
78	93808	Screw - Sem	663	93572	Screw
200	221760	Guide - Air	729	221907	Clip - Wire
201	260971	Link - Governor	741	261195	Gear - Timing
209	261306	Spring - Governor	757	211675	Link - Counterweight
219	392718	Oil Slinger - Gov. Gear and Bracket Assembly	758	390172	Counterweight Assy.
			759	298909	Pin - Counterweight
			760	230940	Spacer - Counterweight
			761	93874	Screw - Counterweight
222	390662	Plate - Gov. Control	842	270920	Seal - Filler Cap
225	231058	Crank - Gov. (1/4" Dia.)	847	392066	Filler Group - Oil
			851	221798	Terminal - Ignition Cable

\*INCLUDED IN GASKET SET - PART NO. 299577

## REPAIR PARTS


### 36" RIDING LAWN TRACTOR--MODEL NUMBER L8218BR BRIGGS & STRATTON 8 H.P. ENGINE--MODEL NO. 191707, TYPE NO. 5627-01 AIR CLEANER, CARBURETOR AND FLYWHEEL GROUP

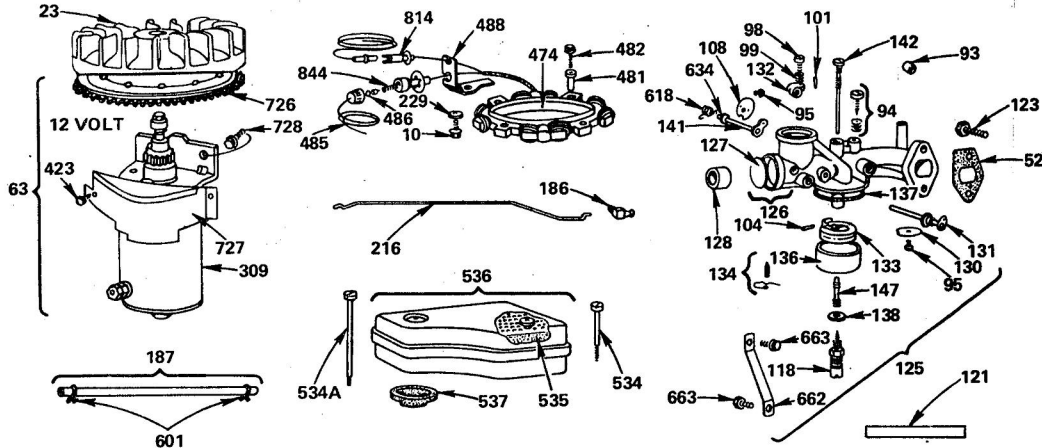

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
10	93394	Screw - Sem	216	261117	Link Choke
23	391983	Flywheel and Ring Gear Ass'y. - Magneto	229	220680	Washer, Flat
52	270824	Gasket - Carburetor Mounting	309	392749	Motor and Drive Ass'y. (See Break-down of Parts Below)
93	23108	Bushing - Throttle Shaft	423	93410	Screw - Sem
94	292681	*Valve Assembly - Carburetor Idle	474	391532	Stator - Alternator
95	93499	Screw - Throttle and Choke Valve Mtg. Sem	481	238970	Bushing - Stator
98	91920	Screw - Machine Fill. Hd. 8 - 32 x 5/8"	482	93621	Screw - Sem
99	26157	Spring - Throttle Adjustment	485	390888	Knob Ass'y. - Fuse
101	93043	Pin - Throttle Stop	486	391507	Diode - Alternator
104	230896	*Pin - Float Hinge	488	222211	Bracket - Output
108	222010	Valve Choke	534	93622	Screw - Air Cleaner
118	391233	*Valve Needle	534A	93323	Screw - Air Cleaner
121	299852	Carburetor Overhaul Kit	535	270528	Element - Air Cleaner
123	93357	Screw - Carburetor Mtg.	536	391399	Cleaner Assembly - Air
125	390811	Carburetor Assembly	537	270539	Support - Air Cleaner Element (Plastic)
126	299851	Body Assembly - Carburetor	601	93053	Gasket - Air Cleaner
127	221997	*Plug - Welch	618	261116	Clamp - Fuel Pipe
128	211682	Venturi - Carburetor	634	270382	Spring - Choke Return
130	221986	Valve - Throttle	662	222027	Washer - Choke Shaft
131	391512	Shaft and Lever - Throttle	663	93572	Bracket - Carburetor
132	211712	Stop - Throttle	726	392134	Screw
133	299707	Float - Carburetor	727	390233	Gear - Ring
134	299096	*Valve - Fuel Inlet	728	93523	Cover and Shield - Starter
136	221995	Bowl - Float	763	391604	Screw - Sem
137	270511	*Gasket - Float Bowl	814	390867	Electric Starter Kit - 12 Volt (Gear Drive)
138	222014	*Washer - Float Bowl	844	261269	Screw - Sem
141	390684	Shaft and Lever - Choke			Wire Assembly - 7 Amp. Alternator
142	299740	*Nozzle - Carburetor			Spring - Diode
147	230932	*Screw - Nozzle			
186	67218	Connector - Fuel Pipe			
187	296004	Pipe - Fuel			

\*Included in Carburetor Overhaul Kit - Part No. 299852

### STARTER MOTOR GROUP

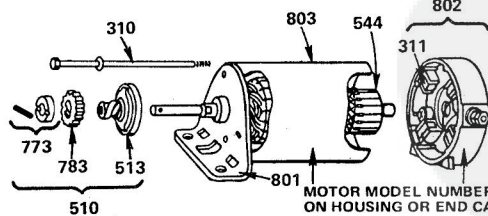

KEY NO.	PART NO.	DESCRIPTION
310	391706	Thru Bolt Ass'y.
311	391705	Brush Ass'y.
510	391461	*Drive Ass'y.
544	392747	Armature Ass'y.
801	391751	End Cap Ass'y. Drive
802	390846	*End Cap Ass'y. Commutator
803	392744	Housing Ass'y.

\*Includes Brush Set  
\*Includes No. 391135 Clutch Ass'y. (Key No. 513)  
No. 280104 Gear (Key No. 783)  
No. 391462 Retainer and Pin (Key No. 773)