

ILLUSTRATED PARTS BREAKDOWN

HUSQVARNA

13 HP LAWN RIDER



MODEL NO. LTH130 (HE13H36B)

954 82 00-01



REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
HOOD

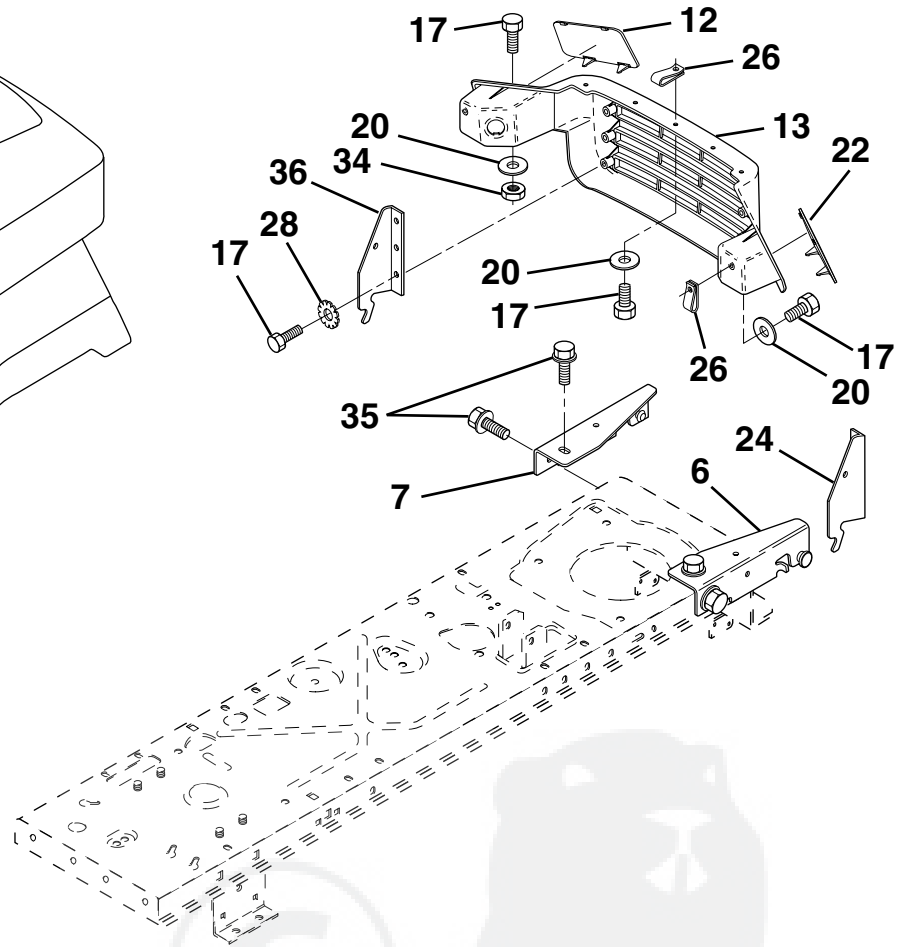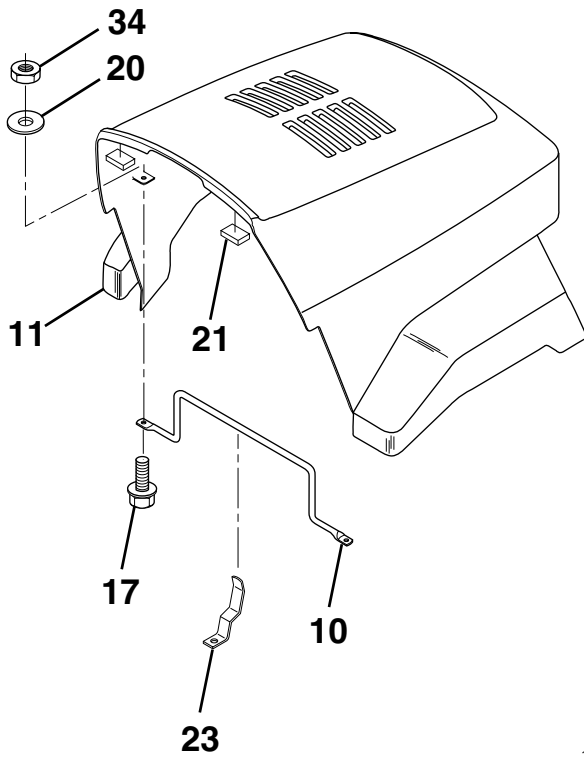


KEY NO.	PART NO.	DESCRIPTION
1	874780410	Bolt, Fin Hex 1/4-20 x 5/8
3	532128445	Bracket, Pivot Hood LH
4	819091016	Washer, Flat 1/4
5	817490512	Screw, Thdrol 5/16-28 x 3/4
6	532140051	Bracket, Asm. Pivot Hood RH
7	532140050	Bracket, Asm. Pivot Hood LH
8	873680400	Nut, Crownlock 1/4-20
10	532130850	Brace, Hood
11	532140142	Hood

KEY NO.	PART NO.	DESCRIPTION
12	532130986	Lens, LH
13	532130984	Grille
21	532126938	Bumper, Hood
22	532130985	Lens, RH
23	532139969	Latch, Hood
24	532142873	Bracket, Pivot Hood RH
26	532052921	Clip, Tinnerman
28	811050400	Washer, Lock, Ext. Tooth

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
FENDER/CHASSIS

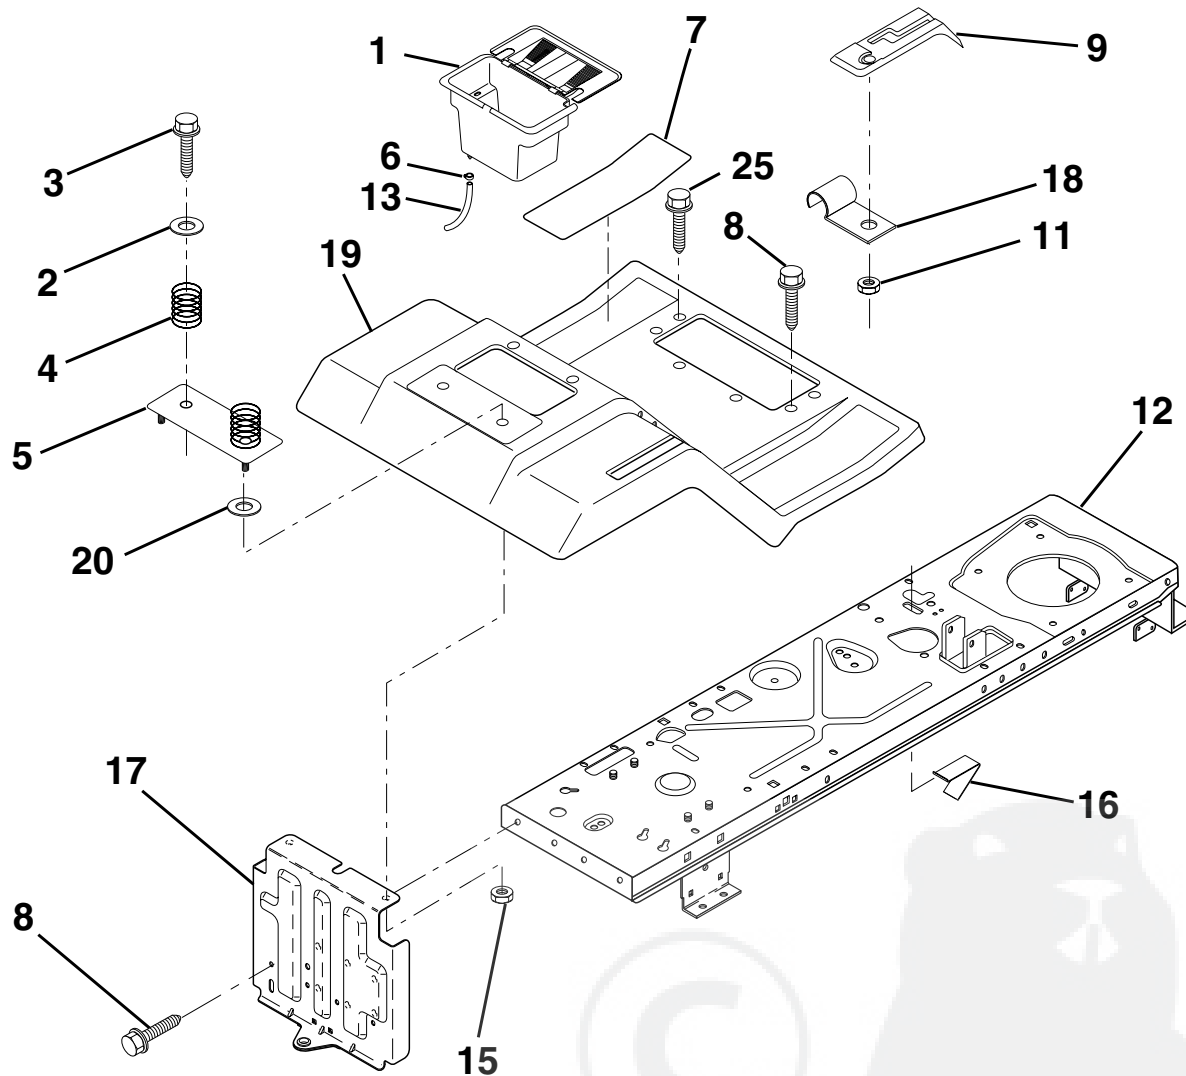


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532144940	Case, Battery	11	532124346	Nut, Self-Threading, Wsher Hd 3/16
2	819132012	Washer 13/32 x 1-1/4 x 12 Ga.	12	532145190	Assembly, Frame
3	817490612	Screw, Hex Wsh. Thrdrol 3/8-16 x 3/4	13	532109238	Tube, Battery Drain
4	532124181	Spring, Compression, Seat	15	873640400	Nut, Keps 1/4-20 UNC
5	532125142	Plate, Asm. Battery	16	532141736	Switch, Actuator
6	532109596	Clamp, Hose	17	532140782	Drawbar
7	532126700	Pad, Footrest	18	532126470	Clip, Insulated
8	817490512	Screw, Thdrol 5/16-18 x 3/4	19	532141393	Fender/Footrest
9	532140919	Console, Shift Control	20	819091413	Washer 9/32 x 7/8 x 13 Ga.
			25	817190516	Screw, Hex. S.T. 5/16-18 UNC x 1

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
SEAT

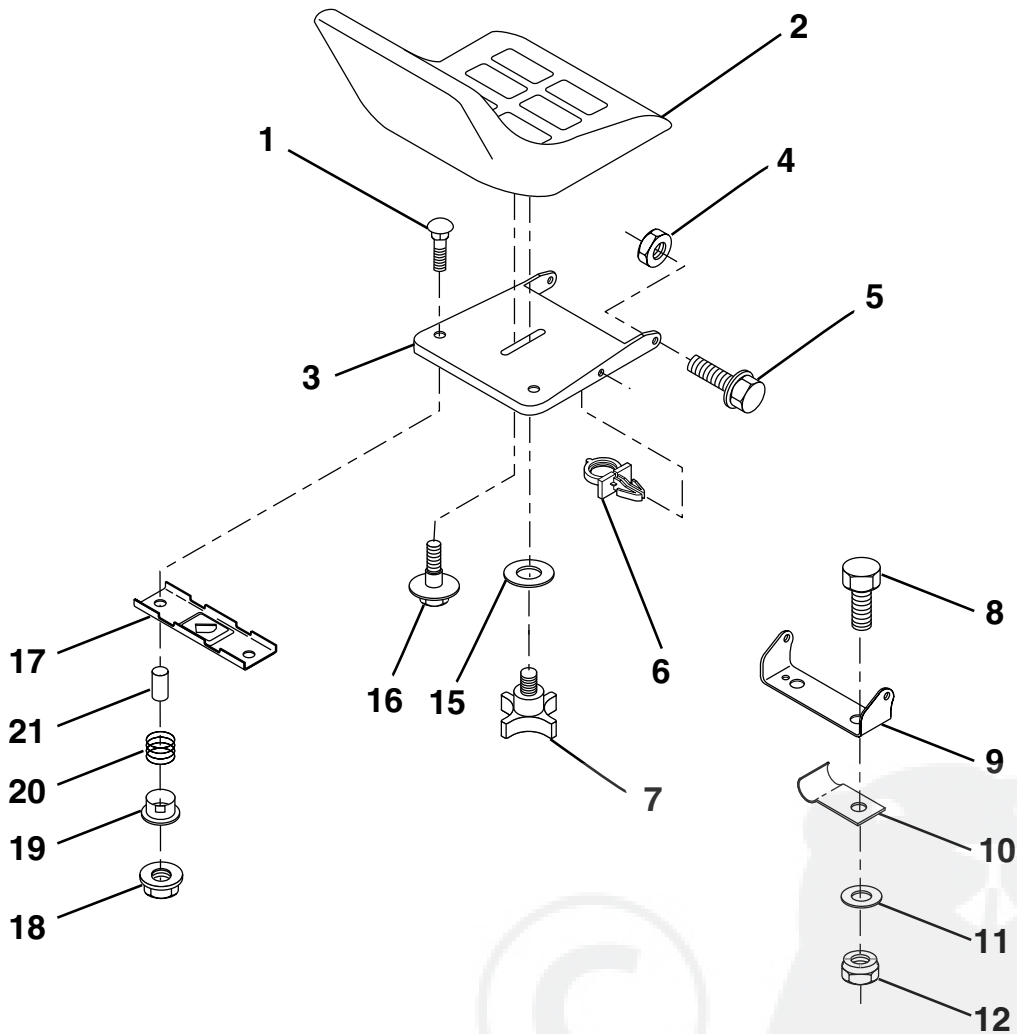


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	872050411	Bolt, Carriage 1/4-20 x 1-3/8	11	819133210	Washer 12/32 x 2 x 10 Ga.
2	532140838	Seat	12	873800600	Nut, Lock Hex w/Wsh 3/8-16
3	532140552	Pan, Seat	15	819171912	Washer, 17/32 x 1-3/16 x 12 Ga.
4	873800500	Nut, Lock, Hex. w/Ins. 5/16-18	16	532127018	Bolt, Shoulder
5	532139888	Bolt, Shoulder 5/16-18 UNC	17	532121246	Bracket, Switch Mounting
6	532145006	Clip, Push-in, Hinged	18	532123976	Nut, Lock, Hex. Large Flange
7	532120068	Knob, Seat	19	532121248	Bushing, Snap
8	874760616	Bolt, Fin. Hex. 3/8-16 UNC x 1	20	532121250	Spring, Compression
9	532140551	Bracket, Pivot Seat	21	532134300	Spacer, Split 28 Id. x .88 Lg.
10	532126471	Clip, Fuel Line			

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
DASH

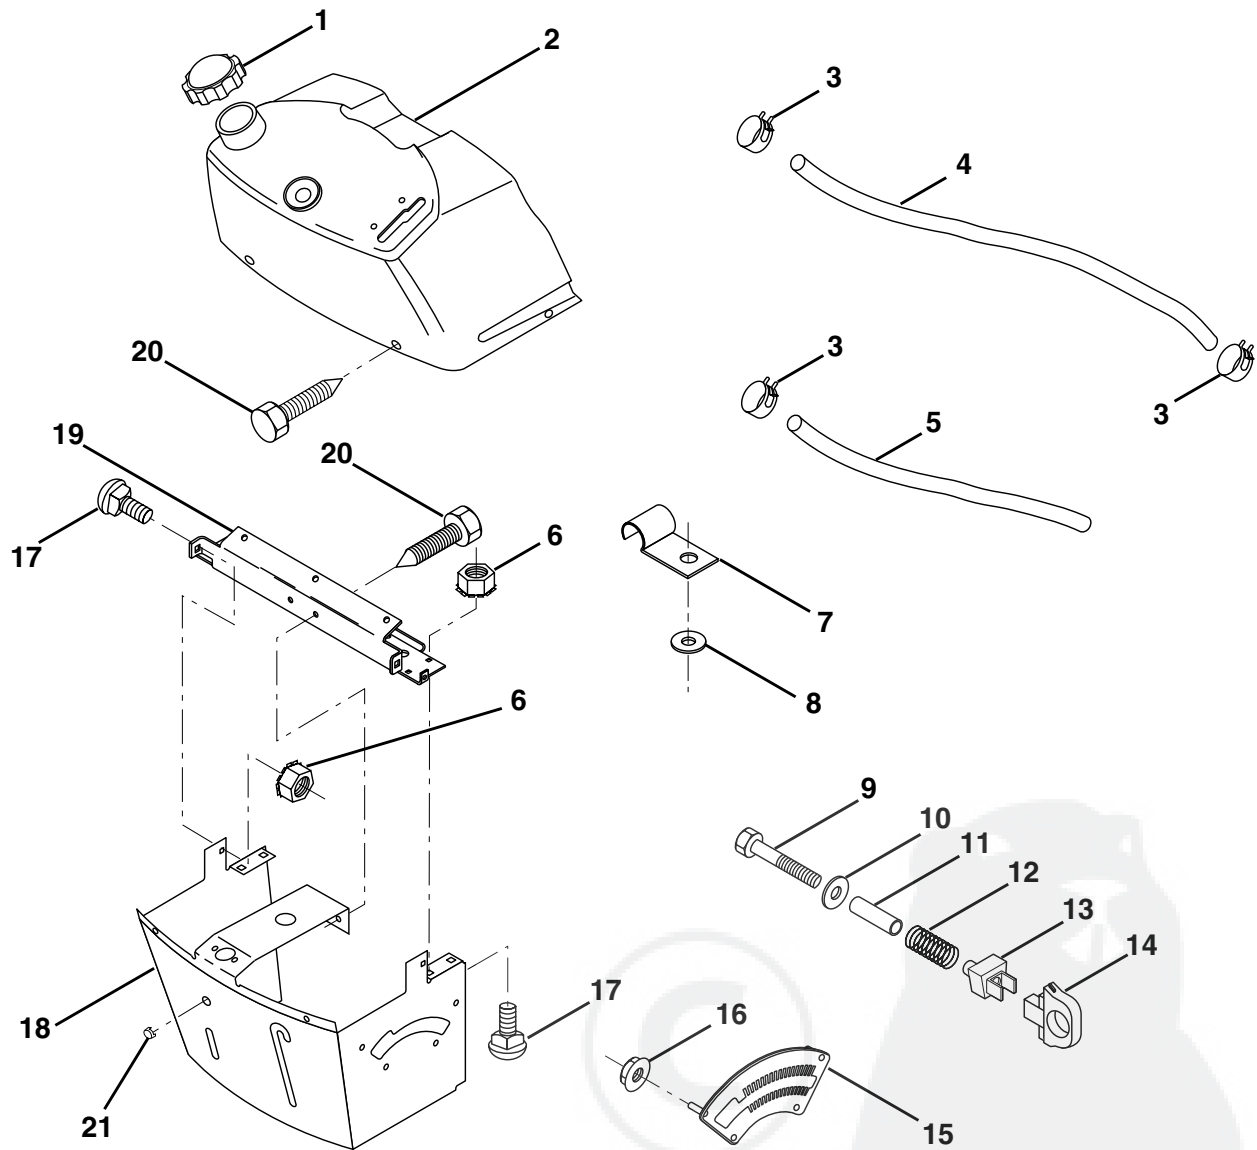


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532142187	Cap, Fuel	11	532121249	Spacer, Split
2	532138395	Assembly, Dash & Fuel Tank	12	532003720	Spring
3	532123487	Clamp, Hose	13	532126450	Clip, Height Adjustment
4	532008544	Line, Fuel	14	532126115	Knob, Height Stop
5	532008548	Line, Fuel	15	532122023	Adjustment, Quadrant Height
6	873640400	Nut, Hex, Keps 1/4-20	16	532124346	Nut, Self-Threading 3/16-18
7	532124996	Clip, Fuel Line	17	872110404	Bolt, Carriage 1/4-20 x 1/2 Gr. 5
8	819091216	Washer 9/32 x 3/4 x 16 Ga.	18	532130745	Support, Assembly Dash
9	874760428	Bolt, Hex, Fin 1/4-20 x 1-3/4	19	532134744	Brace, Cross
10	819091413	Washer 11/32 x 11/16 x 16 Ga.	20	817060408	Screw, Self-Tapping 1/4-20 x 1/2
			21	532134014	Plug, Dome, Black

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
STEERING WHEEL

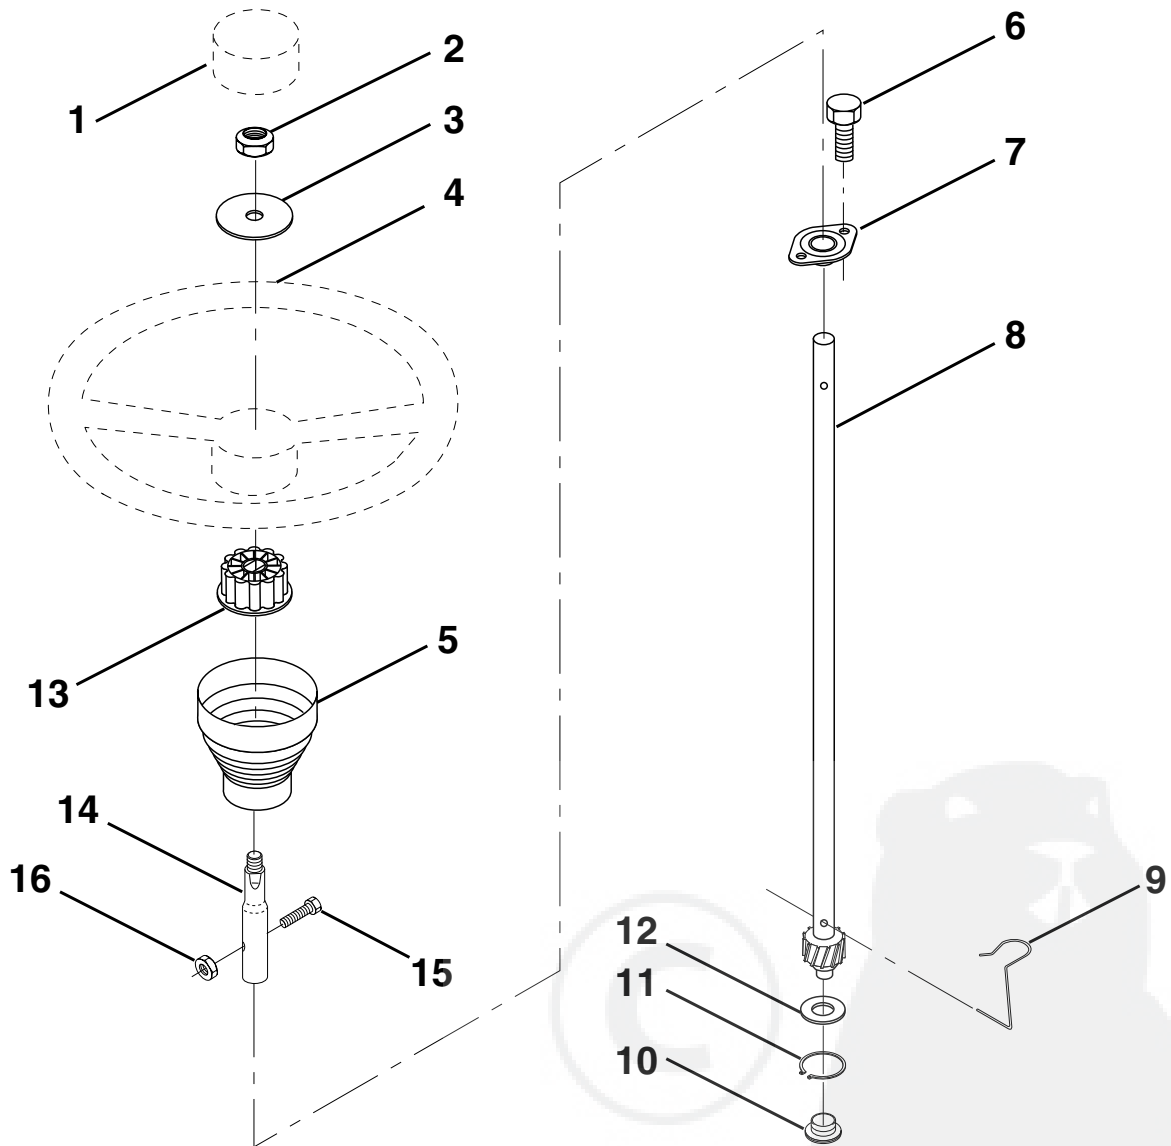


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532124416	Insert, Wheel, Steering	10	532123438	Bushing, Lower, Steering
2	532124701	Nut, Lock 3/8-24 UNF	11	812000045	Ring, Retaining
3	819133808	Washer 12/32 x 2-3/8 x 8 Ga.	12	819211616	Washer 21/32 x 1 x 16 Ga.
4	532124415	Wheel, Steering	13	532104820	Adaptor, Wheel, Steering
5	532127396	Sleeve, Steering	14	532147392	Extension Shaft Steering
6	817431008	Screw, Hex #10-16 x 1/2 TY-B	15	874780520	Bolt, Fin Hex
7	532102803	Bushing, Steering	16	873800500	Nut Lock Hex w/Ins 5/16-18 UNC
8	532147391	Shaft, Steering			
9	532124210	Clip, Steering			

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
SECTOR GEAR/AXLE SUPPORT

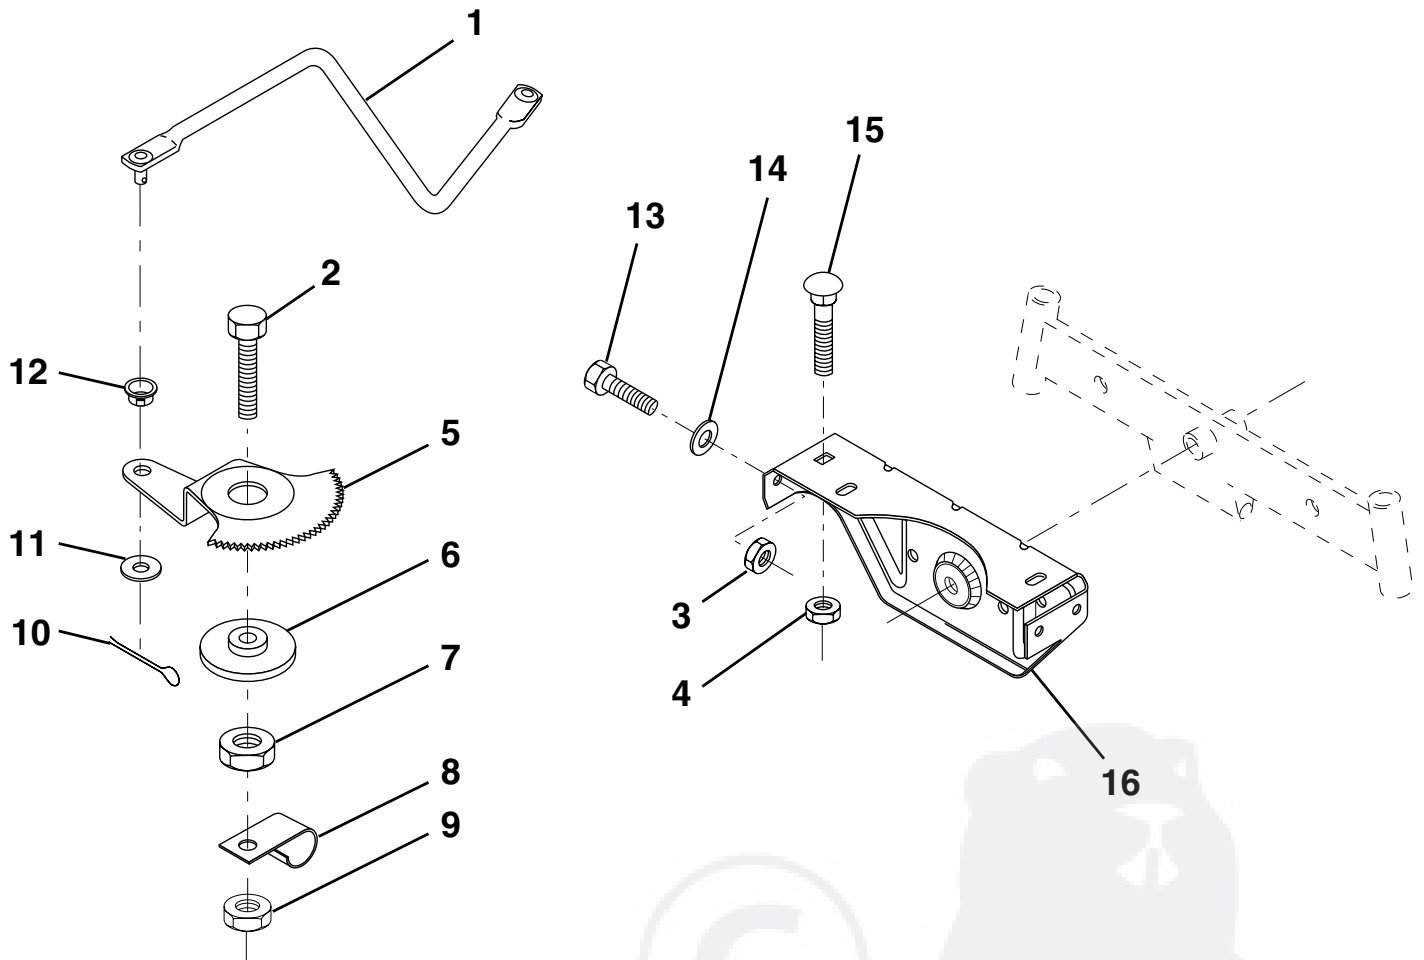


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532132566	Link, Drag	9	873680800	Nut, Crownlock 3/8-16
2	874780828	Bolt, Fin Hex 1/2-13 x 1-3/4	10	876020412	Pin, Cotter 1/8 x 3/4
3	873680500	Nut, Crownlock 5/16-18	11	819131316	Washer, 13/32 x 13/16 x 16 Ga.
4	873680600	Nut, Crownlock 3/8-16	12	532126847	Bushing
5	532121926	Gear, Sector	13	874760512	Bolt, Hex Hd. 5/16-18 UNC x 3/4
6	532121927	Bushing	14	819111416	Washer 11/32 x 7/8 x 16 Ga.
7	873030800	Nut, Heavy Hex Top Lock 1/2-13 UNC	15	872110606	Bolt, Carriage 3/8-16 UNC x 3/4
8	532126472	Clip, Insulated	16	532137096	Support, Front Axle

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
FRONT AXLE

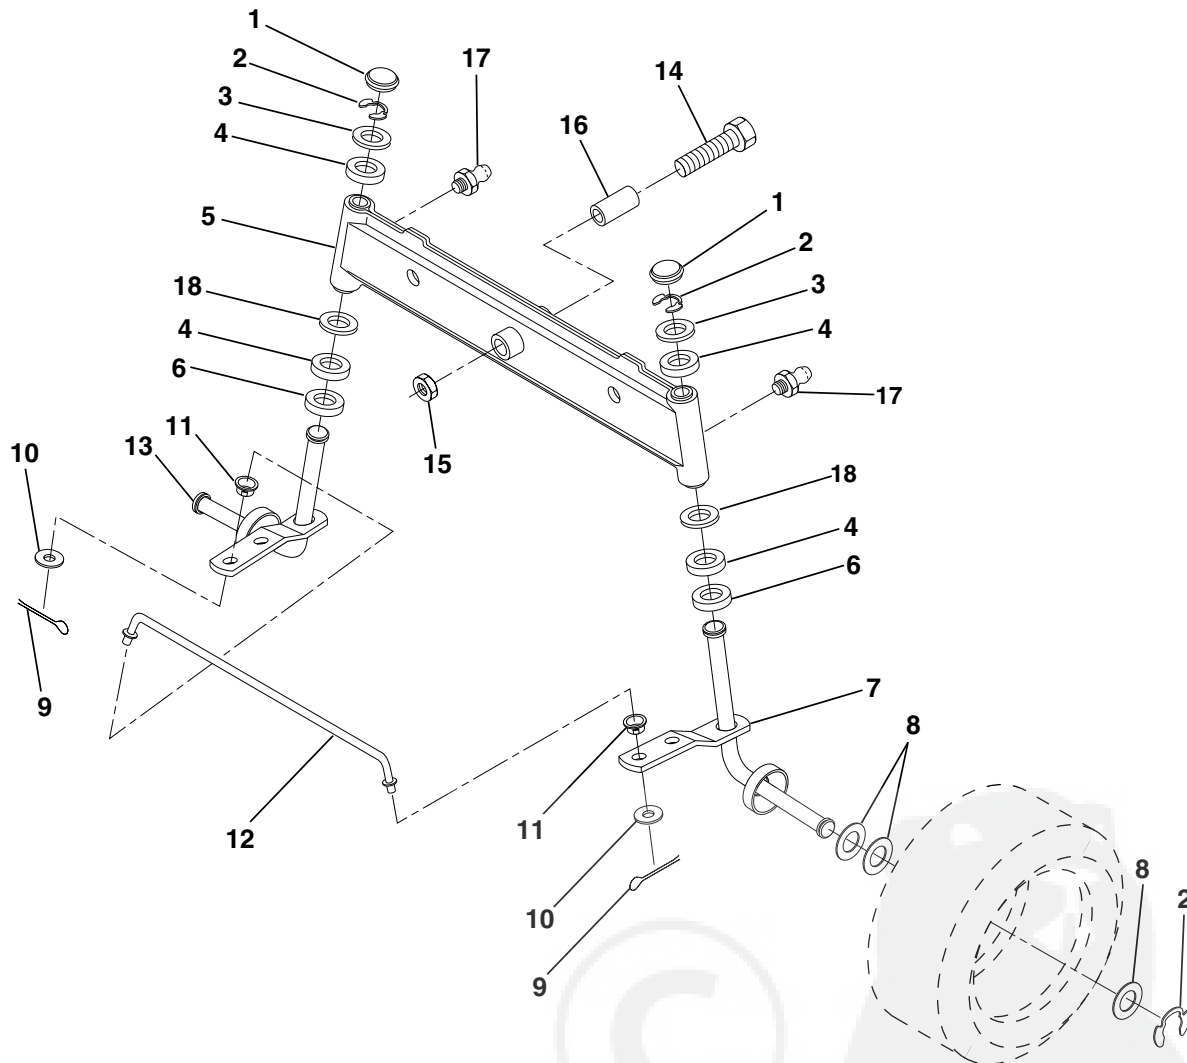


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532121232	Cap, Spindle	11	532126847	Bushing
2	812000029	Ring, Clip	12	532130465	Rod, Tie
3	532121748	Washer 25/32 x 1-5/8 x 16 Ga.	13	532137061	Spindle, L.H. Asm.
4	532124937	Nyliner	14	874011056	Bolt Hex 5/1-11 x 3-1/2
5	532142033	Axle, Front	15	873901000	Nut, Lock Flange 5/8-11
6	532124931	Bearing, Thrust	16	532110438	Spacer Bearing Axle
7	532137062	Spindle, R.H. Asm.	17	532124836	Fitting Grease
8	532121749	Washer 25/32 x 1-1/4 x 16 Ga.	18	819272016	Washer 27/32 x 1-1/4 x 16 Ga.
9	876020412	Pin, Cotter 1/8 x 3/4			
10	819131316	Washer 13/32 x 13/16 x 16 Ga.			

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
BRAKE / REAR MOWER LIFT ASSEMBLY

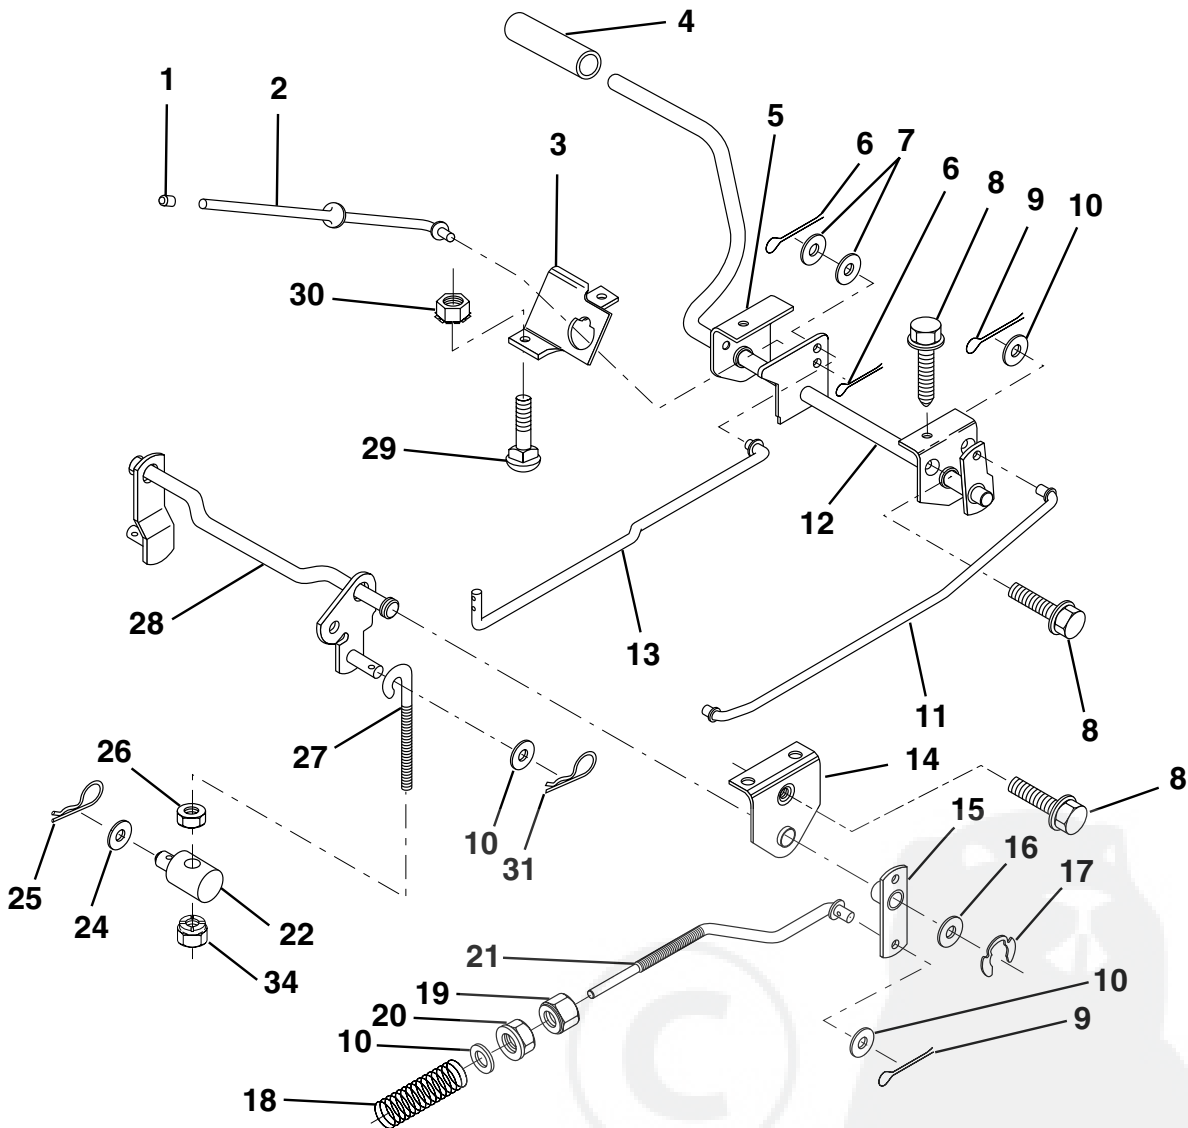


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532071673	Cap, Plunger	16	819251816	Washer 25/32 x 1-1/8 x 16 Ga.
2	532123436	Rod, Parking Brake	17	812000034	Ring, Klip
3	532123437	Bracket, Parking Brake	18	532151332	Spring, Brake Rod
4	532008156	Cover, Pedal	19	873350600	Nut, Hex, Jam 3/8-16 UNC
5	532122504	Bracket, Clutch/Brake Pedal, L.H.	20	873800600	Nut Lock Hex w/Ins. 3/18-16 UNC
6	876020312	Pin, Cotter 3/32 x 3/4	21	532144413	Rod, Brake
7	819131016	Washer 13/32 x 5/8 x 16 Ga.	22	532144585	Trunnion, Lift
8	817490508	Screw, Hex. Thdrol. 5/16-18 x 1/2	24	819132012	Washer 13/32 x 1-1/4 x 12 Ga.
9	876020412	Pin, Cotter 1/8 x 3/4	25	532124961	Retainer, Spring
10	819131316	Washer 13/32 x 13/16 x 16 Ga.	26	873930600	Nut, Centerlock 3/8-16 UNC
11	532123543	Rod, Brake, Front	27	532127369	Link, Threaded
12	532139933	Assembly, Clutch/Brake	28	532140776	Assembly, Rear Mower Lift
13	532123394	Rod, Clutch	29	872110506	Bolt, Carriage 5/16-18 UNC x 3/4
14	532121978	Bracket, Lift Shaft	30	873510500	Nut, Keps 5/16-16 UNC
15	532133332	Assembly, Brake Pivot Arm	31	532124660	Retainer, Spring, Zinc
			34	873680600	Nut, Crownlock 3/16-18

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
ENGINE

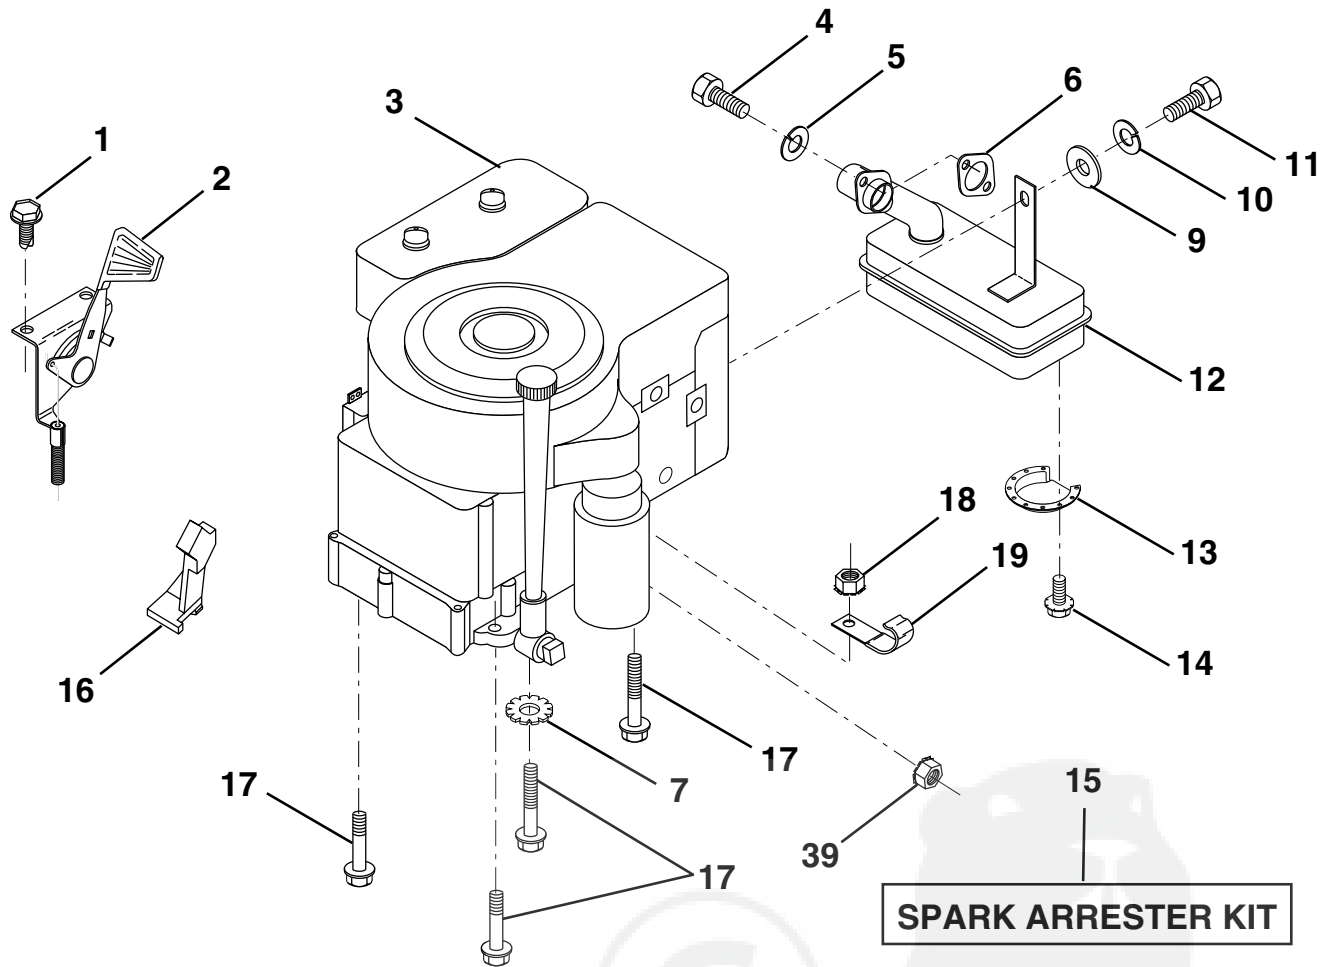


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	817060408	Screw, Hex, Thd. Cut 1/4-20 x 1/2	11	-----	Screw (Order from Engine Mfg.)
2	532133025	Control, Throttle	12	532137437	Muffler
3	-----	Engine, B&S, Model No. 28M707	13	532101326	Deflector, Muffler
4	871070512	Screw, Hex. Hd. Cap 5/16- 18 x 3/4	14	817030808	Screw, Spiderloc, Hex Hd. #8 x 1/2
5	810040500	Washer, Lock, Heavy Helical Spring 5/16	15	532137180	Arrester, Spark (Optional equipment)
6	532272293	Gasket, Exhaust	16	532127951	Stop, Throttle
7	811050600	Washer, Lock Ext. Tooth 3/8	17	817490624	Screw, Hex Washer Head, Thdrol. 3/8-16 x 1-1/2
9	819101216	Washer 5/16 x 3/4 x 16	18	873510600	Nut, Keps Hex 3/8-16 UNC
10	810040400	Washer, Lock, Heavy Helical Spring 1/4	19	532124996	Clip, Fuel Line
			39	532128861	Nut, Flange 1/4-20

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
GROUND DRIVE

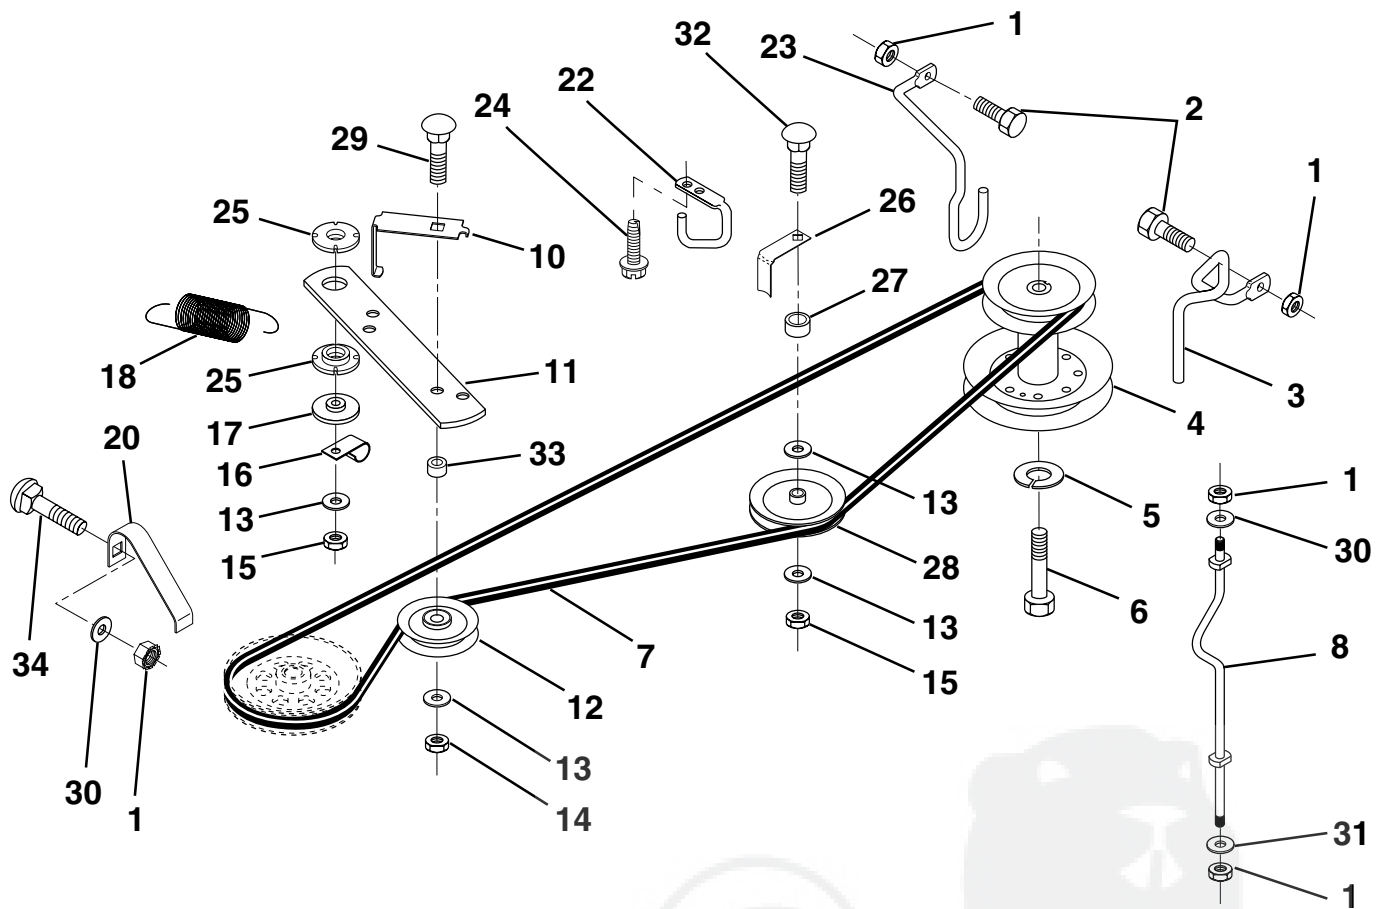


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	873800500	Nut, Lock, Hex. w/Ins. 5/16-18	17	532150932	Spacer, Retainer
2	874760512	Bolt, Hex. Hd 5/16-18 x 3/4	18	532131459	Spring, Extension
3	532141297	Keeper,Belt, Mower Drive, R. H.	20	532140909	Keeper, Belt, L.H.
4	532138029	Pulley, Engine	22	532123404	Keeper, Belt, Frame, Ground Drive
5	810040700	Washer, Lock 7/16	23	532140916	Keeper, Belt, Front, L. H.
6	871170744	Bolt, Hex.,7/16-20 Gr.5	24	817720408	Screw, Thd. Cut 1/4-20 x 1/2
7	532140910	Traction, V-Belt Drive	25	532150935	Bushing, Nylon
8	532140785	Keeper, Belt, R.H. Hydro	26	532140913	Keeper, Belt
10	532140780	Keeper, Belt, Ground Drive, Idler	27	532140914	Spacer
11	532150926	Arm, Ground Drive Clutch	28	532139123	Pulley, V-Idler
12	532123674	Idler, Flat	29	872140618	Bolt, Carr. 3/8-16 UNC x 2-1/4
13	819131316	Washer 13/32 x 13/16 x 16 Ga.	30	819111116	Washer
14	873930600	Nut, Centerlock 3/8-16 UNC	31	819111216	Washer
15	873680600	Nut, Lock, Hex. w/Wsh 3/8-16	32	872140620	Bolt, Carriage
16	532126471	Clip, Insulated	33	532000160	Sleeve, Pivot
			34	872140506	Bolt, Carriage

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01

TRANSAXLE

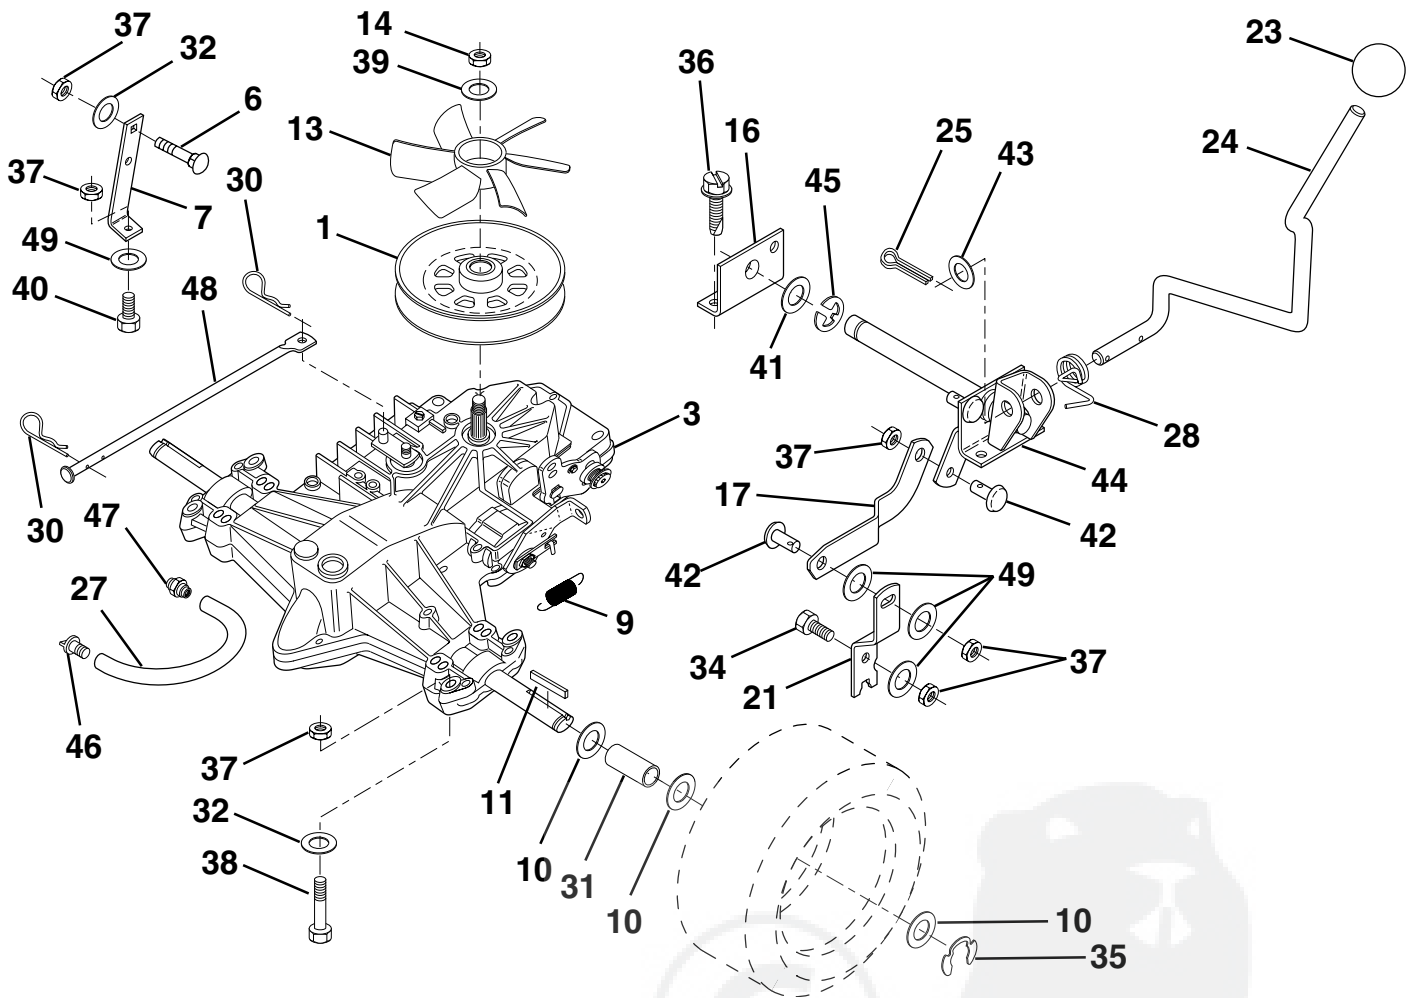


KEY NO.	PART NO.	DESCRIPTION
1	532140779	Pulley, V-Groove
3	532140607	Transaxle, Hydro 0310-0500
6	872140506	Bolt, Carriage
7	532140774	Strap, Torque
9	532146682	Spring, Brake
10	532121749	Washer 25/32 x 1-1/4 x 16 Gauge
11	532123583	Key, Square
13	532140778	Fan, Transaxle, Hydro
14	532009204	Nut
16	532140763	Support, Shift Handle
17	532140767	Link, Shift
21	532140773	Lever, Shift
23	532121274	Knob, Shifter
24	532140765	Rod, Shifter
25	876020416	Pin, Cotter
27	532142564	Hose, Vent
28	532140772	Spring, Torsion
30	532124788	Retainer, Spring

KEY NO.	PART NO.	DESCRIPTION
31	532121199	Spacer
32	819111116	Washer
34	874760516	Bolt, Rdhd 5/16-18 x 1
35	812000001	E-Ring
36	817720408	Screw, Thd. Cut 1/4-20 x 1/2
37	873800500	Nut
38	874490544	Bolt, Hex Flghd 5/16-18
39	819171912	Washer
40	874760524	Bolt
41	819212013	Washer 21/32 x 1-1/4 x 13 Gauge
42	532140769	Pin, Pivot
43	819171216	Washer
44	532140764	Pivot Shaft Assembly
45	812000002	E-Ring
46	-----	Cap, Vent Hose
47	-----	Nipple, Vent Hose
48	532140912	Actuator, Bypass, Hydro
49	819111216	Washer

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
MOWER LIFT LEVER

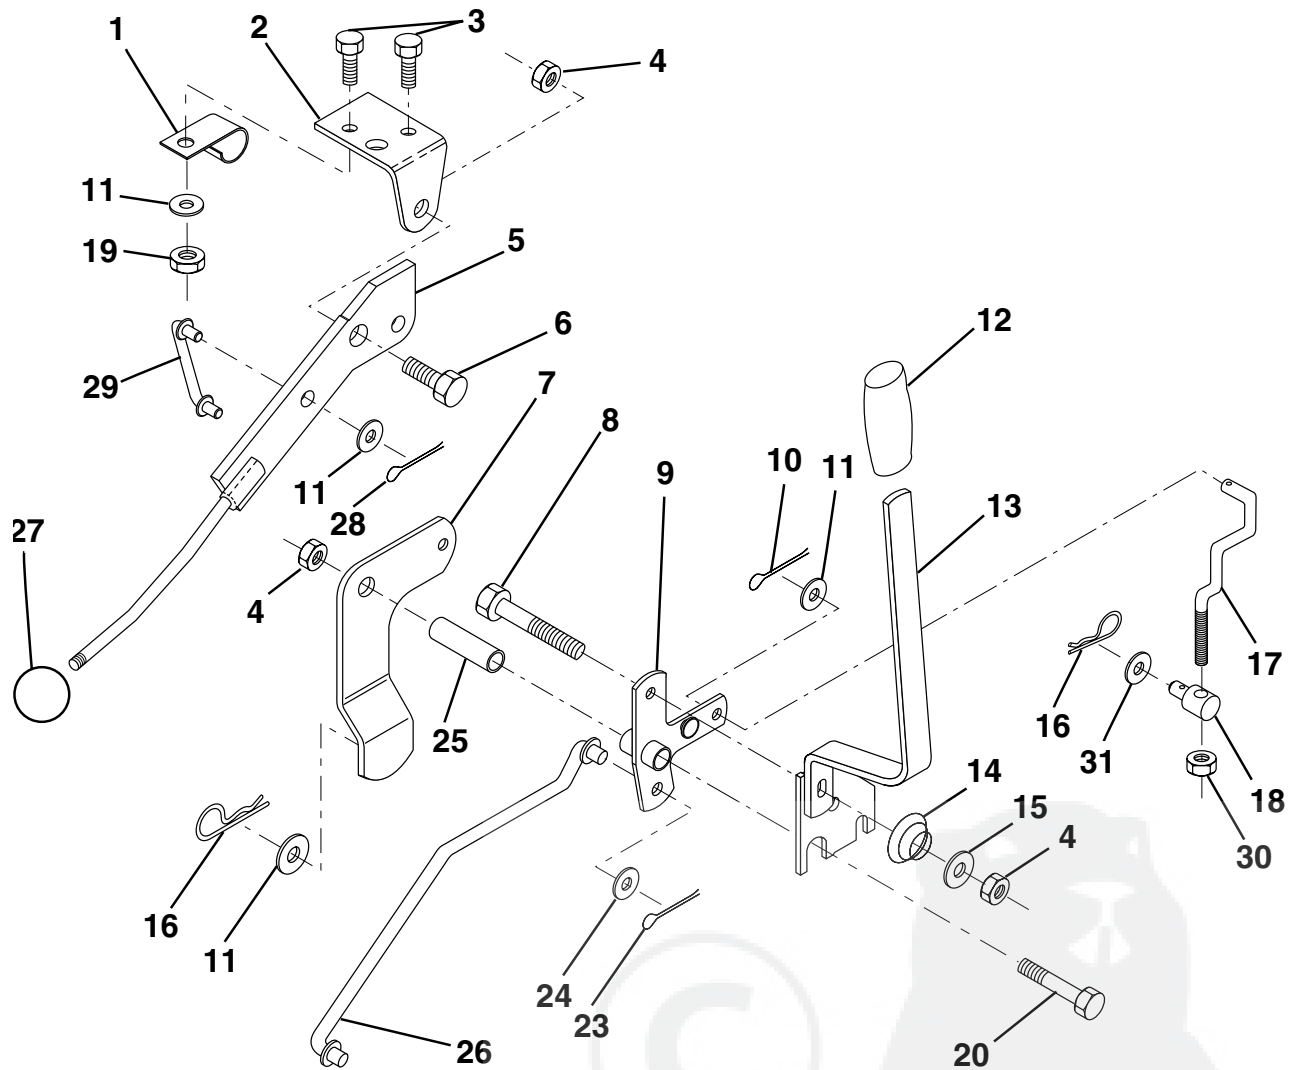


KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	532126470	Clip, Insulated	16	532124961	Retainer, Spring
2	532122018	Bracket, Mower Clutch	17	532127359	Link, Front Lift
3	871110408	Bolt, Fin. Hex 1/4-20 UNC x 1/2	18	532142028	Trunnion, Threaded 3/8-16
4	873680600	Nut, Crownlock 3/8-16	19	873680400	Nut, Crownlock 1/4-20
5	532145187	Assembly, Clutch Lever	20	874760644	Bolt, Fin. Hex 3/8-16 UNC x 2-3/4
6	532106451	Bolt, Shoulder	23	876020416	Pin, Cotter 1/8 x 1
7	532135371	Assembly, Mower Clutch Arm	24	819171612	Washer 17/32 x 1 x 12 Ga.
8	874760636	Bolt, Hex 3/8-16 UNC x 2-1/4	25	532121933	Tube, Spacer
9	532121930	Assembly, Bellcrank Lift	26	532141470	Rod, Mower Lift
10	876020412	Pin, Cotter 1/8 x 3/4	27	532121466	Knob
11	819131316	Washer 13/32 x 13/16 x 16 Ga.	28	876020312	Pin, Cotter 3/32 x 3/4
12	532122027	Grip, Handle	29	532131655	Link, Mower Clutch
13	532139352	Assembly, Lift Handle	30	873350600	Nut, Hex Jam 3/8-16 x 1.30
14	532123496	Spring, Compression	31	819132012	Washer 13/32 x 1-1/4 x 12 Ga.
15	819131212	Washer 13/32 x 3/4 x 12 Ga.			

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
MOWER DECK

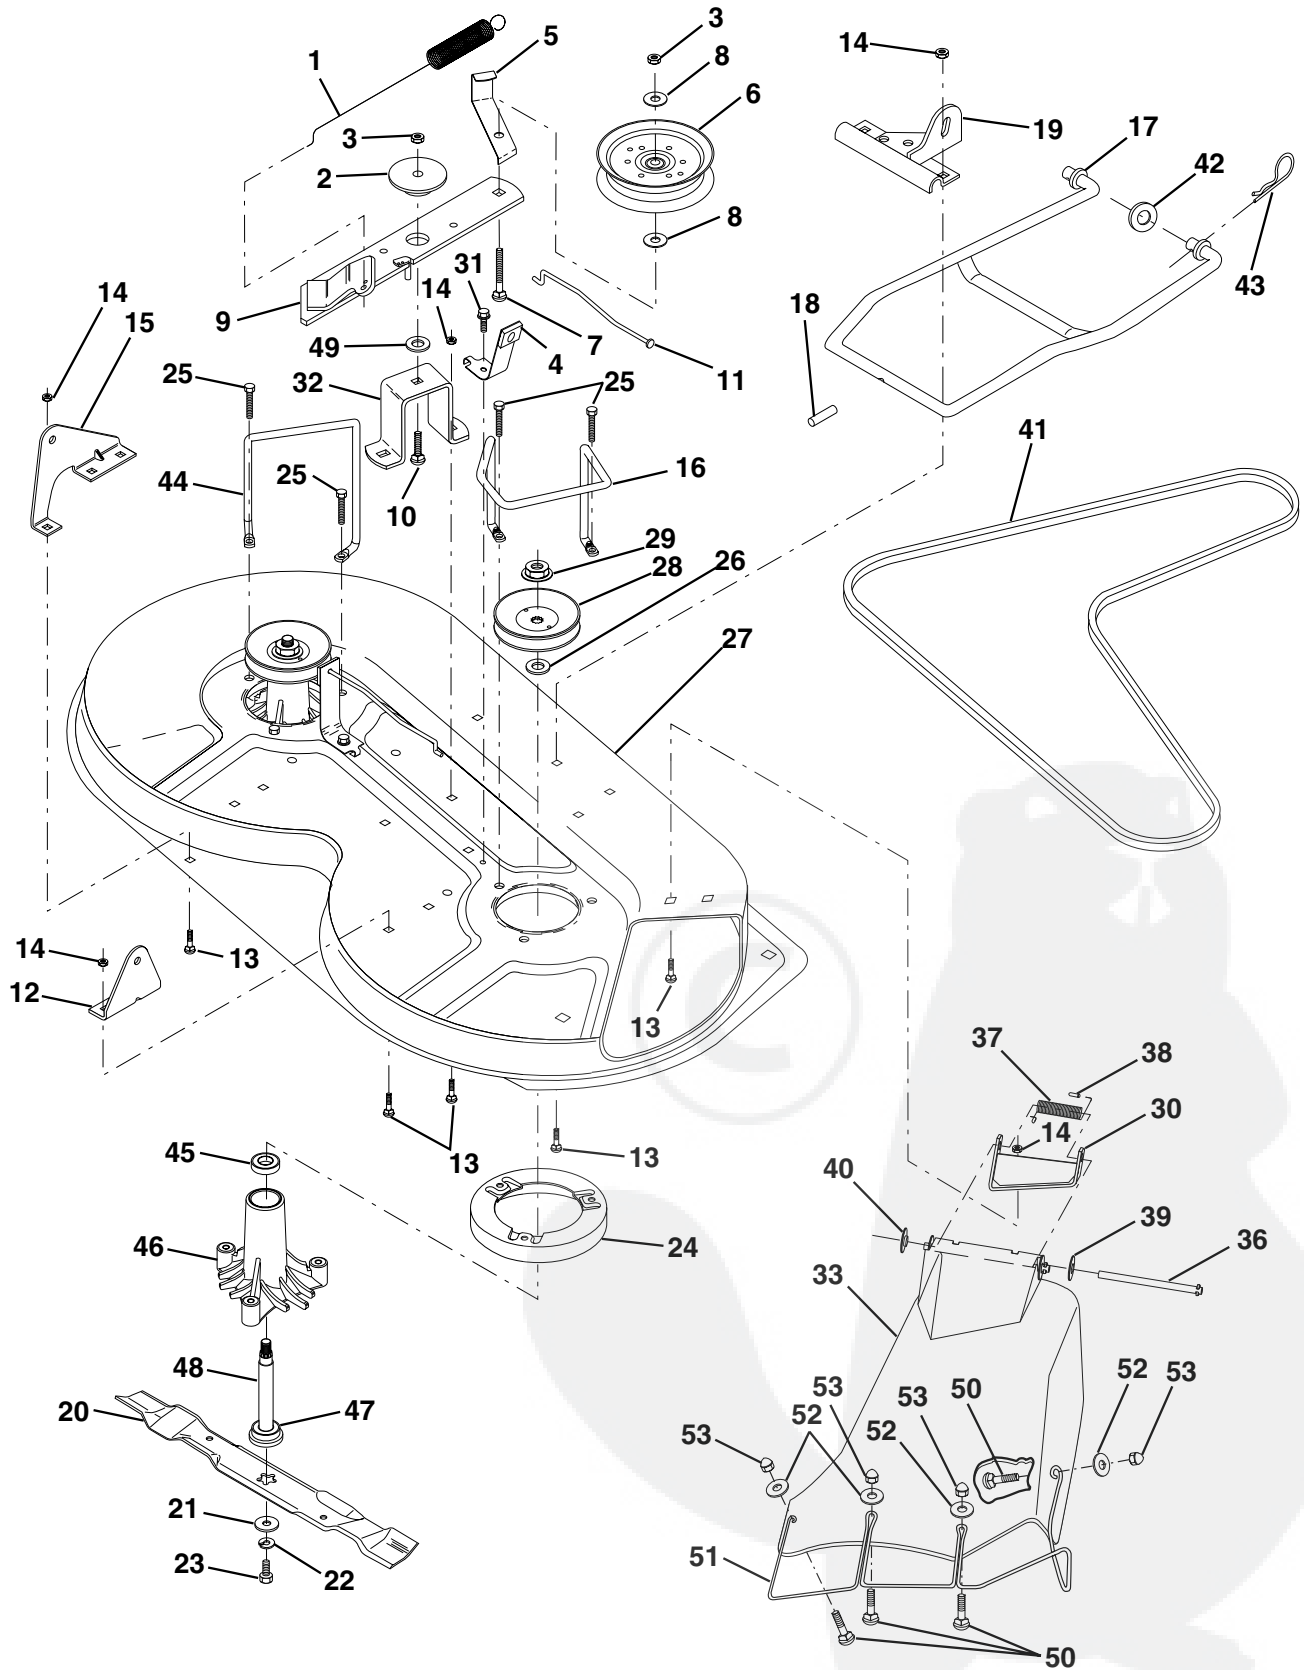

REPAIR PARTS


TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00 -01
MOWER DECK

KEY NO.	PART NO.	DESCRIPTION
1	532140064	Spring, Mower Clutch
2	532122052	Spacer, Retainer
3	873680600	Nut, Crownlock 3/8-16
4	532130840	Brake Asm.
5	532131251	Guide, Belt Idler
6	532121316	Pulley, Flat Idler
7	872110616	Bolt, Carr. 3/8-16 x 1-3/4 Gr. 5
8	819131410	Washer 13/21 x 7/8 x 10 Ga.
9	532127744	Arm Asm., Idler Mower
10	872140610	Bolt, Carriage 3/8-16 x 1-1/4
11	532130841	Rod, Brake
12	532127356	Bracket, Lift R. H. Rear
13	872140506	Bolt, Carriage 5/16-18 x 3/4
14	873680500	Nut, Crownlock 5/16-18
15	532127357	Bracket, Lift L. H. Rear
16	532140609	Keeper, R. H.
17	532128508	Link, Asm. Mower Stabilizer
18	532128511	Pin, Drive
19	532127380	Bracket, Asm. Front
20	532138496	Blade Hi Lift
21	532140296	Washer, Hard
22	810030600	Washer, Lock 3/8
23	532850857	Bolt 3/8-24 x 1-1/4 Gr. 8
24	532140329	Stripper
25	532138776	Screw Thdrol Hex Hd
26	532129963	Washer .150 Thk.
27	532129983	Deck Assembly
28	532129207	Pulley, Mandrel
29	532137266	Nut, Flangelock 9/16
30	532136631	Bracket, Asm. Deflector
31	817490508	Screw, Hex Wsh. Thdrol. 5/16-18 x 1/2
32	532122051	Arm, Support Idler Mower
33	532139083	Deflector
36	532121980	Rod, Hinge
37	532123713	Spring, Torsion Deflector
38	532105304	Cap, Sleeve
39	819111016	Washer 11/32 x 5/8 x 16 Ga.
40	532110452	Pushnut
41	532131264	V-Belt
42	819171616	Washer 11/32 x 5/8 16 Ga.
43	532124660	Retainer, Spring
44	532140608	Keeper, L. H.
45	532110485	Bearing
46	532128774	Housing Mandrel Vented
47	532129895	Bearing
48	532137645	Shaft, Mandrel (Includes Key # 47)
49	532133943	Washer Hardened
50	871161010	Screw Truss Head Phil #10-24 x 5/8
51	532136383	Guard, Deflector, Mower TUV
52	819070718	Washer 7/32 x 7/16 x 18
53	532060867	Nut, Acorn Hex #10-24
--	532130794	Mandrel Asm. (Includes Key No.'s 22-23, 26, 29 and 45-48)
--	532144973	Deck, Mower Complete

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00-01
ELECTRICAL

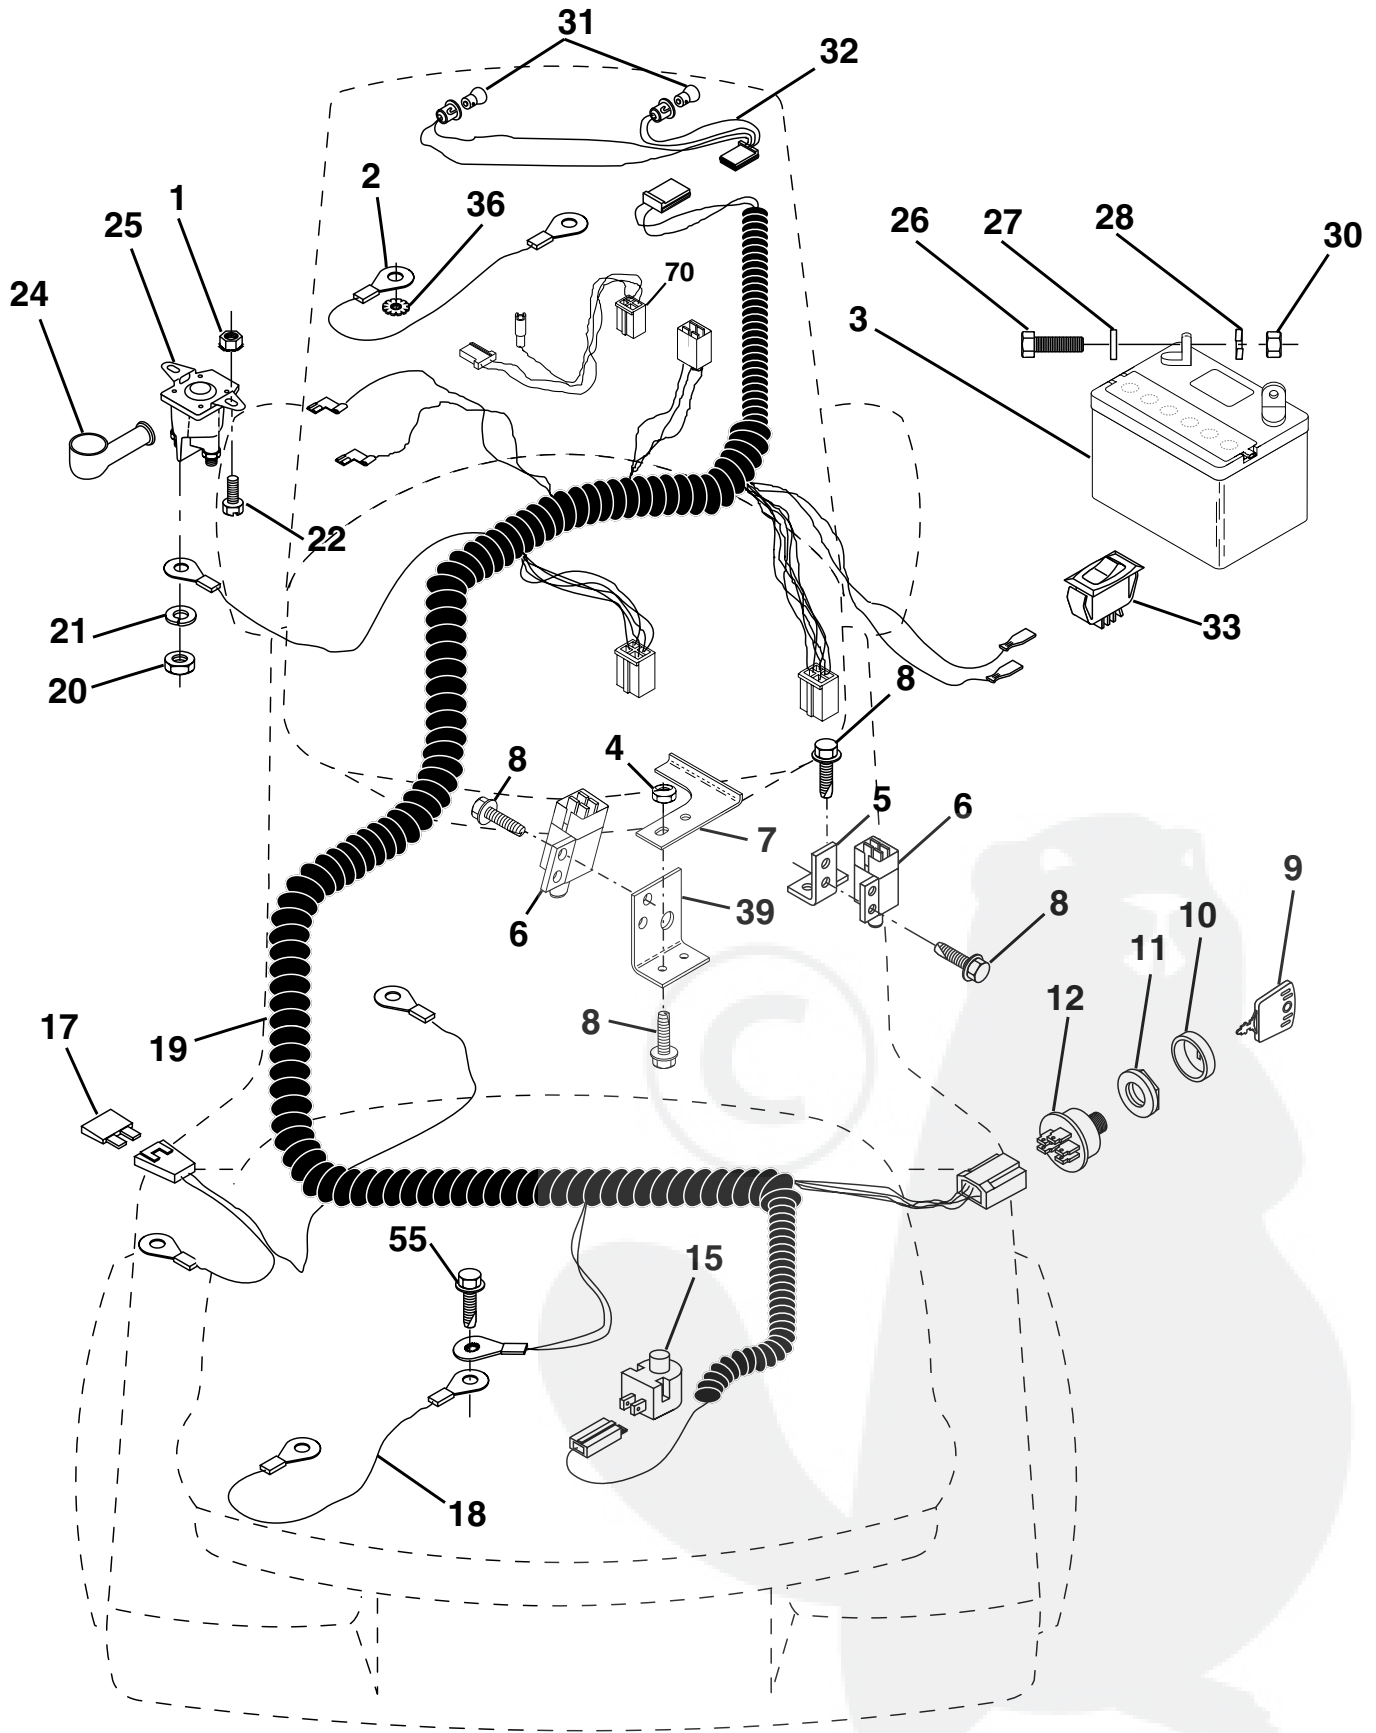

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00-01
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	873640400	Nut, Hex, Keps 1/4-20
2	532108423	Assembly, Cable
3	532144924	Battery
4	532069180	Nut Lock #10-24 UNC
5	532108236	Bracket, Switch
6	532109553	Switch, Interlock, 4 Terminal
7	532146374	Keeper Actuator
8	817021008	Screw, Hex Head,Tapping #10-24 x 1/2
9	532140401	Key, Steel Delta
10	532141226	Cover, Ignition Key
11	532140400	Nut, Ignition
12	532144921	Switch, Ignition
15	532121305	Switch, Plunger
17	532108824	Fuse
18	532128353	Assembly, Cable
19	532146064	Harness, Ignition
20	873350400	Nut, Hex, Jam 1/4-20
21	810090400	Washer, Lock 1/4
22	871110408	Bolt, Hex, Fin. 1/4-20 UNC x 1/2 Grade 5
24	532131563	Cover, Terminal
25	532145763	Solenoid
26	874760412	Bolt, Hex Head 1/4-20 UNC x 3/4
27	819091016	Washer 9/32 x 5/8 x 16 Gauge
28	810040400	Washer, Lock 1/4
30	873220400	Nut, Hex, Fin. 1/4-20 UNC
31	532004152	Bulb, Light
32	532142881	Harness, Light
33	532110712	Switch, Light
36	811150400	Washer, Lock, Internal Tooth 1/4
39	532141735	Bracket, Switch Clutch
55	817490508	Screw, Thdrol 5/16-18 x 1/2
70	532140413	Harness, Engine


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

HARDWARE SHOWN LARGER FOR EASIER IDENTIFICATION

REPAIR PARTS


TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00-01

DECALS

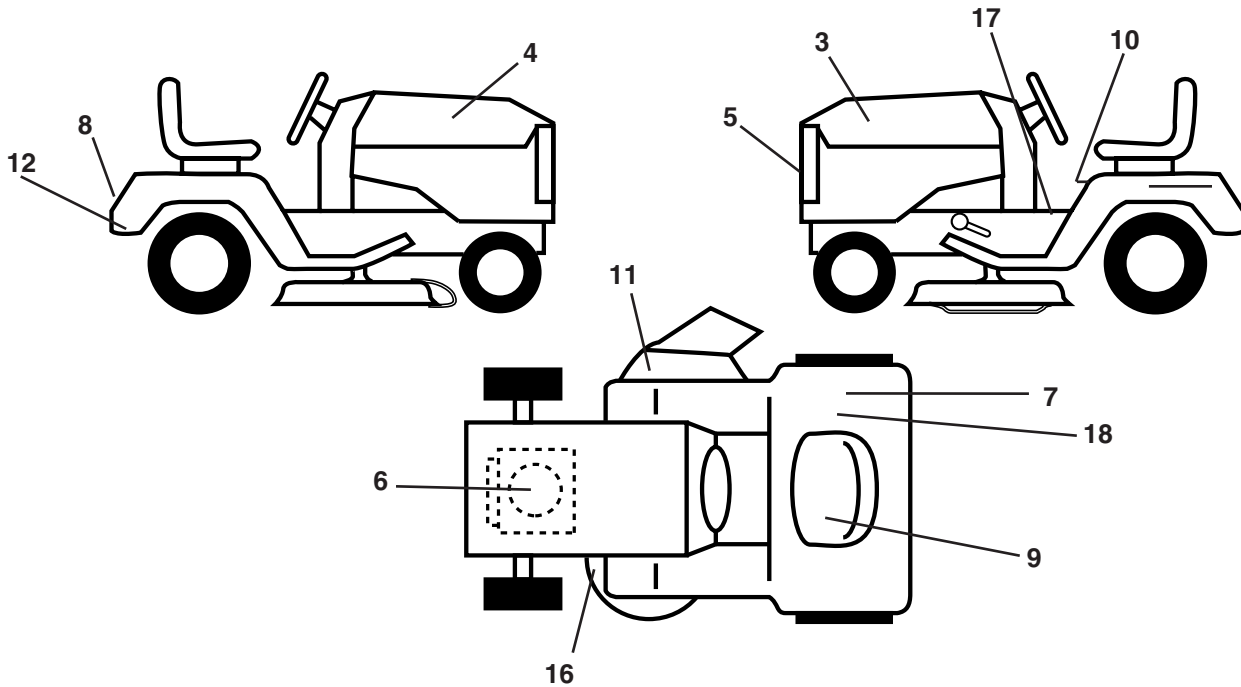

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
3	532151355	Decal, Hood, L. H.	16	532136830	Decal, V-Belt Sch.
4	532151354	Decal, Hood, R. H.	17	532145545	Decal, Oper. Inst., Sym.
5	532150616	Decal, Logo, Grill	18	532145437	Decal, Europ Stand. CE Tractors
6	532273212	Decal, Engine	--	532138311	Decal, Height, Adjust
7	532126187	Decal, 100 DBA	--	532152673	Manual, Operator's (Scan)
8	532150617	Decal, Logo, Fender	--	532152661	Manual, Operator's (Euro)
9	532145005	Decal, Battery Danger/Poison	Accessories not included with tractor:		
10	532145498	Decal, Read Owner's Manual Symbols	--	CE36	Rear Bagger
11	532145494	Decal, Cutfinger	--	Mk360	Mulcher Kit
12	532141484	Decal, Drawbwr Cntrl			

WHEELS & TIRES

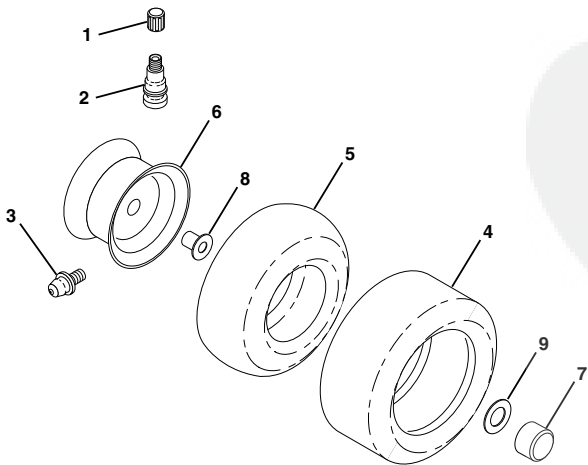


KEY NO.	PART NO.	DESCRIPTION
1	532059192	Cap, Valve
2	532065139	Stem, Valve
3	532124957	Fitting, Grease (Front Wheels Only)
4	532137422	Tire, Front
4	532132703	Tire, Rear
5	532059904	Tube, Front (Optional Service Items Only)
5	532008134	Tube, Rear (Optional Service Items Only)
6	532142039	Rim, Front
6	532141652	Rim, Rear
7	532104757	Cap, Hub, Axle
8	532124959	Bearing, Flange
9	532121748	Washer 25/32 x 1-5/8 x 16 Ga.
--	532144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U. S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR -- MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00-01
TRANSAXLE HYDRO GEAR 310-0500

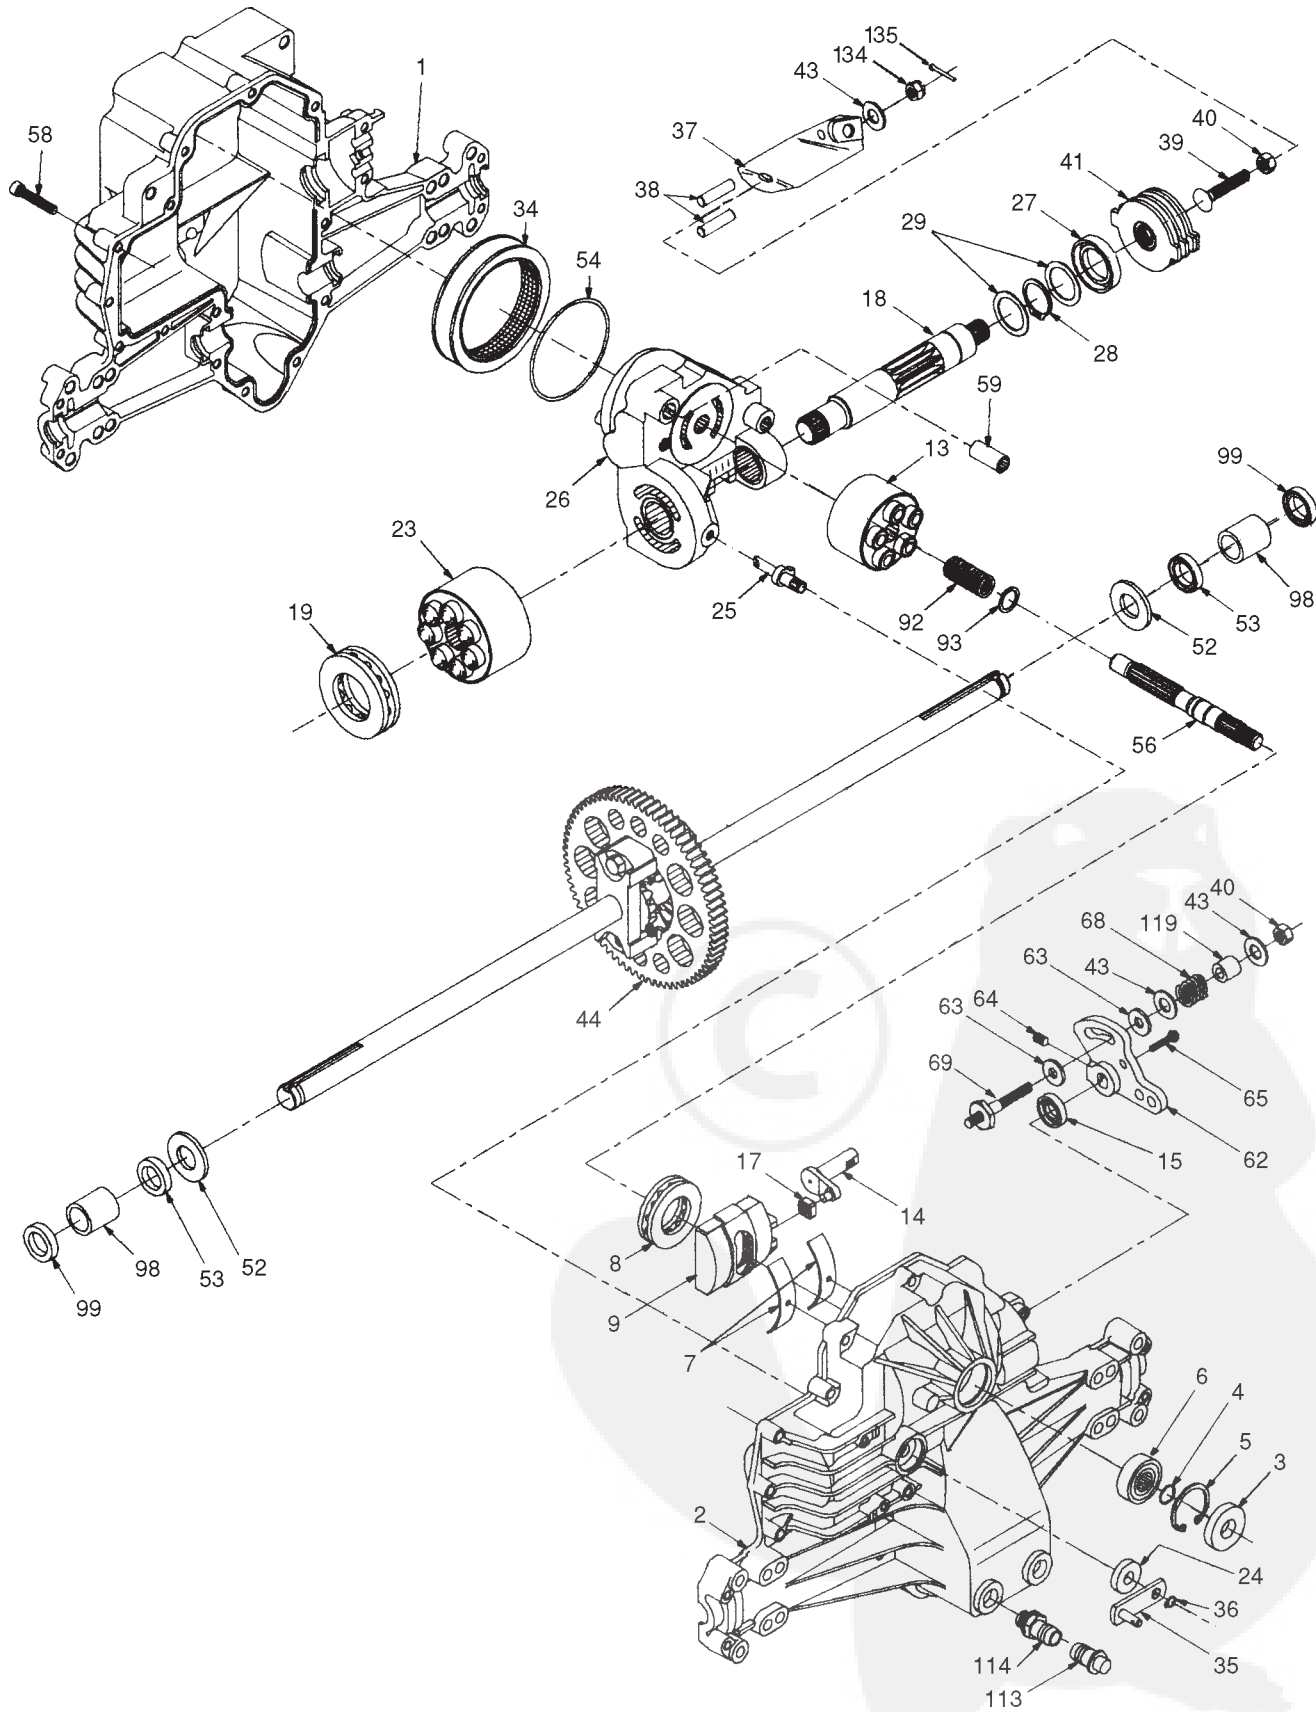

REPAIR PARTS

TRACTOR - - MODEL NO. LTH130 (HE13H36B), PRODUCT NO. 954 82 00-01

TRANSAXLE HYDRO GEAR 310-0500

KEY PART NO. NO.	DESCRIPTION	KEY PART NO. NO.	DESCRIPTION
1 142986	Housing, Lower	40 142957	Locknut, Hex 5/16-24 UNJC
2 142987	Assembly, Upper Housing	41 142958	Brake Rotor/Stator Kit
3 142932	Seal, Lip	43 142884	Washer 7/16 x 7/8 x .060
4 142928	Ring, Wire Retaining	44 142990	Differential Assembly
5 142933	Ring, Retaining	52 142991	Washer 3/4 x 1.5 x .13
6 142934	Bearing, Shaft Ball	53 142961	Seal .75 x 1.25 x .250
7 142935	Bearing, Cradle	54 142962	O-Ring .103 x 2.987 ID
8 142936	Bearing, Thrust 30 x 52 x 13	56 142963	Shaft, Input
9 142937	Swashplate, Variable	58 142964	Bolt 1/4-20 x 1.38
13 142938	Block, Cylinder Assembly	59 142965	Pin .5 OD x .43 ID x .750
14 142939	Arm, Trunnion	62 142966	Arm, Control
15 142940	Seal, Lip	63 142967	Puck, Dampener
17 142941	Guide, Slot	64 142920	Set Screw
18 142988	Shaft, Motor	65 142968	Bolt #8-32 x .875
19 142943	Bearing, Thrust 42 x 68 x 16	68 142969	Spring
23 142944	Block, Cylinder Assembly	69 144610	Stud 5/16-24
24 142945	Seal, Lip 10 x 25 x 7	92 142977	Spring, Block
25 142946	Actuator, Bypass	93 142978	Washer, Block Thrust
26 142947	Center Section Assembly Kit	98 142993	Sleeve Bearing
27 142948	Seal, Lip 26 x 42 x 8	99 142976	Seal, Wiper
28 142949	Ring, Retaining	113 142917	Cap, Vent Assembly
29 142950	Washer 26 x 35 x 1	114 142918	Fitting, O-Ring Assembly
34 142951	Oil Filter Element	119 142980	Spacer
35 142952	Arm, Bypass	134 144607	Nut, Castle 5/16-24
36 142953	Ring, Retaining	135 144608	Pin, Cotter
37 142954	Arm, Actuating		
38 142955	Pin, Actuating		
39 142956	Bolt 5/16-24 x 1-3/4		

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

